


THANKO

Version1.00 y

Operating Instructions

Model number: GRKN25CBK

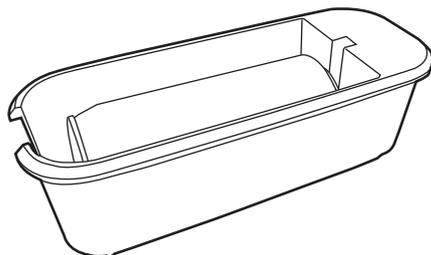

Warranty Period: 6 months from the date of purchase

※Delivery notes, receipts, etc. will serve as warranty cards.

SAFETY PRECAUTIONS

Please be sure to follow these precautions: Please read the "Safety Precautions" carefully before use and be sure to follow them.

※The items shown here are intended to ensure the safe and correct use of the product, and to prevent injury to the user or other people, as well as damage to property. In addition, to clearly indicate the magnitude and urgency of the hazard or damage, the items that are expected to occur if the product is handled incorrectly are divided into two categories: "Warning" and "Caution." Both are important safety information, so please be sure to follow them. Please keep this instruction manual in a safe place so that the user can refer to it at any time.

WARNING This indicates that ignoring this warning and handling the product incorrectly may result in death or serious injury.

- Do not immerse or pour water on the unit. (Risk of short circuit or electric shock)
- Do not modify or disassemble. Only authorized repair technicians should disassemble or repair the unit. (Risk of fire or injury)
- Do not allow children or inexperienced persons to use the unit, and do not use or store the unit within reach of infants or young children. (Risk of accident or injury)
- Do not place fingers or any part of the body near the rotating suction cup or motor's range of motion. (Risk of injury)
- If an abnormality occurs with the unit, immediately discontinue use. (Continued use of the product while a malfunction is occurring may result in smoke, fire, short circuit, or injury.)
- If the product becomes unusually hot, gives off a burning smell, makes strange noises, or does not function properly, immediately stop using the product, turn off the power, and contact your retailer or customer service center.
- Do not use or store the unit in the following locations:
 - 1) Outdoors or near a window, or in places exposed to direct sunlight;
 - 2) In places exposed to strong light;
 - 3) In places subject to excessively high temperatures;
 - 4) In high humidity;
 - 5) In places exposed to oily smoke (Risk of fire, or malfunction)

NOTE This indicates that failure to follow this caution and improper handling could result in injury to persons or damage to property.

- Do not drop or bump the device. (This may cause electric shock, fire, malfunction, or damage.)
- Do not apply strong vibrations, impacts, or excessive force. (This may cause damage or injury.)
- Do not use organic solvents (benzine, thinner, petroleum, etc.), chemicals (bleach, disinfectant, etc.), or abrasives when cleaning. (This may cause deformation, discoloration, or malfunction.)
- Turn off the power when cleaning or when not using the device for an extended period of time. (This may cause electric shock or malfunction.)
- Use only indoors. (This may cause malfunction.)
- Do not insert metal objects or foreign objects such as pins or wires into the device's internal openings. (This may cause malfunction.)
- Always use the included USB cable. (This may cause malfunction, overheating, or fire.)
- Do not use the device for purposes other than its intended use or in accordance with the instructions in the instruction manual. (This may cause injury or malfunction.)
- Install the device on a level, flat, and sturdy surface. (This may cause tipping.)
- Always clean the device after using salt. (This may cause malfunction.)
- Do not pour beverages directly into the container. (This may cause malfunction or electric shock.)

Please be sure to follow these rules

Regarding USB plugs and cords

- Do not replace, damage, modify, place near heat sources, forcibly bend, twist, pull, place heavy objects on, or bundle the USB plug or USB cable.
- Never replace, disassemble, repair, or modify a damaged USB plug or USB cable.
- If the USB plug or USB cable becomes damaged, discontinue use immediately.
- Make sure to insert the USB plug all the way in, and do not use a damaged USB plug or USB cable.
- Do not plug in or unplug the USB plug with wet hands.
- Do not leave the USB plug plugged in except when charging.
- Do not pull on the USB cable when carrying or storing it.
- Do not pinch the USB cable in devices.
- Regularly check that there is no dust on the main unit and USB plug.
- Do not use if the USB plug or USB cable is loose.
- When plugging or unplugging the USB plug, hold the tip, do not pull on the USB cable.

※If the USB plug or USB cable becomes abnormally hot or emits smoke or an unusual odor, stop using it immediately.

SPECIFICATIONS

Size	Width: 263mm x Depth: 103mm x Height: 88mm
Weight	about 240g
Power supply	USB 5V 1.0A or higher
Compatible Can size	up to 500mL
Cable length	about 920mm
Material	ABS
Set Contents	Main unit, two suction cups (one pre-installed), USB Type-C cable, and Instruction manual
Warranty period	Valid for 6 months from the date of purchase

Usage Guidelines

- ※Items other than those listed are not included.
- ※Damage to items caused by using this product is not covered by the support warranty.
- ※If you notice any abnormalities, stop using the product immediately and contact the support center.
- ※Failures, damage, modifications, etc. caused by customer negligence are not covered by the support warranty.
- ※We cannot be held responsible for accidents caused by incorrect use.
- ※The copyright of this document belongs to our company, and unauthorized reproduction of all or part of the contents is prohibited.
- ※Specifications may be changed without notice for improvement purposes.

SUPPORT CENTER INFORMATION

If you would like to inquire or request repairs


Visit <https://www.thanko.jp/view/page/support> and contact us via the support page.

You can access the support page by scanning the QR code below.



• SET CONTENTS AND PART NAMES

Please check that all contents are included before use.

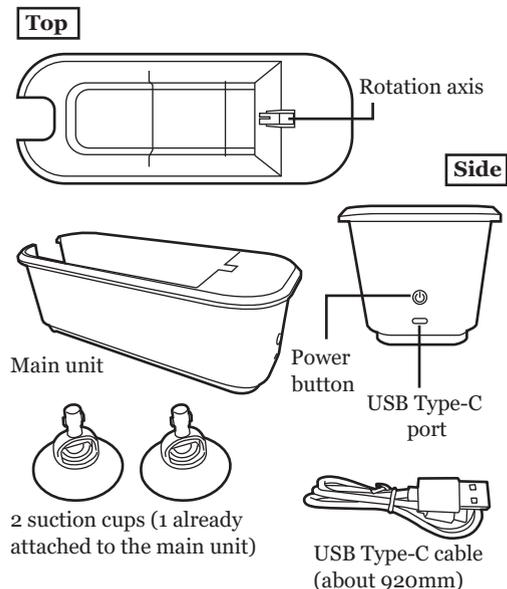

※Please prepare ice separately. For efficient cooling, please prepare salt.

• HOW TO USE

1) Prepare ice and place it inside the unit.




Try to place the ice so that it touches the can as much as possible.

If you want to cool more efficiently, sprinkle salt on the ice.


- ※Do not use anything other than regular table salt.
- ※If there is too much ice, it may not rotate properly.
- ※Be careful of water leaks.

• CAN SET


1) Pull the suction cup off the rotating shaft of the main unit to remove it.

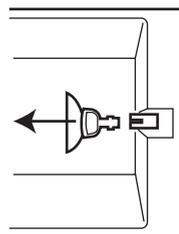

2) Attach the suction cup to the bottom of the can. Make sure it is firmly attached so that it does not come off. If there are any protrusions on the bottom, it may not attach properly.

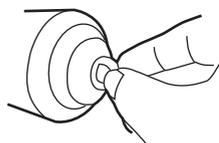


3) Return the suction cup to the rotating shaft of the main body. Fit the protrusion of the suction cup into the groove of the rotating shaft.

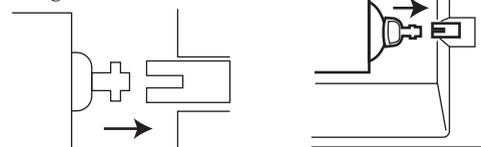

You can place 500ml cans (up to about 85mm in diameter x 180mm in height).

You can also place glass bottled drinks. Please note that you cannot place containers that do not have suction cups, such as plastic bottles.

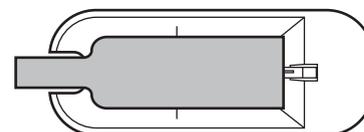

Please set bottled beer etc. as shown in the diagram above.

• MAINTENANCE

⚠ Before cleaning, turn off the power and disconnect the USB cable.


Discard the ice inside and thoroughly wipe off any moisture with a dry cloth. If the stain is severe, apply diluted neutral detergent to a soft cloth, wring it out tightly, and wipe the stain. Then, wring out the cloth again soaked in water and wipe the stain away to remove any remaining detergent.

Wipe the stain away with a dry, soft cloth to remove any remaining moisture.


※If you used table salt, wring out a cloth soaked in water before wiping the stain, and then wipe off any water droplets with a dry cloth.

⚠ Do not use benzene, thinner, bleach, scouring powder, alkaline detergent, metal scouring pads, or hard sponges (these may damage the surface). Do not immerse the unit in water. This product cannot be disassembled or washed.

2) Insert the included USB cable into the USB Type-C port. Connect the other end of the USB cable to a USB-AC adapter (sold separately) or mobile battery (sold separately). The power button will light up red.

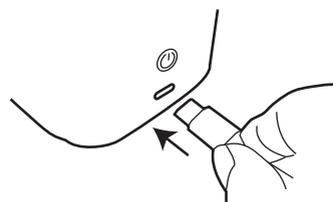

3) When you press the power button, the power button will light up green and the can will rotate.

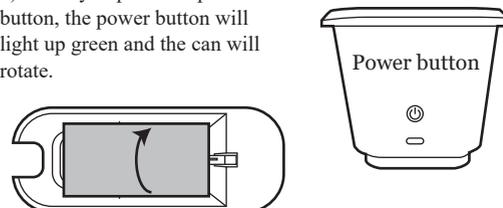

4) This product does not shut off automatically. Once the desired temperature is reached, press the power button to stop the rotation and remove the can and suction cup from the rotating shaft.

⚠ If rotation stops

If you apply too much pressure to the can or bottle being cooled by the rotating cooler, the rotation will stop for safety reasons and the power button will flash red. If this happens, remove the object that is causing a load on the rotating mechanism and press the power button again. The button will then light up green and the cooler will start working again.