


# Operating Instructions

Model number: TKFA25SGY, TKFA25SBL

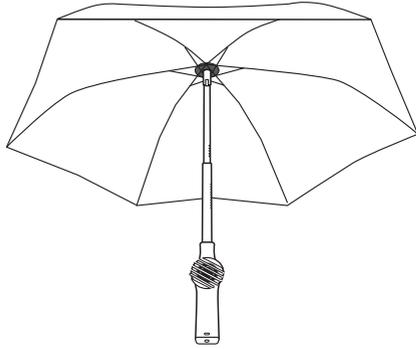

Warranty period: 12 months from date of purchase

※ The delivery note, receipt, etc. will serve as a warranty.

## Safety Precautions

Please be sure to follow these rules

This manual explains the precautions you must take to prevent injury to yourself or others, and damage to property. Please read this instruction manual carefully and fully understand it before using the product.

### • Display Explanation

**WARNING** This indicates that improper handling may result in death or serious injury.

**NOTE** This indicates that improper handling may result in injury or property damage.

### • Cautions you must observe:

-  Indicates prohibition (things that must not be done).
-  Indicates compulsory actions (things that must be done).

- Please be sure to observe the "Safety Precautions" to prevent accidents such as fire, electric shock, and injury.
- Please read all of these "Safety Precautions" carefully before use and use the product correctly.
- After reading, be sure to keep it in a place where the user can see it at any time.
- If you lend the product to someone else, please give them the instruction manual as well.

## NOTE

### • Usage

-  **To prevent damage to the electrical components in the handle, do not use in heavy rain.** (Cause of short circuit, electric shock, breakdown and injury)
  - The umbrella fabric is waterproof and water-repellent, but in heavy rain or during prolonged rainfall, rainwater may seep in through the stitching.**
  - Do not drop the product or subject it to strong shock or vibration (this may cause damage or injury).
  - Be careful not to get accessories caught in the machine (this may cause accidents or injuries).
  - If the battery is not fully charged within the specified charging time, stop charging (battery life. Stop using the battery).
  - Do not insert fingers or foreign objects inside the air intake guard (this may cause injury).
  - Do not place hair near the air intake. (Hair may get caught and cause injury).
  - Do not use in strong winds (risk of damage).
  - Due to the structure, the bones are narrow, so do not insert your hands or fingers. (Accidents and injuries may occur).
  - When opening the umbrella, loosen the fabric thoroughly and open it slowly. (This may cause the ribs to break.)
- 
-  **When carrying the device in a bag, etc., be careful not to turn it on (this may cause damage or malfunction).**
  - Be careful when handling the battery during and after charging.
  - If you experience any abnormalities in your body while using this product, discontinue use immediately (it may be harmful to your health).

### • Storage

- Do not place in locations subject to high temperatures such as heating appliances or extremely cold temperatures.
- Do not place near water or in humid locations.
- Do not place in direct sunlight.
- Do not place in a humid location.
- Do not place in a location subject to vibration.
- Keep out of reach of children.

### • Regarding the handling of USB cables

- Do not replace, damage, or modify the USB plug or USB cable. Do not place it near heat sources, bend it forcibly, twist it, pull it, place heavy objects on it, or bundle it.
- Never replace, disassemble, repair or modify a damaged USB plug or USB cable.
- If the USB plug or USB cable is damaged, immediately stop charging or using the device.
- Make sure to insert the USB plug all the way in and do not use damaged USB plugs or USB cables.
- Do not insert or remove the USB plug with wet hands.
- Do not pull on the USB cable when carrying or storing the device.
- Do not pinch the USB cable between devices, and do not charge or use the device while the USB cable is pulled.
- Regularly check that there is no dust on the main unit and USB plug.
- If the USB plug or USB cable becomes abnormally hot or emits smoke or an unusual odor while charging or using the device, immediately stop charging or using the device.

## WARNING

### • Usage

-  Do not modify, disassemble or remove the internal battery. (This may cause fire or electric shock).
  - Do not use or store the product within reach of small children or pets. (This may cause accidents or injuries).
  - Do not pour water on it, or touch it with wet hands. (This may cause short circuits or electric shock).
  - Do not insert metal objects or foreign objects such as pins or wires into the gaps in the main unit or USB port. (This may cause fire, electric shock, or injuries).
  - Do not block the air intake vent. (This may cause malfunction, fire, or fire).
  - Do not use, charge, or store the product in places where the temperature is high, such as inside a car under the hot sun or next to a heating appliance. (This may cause deformation, malfunction, burns, or fire).
  - Do not use the product in the following locations. Near flames such as gas ranges, in places where flammable gases are present, in places where water may splash on the handles, in places with high temperatures, high humidity or lots of dust (This can cause fires and accidents).
  - Do not charge on paper such as cardboard, fabrics such as cushions, tatami mats, carpets, vinyl, etc (This can cause fires, ignitions and breakdowns).
  - Do not charge with any power source other than the one marked with the rated rating (This can cause electric shock, leakage and fires).
- 
-  Do not use transformers such as step-ups or charge with DC power sources or engine generators. (This may cause electric shock, short circuits, or fires).
  - Turn off the power after use (This may cause fires or malfunctions).
  - Do not use organic solvents (benzine, paint thinner, petroleum, etc.), chemicals (bleach, disinfectants, etc.), or abrasives when cleaning (This may cause deterioration, electric shock, or fires).
  - Do not use on pets other than people (This may cause damage or accidents).
  - Do not attach to equipment that secures the umbrella to a bicycle, stroller, etc. (This may cause accidents or damage).
  - Do not use as a walking stick or for any other purpose than the umbrella's intended purpose. (This may cause injury or accidents).
  - Do not use for any purpose other than that described in the instruction manual.
- 
-  The product has sharp parts. Always check the surroundings for safety before using. (Risk of injury)
  - Stop using the product immediately if there is an abnormality or malfunction. (If there is an abnormal sound or smell of burning, if the main unit or operation part becomes abnormally hot, if the power is turned on or off when the USB cable is moved, or if you notice any other abnormality, contact the support center immediately.)
  - Always turn off the power before cleaning. (Cause of short circuit, electric shock, or malfunction)

## NOTE

### • Battery charging and storage

- The built-in battery will naturally discharge even if it is charged and stored, so be sure to charge it immediately before or the day before use.
- When charging, make sure the surrounding temperature is between 10°C and 30°C (a temperature that humans find comfortable).
- The lower the temperature, the harder it is to charge and the more the built-in battery wears out. Also, high temperatures make it difficult to charge the device.
- The built-in battery may become warm while charging or in use, but this is not a malfunction.
- When storing the battery, keep it at approximately 50% charge.
- The built-in battery will naturally discharge, so if you store it in a fully discharged state, it may become unusable.
- Do not store the battery in high temperature conditions, over-discharge (when the battery is completely used up), or over-charge (when the battery is still connected to the charger even when fully charged).
- Be sure to use it at least once every six months to prevent wear and tear.
- Store in a dry place between 10°C and 35°C.
- Before charging, check that there is no moisture, metal, or other foreign objects in the USB port.
- Do not use batteries whose usage time has become extremely short.
- Do not use a battery that has been dropped or damaged in any way.
- This product has a charge/discharge cycle of approximately 300 times. When the operating time becomes shorter or the charge runs out quickly, the battery has reached the end of its life.

### • Battery recycling




Li-ion

This product contains a built-in lithium-ion battery. This battery is a valuable, recyclable resource. When disposing of or recycling a used product, please follow the instructions of your local government.

- ※ Damage to property caused by the use of this product is not covered by the warranty.
- ※ If you notice any abnormalities, please stop using the product and contact customer support.
- ※ Any malfunctions, damage, modifications, etc. caused by customer negligence during use are not covered by the support warranty.
- ※ We are not responsible for any accidents that occur if the product is not used properly.
- ※ Specifications may be changed without notice for improvement purposes.
- ※ The copyright of this document belongs to our company, and reproduction of all or part of its contents without permission is prohibited.

## • CONTENTS/NAMES OF EACH PART

### Main unit

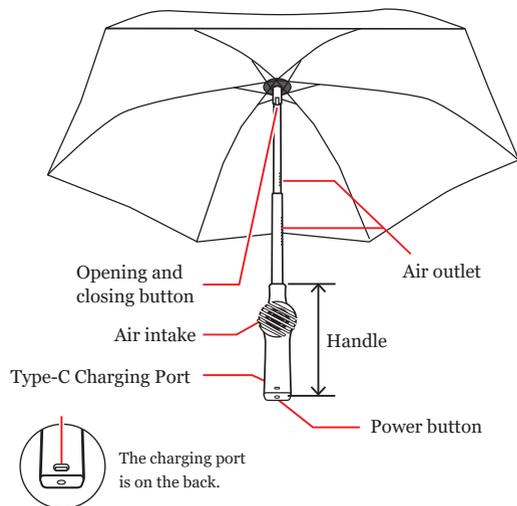

### Accessories

- Storage bag
- USB Type-C cable

## • CARE INSTRUCTIONS

- After use, open the umbrella and dry it thoroughly in the shade before using it again. (This can cause a decrease in waterproof and water-repellent properties, discoloration of the fabric, and rust).
- Leaving water droplets or sweat on the frame or handle can cause rust and malfunction. Gently wipe the surface with a dry cloth.
- If you are concerned about dust or debris on the intake fan or guard, remove it with an air duster or similar. This can reduce the airflow.

※The waterproof and water-repellent properties of the umbrella fabric will inevitably deteriorate with frequent use. We recommend reinforcing the properties with a commercially available water-repellent spray.




※This product is not waterproof. Please do not immerse it in water or wash it.

※Do not use organic solvents (benzene, paint thinner, petroleum, etc.), chemicals (bleach, disinfectant, etc.), or abrasives as they may cause discoloration or damage.

## • HOW TO USE

### 1) Charge

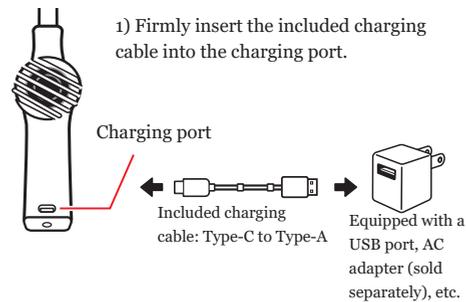

2) Plug the AC adapter into a power outlet and connect the USB terminal of the charging cable to the AC adapter to charge. (2A or higher is recommended.)

- ※The LED on the power button will flash while charging and will turn solid when fully charged.
- ※AC adapter is not included.


## • SPECIFICATIONS

Size	When stored: Width: 65mm; Depth: 55mm; Height: 360mm When in use: Diameter: about 103cm; Height: 69cm Rib length: about 55cm
Weight	about 340g
Cable length	about 60cm
Power supply	Charged via USB (USB5V2A)
Battery	3.7V 2600mAh lithium-ion battery
Material	Ribs: Aluminum; Fabric: Polyester; Handle: PC+ABS
Charging time	about 4.5 hours
Drive time	about 3.5 hours
Airflow adjustment	None
Contents	Body, storage bag, USB type-C cable, Instruction manual
Warranty period	12 months from date of purchase

※Specifications are subject to change without notice.


### 2) Use

1) While pressing the open/close button, push the umbrella upwards until you hear a click.

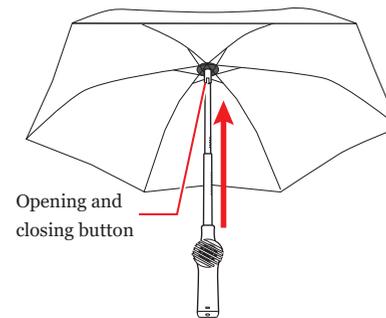

- ※If you have long hair, please make sure to tie it up.
- ※Do not insert your fingers or any other object into the air intake, as this may result in injury or damage.

2) When you press the power button, air is taken in through the air intake and blown out through the air outlet.

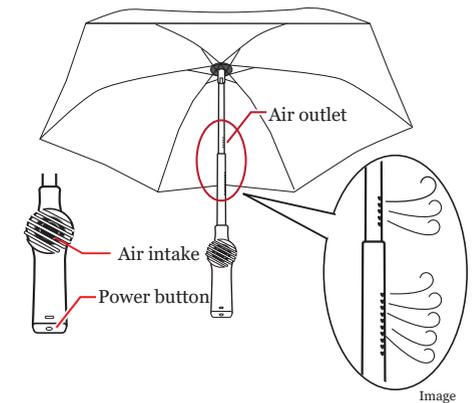

If you charge the device using a mobile battery (sold separately) that can output 2A or more, you can use the device while charging the built-in battery.

## • IF YOU THINK IT MIGHT BE BROKEN?

- If you would like to contact us or request a repair



Please visit <https://www.thanko.jp/view/page/support> and contact us via the support page. You can also access it by scanning the QR code on the left.