



毎日の暮らしに『ちょっと良いモノ』を
『A little good thing』for everyday life

何気なく過ぎていく毎日だから
Because every day passes casually

昨日よりも『ちょっと良い1日』であるように。。。
May it be a 『slightly better day』 than yesterday...

Yoitas 公式ストア
<https://www.yoitas.com>

Operated by Axis Truss Co., Ltd.
1-12-3 Shinjuku, Shinjuku-ku, Tokyo 160-0022

<http://axis-truss.co.jp>



The Cordless Humidifier コードレス加湿器 H1-4C

取扱説明書
Instruction Manual



この度は The Cordless Humidifier をお買い上げいただきまして
誠にありがとうございます。
ご使用前に取扱説明書をよくお読みになり、保管してください。

はじめに

この度は数ある商品の中から『The Cordless Humidifier』を
ご購入いただきまして誠にありがとうございます。

Yoitasを運営しております
株式会社アクシストラス代表取締役 早乙女翔一と申します。

『Yoitas(ヨイタス)』は
空間快適化 日本ブランドとして
様々な生活空間の問題に向き合い
お客様、ご家族やご友人、大切な人を
少しでも快適に健康に過ごせるように

何気なく過ぎていく毎日だから
昨日よりも「ちょっと良い1日」であるように
「ちょっと良いモノ」を本気で作っているブランドです。

まだまだ小さなブランドではございますが、
Yoitasスタッフ一同一丸となって
多くのお客様のご期待とご意見に添えるような
商品を開発してまいります。

今後ともYoitasを引き続き宜しくお願いいたします。

目次

安全上の注意	1
各部の名称	2
ご使用前に	3
給水方法	4
ご使用方法	5
充電方法	7
お手入れ方法	8,9
保証規定	10
保証書	11
製品仕様	11
Yoitas公式アカウント	12
English	13~22


安全上の注意

- ご購入後、充電をしてからご使用ください。
- 製品の破損や漏電を防ぐため、製品を直接水に浸したり、丸洗いしないでください。
- 自然発火の恐れがあるので、炎天下や高温環境下に置かないでください。
- 長時間使用しないと電池の劣化・破損の恐れがありますので、3ヶ月に1度の充電をお勧めします。
- 異常時(異臭、発煙など)は、必ず電源を切り、使用を停止してください。
- 製品のすき間にピンや針などの金属物等、異物を入れないでください。
- お手入れをする場合は、ベンジンやシンナー、アルコールなどの揮発性有機溶剤が含まれているものは使用しないでください。変色や変形、故障の原因となります。
- 製品をホットプレートやラジエーター等の熱源の上や近くに置かないでください。
- 運転中や保管中の製品の上に物を置かないでください。電氣的、または機械的機能の修理、または調整をしないでください。これを行うと保証が無効になります。
- すべての故障または修理についてはお客様サポート窓口にお問い合わせください。
- お風呂やシャワー、プールの近くでは使用しないでください。
- 子供だけで使わせたり、乳幼児の手の届く場所で使用しないでください。また、本体に触らせしないでください。
- 濡れた手でUSBコードを抜き差ししないでください。
- お手入れは必ずUSBコードを抜いてから行ってください。
- 不安定な場所に設置して使用しないでください。
- 吹き出し口を塞がないでください。
- タンクの水は、毎日新しい水道水と入替え、吹き出し口はやわらかい布等でお手入れし、常に清潔にしてお使いください。



その他、発熱や異音・異臭等の異常が発生した場合は、直ちに使用を中止し、弊社までご連絡ください。

各部の名称

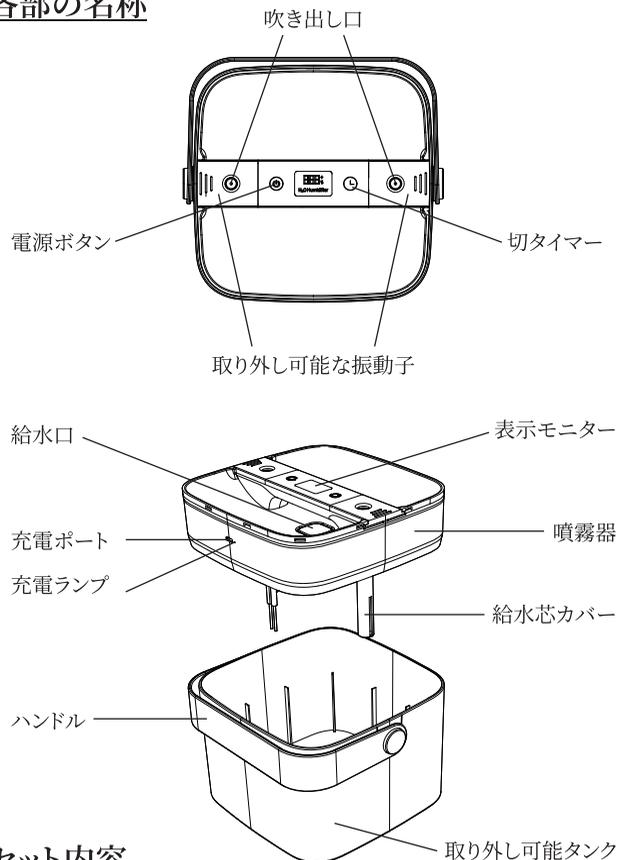

セット内容

本体 × 1 USBケーブル × 1


給水芯 × 4 ※2本取付済、2本付属 取扱説明書 × 1

ご使用前に

初めてご使用するには付属の給水芯を1分間水に浸してからご使用下さい。

給水芯の取り出し方

- ①噴霧器を引っ張り、タンクから外します。
- ②噴霧器を裏に返し、給水芯のカバーを上引っ張り外します。
※バネを失くさないようにご注意ください。
- ③給水芯を取り出します。

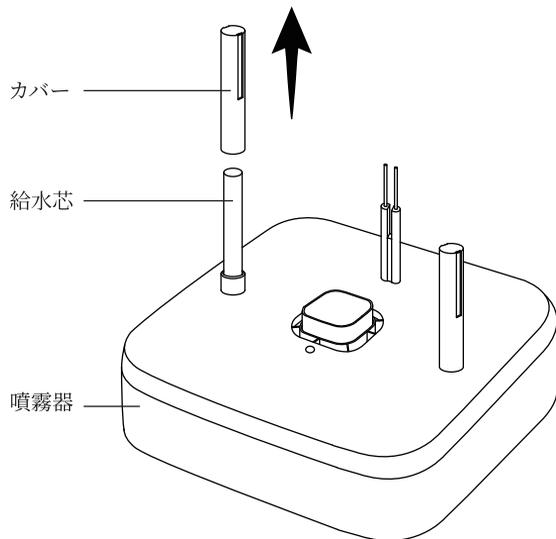

給水方法

水道水をご使用ください。
タンクには約2500mlの水を入れることができます。給水の際はメモリを超えないように注意してください。
※アロマオイルや次亜塩素酸を混ぜて使用することはメーカーとして推奨しておりません。故障やトラブルの責任は一切負いかねますので予めご了承ください。

給水口から水を入れる

凹面に水が溜まらないよう、ゆっくりと水を注ぎます。
給水口から水が溢れないようにご注意ください。


※故障の原因になりますので図の灰色の部分に水がかからないようにご注意ください。



タンクに直接給水する

噴霧器を引っ張り、タンクを外します。
タンク内部にあるメモリの位置まで水を注ぎしっかりと噴霧器を押し込んでから使用してください。

タンクに噴霧器を戻す際には、電源ポートの位置にご確認ください。

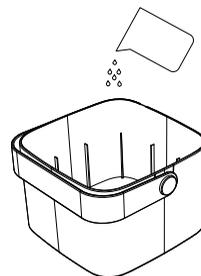

使用方法

オン・オフと動作モード

電源ボタンを1度タッチするごとにミストの動作モードが「左右両方」→「左側のみ」→「右側のみ」→「左右交互」→「電源オフ」の順に変化します。


どの動作モードでも、電源ボタンを長押しすると電源を切ることができます。



※左右均等にミストが出ない場合があります。
次のページ「ミストが出ない・少ないとき」を参照してください。

切タイマー機能

電源オンの状態で切タイマーボタンを1度タッチするごとに、「1h」→「5h」→「10h」→「設定なし」の順に設定され、表示モニターに各タイマーの数字と電池残量が交互に表示されます。



※切タイマーの残り時間は表示されません。
※設定なしの場合は電池残量が表示されます。

ミストが出ない・少ないとき

- 給水芯を水に浸してください。水の浸透が不十分だと、ミストが出ない・少ない場合があります。給水芯の交換目安は約1ヶ月です。給水芯に十分水が浸透していてもミストが出ない・少ない場合は、給水芯を交換してください。
- 給水芯カバーにバネが付いているかご確認ください。
- 振動子の裏や振動子設置個所の金属部分に水滴や汚れがあると、ミストが出ない・少ない場合があります。綿棒や柔らかいタオルで拭き取ってください。
(9ページの「振動子の取り外し方」を参考に取り外してください。)
- 水量が不十分だと自動停止機能が作動し、動作を停止します。タンク内に十分水があることを確認してください。
- 本製品の充電ができていないかご確認ください。

加湿器周辺に白い粉が付着したとき

ミストが蒸発した後の加湿器や、周辺に白い粉状の物が残ることがあります。この白い粉状の物は水道水に含まれるカルシウムなどのミネラル分が固形化したもので、機器の不具合ではありません。加湿器周辺に電気製品、精密機器（パソコン等）、家具等に付着すると、故障の原因や家具を傷める原因になることがあります。

白い粉が付着した際には、すぐに水で濡らした柔らかいタオル等を良く絞って拭き取ってください。


自動停止機能

本製品は給水タンクの水が少なくなると自動停止する機能があります。タンクに水がない場合には加湿器が自動停止し、電子部品へ負荷や故障を防ぎます。

充電方法

付属品のUSBケーブルを使用して充電をしてください。
Type-C部分を本体背面の充電ポートに接続し、Type-A部分をパソコン等のUSBポート、または市販のUSB出力付きACアダプタと接続して充電します。

バッテリー残量表示部分

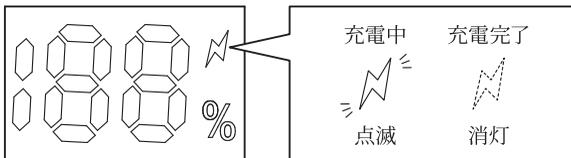

充電ランプの動作

充電中	充電完了
赤色点滅	赤色点灯

- ※ ACアダプタは本製品に付属していません。
- ※ ACアダプタを使用する場合5V/1.5A以上のものご使用ください。
- ※ 給電と同時に通信をおこなう機器では給電できない場合があります。
- ※ USB機器によっては、電力供給が弱く充電時間が長くなる場合があります。

お手入れ方法

お手入れの際には必ず電源を切った状態で行ってください。

本体

乾いたタオルや柔らかい布で軽く拭いてください。汚れがひどい場合は、ぬるま湯でうすめた台所用中性洗剤を布に含ませ、固くしぼって拭いてから、乾いた布で拭き取ってください。

タンク

タンク内部を水ですすぎ洗いしてから、タオルや柔らかい布で拭いてください。水アカが取れにくい場合は、台所用中性洗剤を溶かしたぬるま湯を入れふるって洗い、その後よくすすいでください。

※使用期間中はタンク内部を常に清潔にし、毎日新しい水と入れ換えてください。

給水芯

長期間使用しない場合は、完全乾燥させてから保管してください。1ヶ月に1回を目安に給水芯を交換してください。給水芯の追加購入はYoitas公式ストアにてご購入ください。

※濡れたまま保管すると、カビや雑菌の繁殖の原因になります。
※給水芯を取り出すときはバネを失くさないようご注意ください。

振動子


水で湿らせた綿棒等で振動子の表面の汚れを拭き取ってください。

※故障の原因になりますので、強くこすらないでください。
※振動子周辺に変色した付着物や白い付着物が点くことがあります。
この付着物はカルシウム等のミネラルが水アカとなって付着したものです。機器の不具合ではありません。
水アカは放置すると固着して取れなくなり、故障の原因になります。
1週間に1度、必ずお手入れをしてください。

保証規定

振動子の取り出し方

- ① 振動子のフタを外側にスライドさせ、フタを取り外します。
- ② フタを取り、振動子を取り出します。
※振動子が勢いよく飛び出すことがあるのでご注意ください。
※給水芯の下部にあるパネを失くさないようご注意ください。

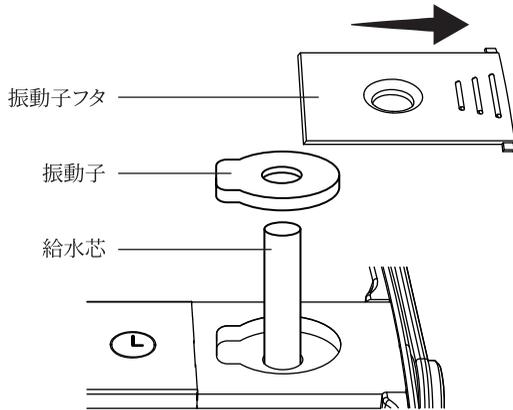

※ フタをスライドする際にはタンクから噴霧器を少し浮かせた状態で行ってください。


※ フタの着脱は固めとなっております。フタを取り外す際にはご注意ください。(水漏れを防ぐための仕様ですので不良品ではありません。)

1. 本製品の保証期間は製品お買い上げ日から6ヶ月間です。保証期間内に正常な使用状態でご利用の場合に限り品質を保証しております。万一保証期間内で故障がありました場合は、弊社所定の方法で無償修理致します。お困りの場合は、メールやLINEで販売店までお問い合わせください。
2. 次のような場合は保証期間内でも有償修理となります。
(1)保証書をご提示いただけない場合。(2)所定の項目をご記入いただけない場合、あるいは字句を書き換えられた場合。(3)故障の原因が取扱い上の不注意による場合。(4)故障の原因がお客様による輸送・移動中の衝撃による場合。(5)天変地異、ならびに公害や異常電圧その他の外部要因による故障及び損傷の場合。(6)譲渡や中古販売・オークション・転売などでご購入された場合。(7)一般家庭以外(例えば業務用など)にご使用の場合の故障および損傷。(8)ご使用後のキズ、変色、汚れ、及び保管上の不備による損傷。(9)消耗部品の交換。
3. お客様ご自身による改造または修理があったと判断された場合は、保証期間内での修理もお受けいたしかねます。
4. 本製品の故障、またはその使用によって生じた直接、間接の損害については弊社はその責を負わないものとします。
5. 本製品を使用中に発生したデータやプログラムの消失、または破損についての保証はいたしかねます。
6. 本製品は医療機器、原子力設備や機器、航空宇宙機器、輸送設備や機器などの人命に関わる設備や機器、及び高度な信頼性を必要とする設備や機器やシステムなどへの組み込みや使用は意図されておりません。これらへの用途に本製品を使用され、人身事故、社会的障害などが生じても弊社はいかなる責任も負いかねます。
7. 保証書は再発行いたしませんので、大切に保管してください。
8. 保証書は日本国内においてのみ有効です。
9. Yoitas公式アカウントを登録するだけで、本製品の保証期間を製品お買い上げから1年間に延長させていただきます。ただし登録を継続していただくことが条件とさせていただきます。


製品仕様

商品名	The Cordless Humidifier	バッテリー容量	4000mAh
型番	H1-4C	充電時間	約3.5時間
サイズ	約209*192*211mm	連続稼働時間	シングル 約8時間(最大)
重量	約800g		ダブル 約3.5時間(最大)
タンク容量	約2.5L	加湿量	シングル 約50-60mL/H
入力電圧 / 電流	DC5V / 1.5A(±20%)		ダブル 約90-120mL/H
動作電流	600 - 1000 mA (±20%)	水容量使用時間	シングル 約50時間(満水時)
動作電力	2.5 - 4.2W(±10%)		ダブル 約25時間(満水時)

Yoitas公式アカウント

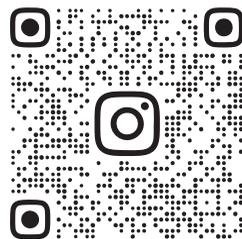

 公式Instagram

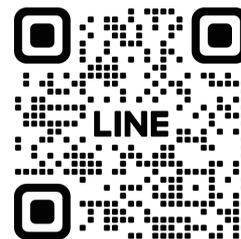

 公式LINE

輸入販売元 株式会社アクシストラス
〒150-0001 東京都渋谷区神宮前3-42-6 3階

お客様サポート窓口

✉ customer@axis-truss.co.jp

営業時間 平日11時~17時(土日祝除く)

ご対応時間外の場合には翌営業日にお客様担当スタッフよりご連絡させていただきます。

当製品および当説明書等は商品改良のために予告なく変更することがありますので予めご了承ください。

Introduction

Thank you for purchasing 「The Cordless Humidifier」
from many products.

My name is Shoichi Saotome,
CEO of Axis Trust Co., Ltd who operate 「Yoitas」

「Yoitas」 as a Japanese brand
for space comfort facing various living space matters
So that your customers, family and friends, loved ones
can live comfortable and healthy

Because every day passes casually
To be a "slightly better day" than yesterday
This is a brand that seriously making 「A little good thing」.

Even 「Yoitas」 is still a small brand,
All Yoitas staff are stand together
We will develop products continue to
satisfy the expectations and opinions of all customers.

We look forward to your continued support of 「Yoitas」.


Safety precautions

●After purchasing, please charge the product before using it. ●
To prevent damage to the product and leakage of electric power,
do not immerse the product directly in water or wash it
completely. ●Do not leave it on a very hot day or in a high-tem-
perature environment as it may ignite spontaneously. ●If you do
not use it for a long time, the battery may deteriorate or be
damaged, so we recommend charging it once every three
months. ●In the event of an abnormality (offensive odor, smoke,
etc.), be sure to unplug the power plug from the outlet and stop
using it. ●Do not allow foreign objects such as pins and needles
to enter the gaps in the product. ●When cleaning the product, do
not use benzene, thinner, alcohol, or other volatile organic
solvents. It may cause change, deformation, or malfunction. ●
Do not place the product on or near a heat source such as a hot
plate or radiator. ●Do not place anything on the product while it
is in operation or storage. ●Do not repair or adjust electrical or
mechanical functions. ●Doing so will void the warranty. ●
Contact Customer Support for all failures or repairs. ●Do not use
near baths, showers, or pools. ●Do not allow it to be used only by
children or within reach of children. Also, do not touch the main
part. ●Do not connect or disconnect the USB cord with wet
hands. ●Be sure to unplug the USB cord before cleaning. ●Do
not place and use it in an unstable place. ●Do not block the spray
port. ●Replace the water in the tank with fresh tap water every
day, and clean the spray port with a soft cloth and keep it clean at
all times.



In addition, if abnormalities such as fever, abnormal noise, or
odor occur, Please stop using it immediately and contact us.

Name of each part

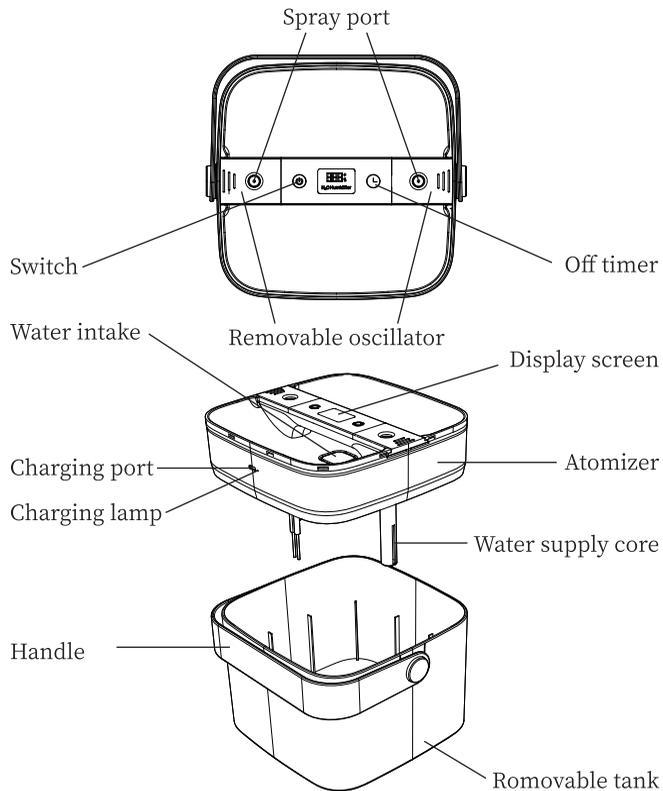

Packing list


main part ×1 spare water supply core ×2
USE cable ×1 instruction manual ×1

Before use

When using for the first time, soak the water supply core in water for one minute before use.

How to take out the water supply core

- ① Pull the atomizer and remove it from the tank
- ② Turn the atomizer over and pull the water supply core cover up to remove it.
※ Be careful not to lose the spring.
- ③ Take out the water supply core.

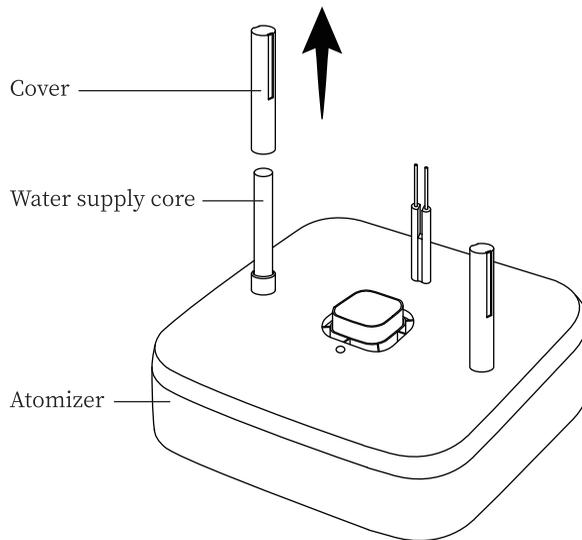

Water supply method

Please use tap water or mineral water.

The water tank can hold 2500ml of water, please do not exceed the standard.

※The manufacturer does not recommend mixing aroma oil or hypochlorous acid. Please note that we are not responsible for any problem or trouble.

Fill water from the water intake

Pour water slowly so that water does not collect on the cover surface. Be careful not to let the water overflow from the water intake.


※Be careful not to pour water in the gray part in the figure as it may damage the machine.



Fill water directly to the tank

Pull the atomizer to remove the tank. Fill water to the memory position inside the tank and push the atomizer firmly before use.

When returning the atomizer to the tank, pay attention to the position of the power port.

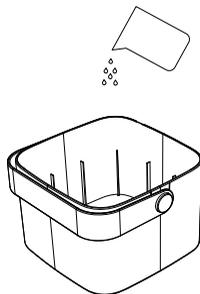


How to use

On • Off and operation mode

Each time you touch the power button, the mist operation mode changes in the order of 「both left and right」→「left side only」→「right side only」→「alternate left and right」→「power off」.


In any operating mode, you can turn off the power by pressing and holding the power button.



- ※ Do not use the product upside down or tilted to avoid damage to electronic originals.
- ※ Please stop using it immediately if the water enters.
- ※ Mist may not be generated evenly on both sides. Please refer to the next page "When the mist does not come out or is weak".

Timer function

Every time you touch the off timer once while the power is on, it is set in the order of 「1h」→「5h」→「10h」→「No setting」, and the number of each timer and the remaining battery level are displayed alternately on the display monitor.

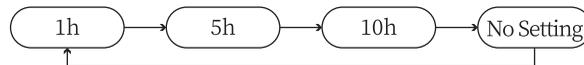

- ※The remaining time of the off timer is not displayed.
- ※If there is no setting, the battery level will be displayed.

When the mist does not come out or is weak

- Immerse the water supply core in the water. Insufficient water penetration may result in no mist.
- If mist does not come out even if the water supply core has sufficiently penetrated, replace the water supply core.
- If there are water droplets or dirt on the back of the vibrator or the metal part where the vibrator is installed, mist may not come out. Wipe it off with a cotton swab or a soft towel.
- If the amount of water is insufficient, the automatic stop function will be activated and the operation will be stopped.
Make sure there is enough water in the tank.
- Please make sure that the product is fully charged.

When the white powder adheres around the humidifier

After the mist evaporates, the humidifier and the surrounding white powder may remain. This white powder is a solidified mineral such as calcium contained in tap water and is not a malfunction of the equipment. If it adheres to electrical appliances, precision equipment (personal computers, etc.), furniture, etc. around the humidifier, it may cause a malfunction or damage the furniture.

If white powder adheres, immediately squeeze a soft towel moistened with water and wipe it off.


Automatic stop function

This product has a function to automatically stop when the water in the water supply tank is low. If there is no water in the tank, the humidifier will automatically stop to prevent loads and failures of electronic components.

Charging method

Please use the included USB cable for charging. Connect the Type-C port of the charging port on the back of the main part, and connect the Type-A port to a USB port of a computer or a commercially available AC adapter with USB output to charge.

Battery level display part

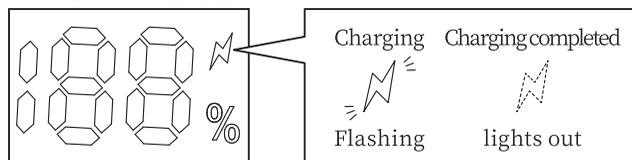

Operation of charging lamp

Charging	Charging completed
Red light flashing	Red light lighting

- ※ The AC adapter is not included with this product.
- ※ When using an AC adapter, please use 5V / 2A or higher.
- ※ It may not be possible to supply power to devices that communicate at the same time as power is supplied.
- ※ Depending on the USB device, the power supply may be weak and the charging time may be long.
- ※ If you do not use it for a long time, the battery may be damaged, so we recommend charging once each 3months.

Care method

Be sure to turn off the power before cleaning.

Main part

Wipe gently with a dry towel or soft cloth.
If it is extremely dirty, soak a cloth in a neutral kitchen detergent diluted with lukewarm water, squeeze it tightly, and then wipe it with a dry cloth.

Tank

Rinse the inside of the tank with water and then wipe it with a towel or soft cloth.
If it is difficult to remove water stains, add lukewarm water where a kitchen neutral detergent is dissolved, rinse and wash, then rinse thoroughly.
※ Always keep the inside of the tank clean while in use and replace it with fresh water each day.

Water supply core


If you do not use it for a long time, dry it completely before storing it.
Replace the water supply core once a month as a guide.
To purchase an additional water supply core, please visit the Yoitas official store.
※ If stored wet, it may cause the growth of mold and germs.
※ Be careful not to lose the spring when removing the water supply core.

Oscillator

Wipe off the dirt on the surface of the vibrator with a cotton swab moistened with water.
※ Do not rub it strongly as it may cause a malfunction.
※ Discolored deposits or white deposits may be spotted around the vibrator. This deposit is a deposit of minerals such as calcium that become water stains. This is not a device malfunction. If left unattended, water stains will stick and cannot be removed, causing a malfunction. Be sure to clean it once a week.

How to take out the oscillator

- ① Slide the cover of the oscillator outward and remove the cover.
- ② Take out the cover and remove the oscillator.
※ Please note that the oscillator may pop out vigorously.
※ Be careful not to lose the spring at the bottom of the water supply core.

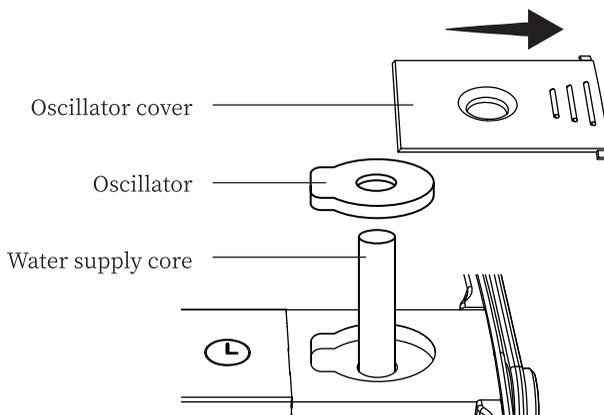

- ※ When sliding the cover, keep the sprayer slightly lifted from the tank.
- ※ The cover is hard to take off. Be careful when removing the cover after sliding. (It is not a defective product because it is a specification to prevent water leakage.)

Product Specifications

Product name	The Cordless Humidifier
Product mode	H1-4C
Product size	209*192*211mm
Product weight	800g
Water tank capacity	2.5L
Input voltafe/current	DC5V / 1.5A(±20%)
Working current	600 - 1000 mA (±20%)
Power	2.5 - 4.2W(±10%)
Battery capacity	4000mAh
Battery charging time	3.5hour
Continous operation time	single 8hour(max) double 3.5hour(max) single 50-60mL/H
Mist spray volume	double 90-120mL/H single 50hour(full)
Water capacity usage time	double 25hour(full)



Customer Support

✉ customer@axis-truss.co.jp

Click here for inquiries and consultations regarding this product
Please contact your email address.

If it is no response time, the next business day
The customer staff will contact you.