

# CRESSI

SINCE 1946



# MICHELANGELO DONATELLO QUICK GUIDE



DOWNLOAD THE COMPLETE  
CRESSI INSTRUCTION MANUAL  
at: [www.cressi.com/manuals](http://www.cressi.com/manuals)

LONG LIFE



BATTERY

HIGH CONTRAST



DISPLAY

HIGH POWER



BACKLIGHT

EASY ACCESS




MENU

MULTI MODE

AIR  
EAN  
GAGE  
FREE

***Cressi reserves the right to make changes to the instrument without notice, based on the incessant technological upgrade of its components.***

## OPERATING BUTTONS

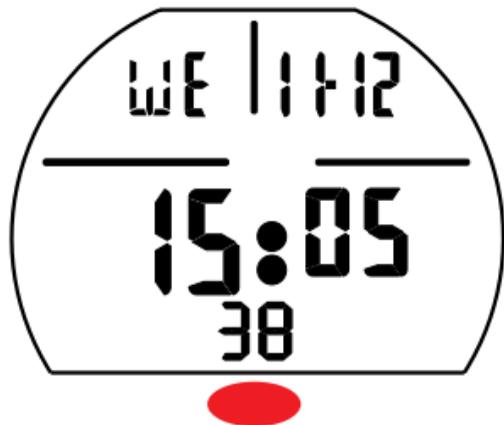

Short

\ **NEXT (ONE STEP)**



Long (1 Sec.) \ **ENTER \ ESC**



Long (3 Sec.) \ **RETURN**

## SWITCH ON

PUSH  TO SWITCH ON THE COMPUTER

### PRE DIVE




### PRE DIVE (DESAT)\*



THE SCREEN SCROLLS AUTOMATICALLY  
EVERY TWO SECONDS

\* In case of desat time, in mode AIR, FREE, GAGE the computer will alternate the pre dive screen to that of desat screen. In case of desat time in mode NITROX the computer will alternate the pre dive screen to that of GAS screen (DONATELLO) or GAS1/2 (MICHELANGELO).



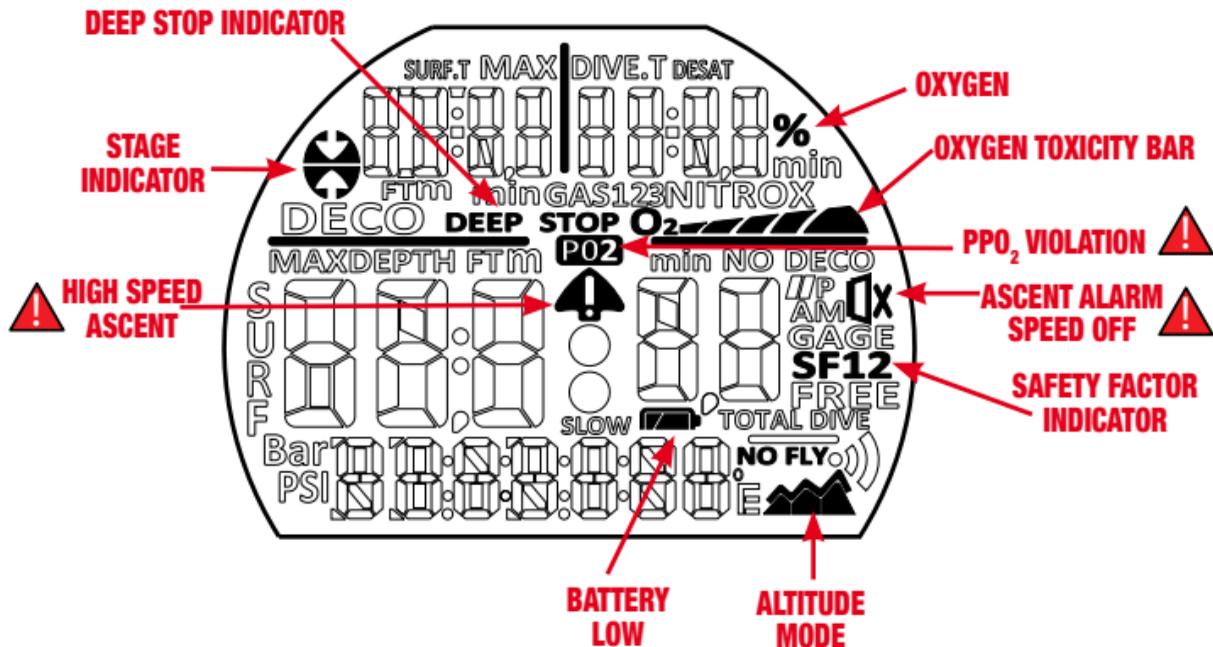


# MAIN SURFACE MENU

## PRE DIVE




## TIME

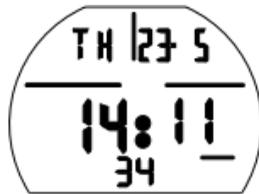

ENTER

RETURN

## MODE SET

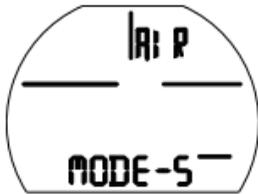

ENTER

RETURN

AIR (AIR  
MODE)


EAN (NITROX  
MODE)

FREE (APNEA  
MODE)

GAUGE (GAUGE  
MODE)

○ Scroll the Mode  
and confirm

## LOGBOOK

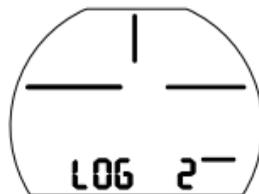


ENTER



RETURN



## DIVE-SET

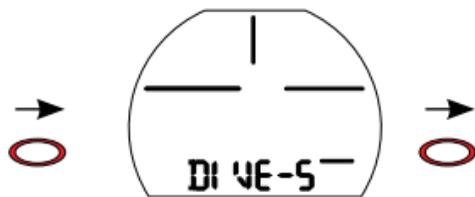

ENTER ○

**AIR** (AIR MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth ON/OFF
- PPO<sub>2</sub> 1.2 - 1.6

**EAN** (NITROX MODE)

- Deep stop ON /OFF
- Safety Factor SF 0/1/2
- Altitude ALT 0/1/2/3
- Depth OFF 50-10 m. (164-30 FT)
- % O<sub>2</sub> 21 - 50% GAS 1
- PPO<sub>2</sub> 1.2 - 1.6 GAS 1
- \* % O<sub>2</sub> 21 - 99% GAS 2
- \* PPO<sub>2</sub> GAS 2


**FREE** (APNEA MODE)

- Surf Time Alarm **SURF-T** F1-F5 (surf time factor) /1':00"-10':00"/OFF
- Depth Alarm **DEPTH** 1 - 50 m. (3-164 FT)/OFF
- Step Depth Alarm **STEP** 2 - 25 m. (6-82 FT)/OFF
- Dive Time Alarm **DIVE-T** 0':10"-6':00"/OFF

○ Scroll the Mode and confirm ○

RETURN ○

## TIME SET

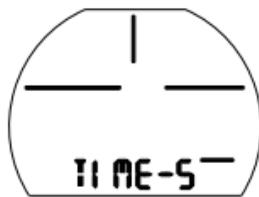

ENTER ○

- SET H. 12/24
- SET HOUR
- SET MINUTE
- SET D-M/M-D
- SET DAY or MONTH
- SET MONTH or DAY
- SET YEAR

○ Scroll the Mode and confirm ○


ENTER

○ Scroll +/- and confirm ○

ENTER

RETURN ○

## PLANNING

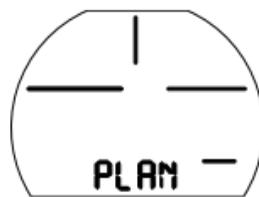

ENTER ○



DEPTH NO DECO TIME

○ SCROLL FOR INCREASE THE DEPTH


RETURN ○

Not available in FREE MODE / GAGE MODE


\* ONLY FOR MICHELANGELO

## MAIN SURFACE MENU

PC LINK

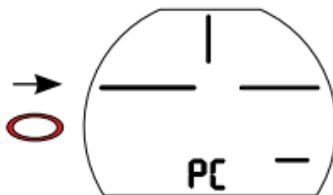

SETTING & INFO SYSTEM

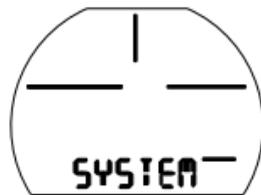

ENTER




CONNECT THE INTERFACE  
AND DOWNLOAD LATEST  
SOFTWARE  
UPDATES



## SYSTEM MENU

CHANGE UNITS

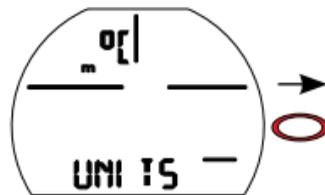


ENTER

SCROLL TO  
CHANGE UNITS

SCROLL FOR  
INCREASE THE DEPTH

RETURN


HISTORY

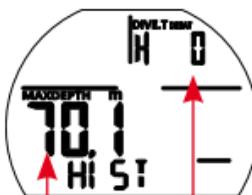

MAX  
DEPTH  
HISTORY

HOURS  
IN USE  
COUNTER

## INFO

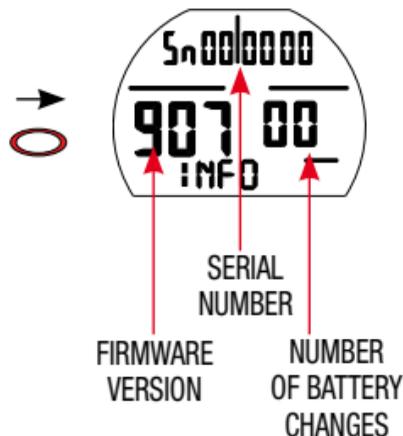

## HIGH SPEED ASCENT ALARM



SCROLL TO CHANGE ON/OFF ALARM SPEED

RETURN




An ascent at too high speed increases the risk of decompression sickness! This function is strictly reserved for instructors who take full responsibility for the deactivation of the high speed ascent alarm (AL.SP).

In any event, when activating this function the computer will show a barred speaker icon during the entire dive.



## TISSUE ERASE

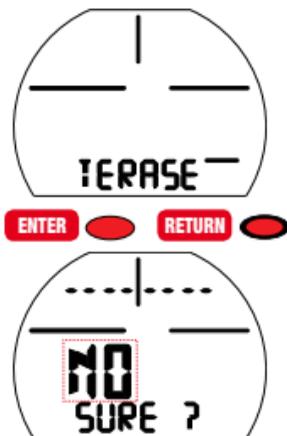



SCROLL TO CHANGE NO / YES, AND PUSH FOR 5 SEC. TO ERASE THE TISSUE






If you decide to erase the tissue nitrogen saturation using the T.ERASE function, the computer will not be able to calculate any successive dives in relation to nitrogen saturation! In any event, do not use this function if 48 hours have not passed since the last dive.

# LOGBOOK MENU




## AIR (AIR MODE)

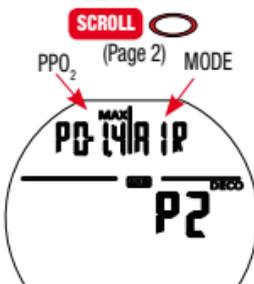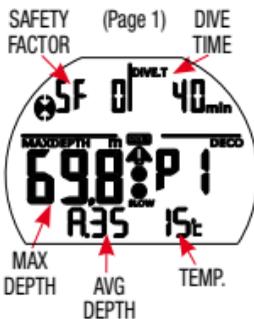



## EAM (NITROX MODE)

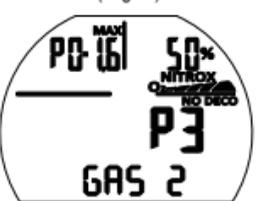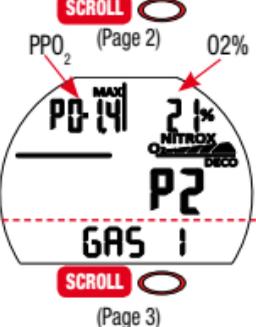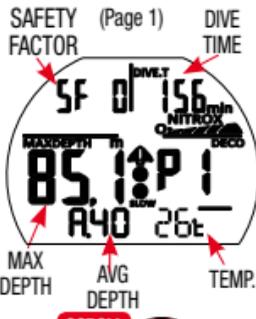

## FREE (APNEA MODE)

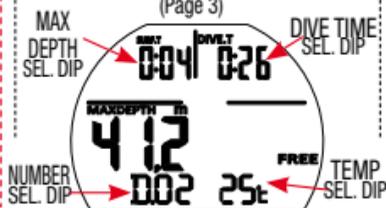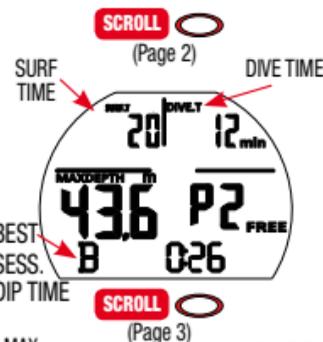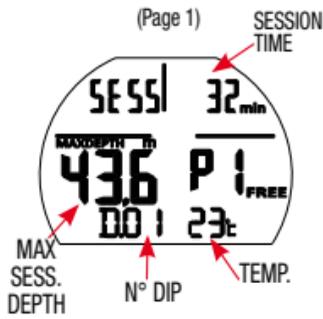

## GAGE (GAGE MODE)

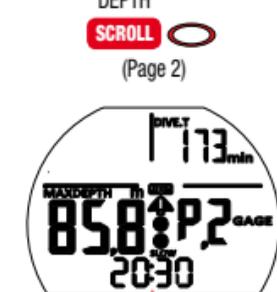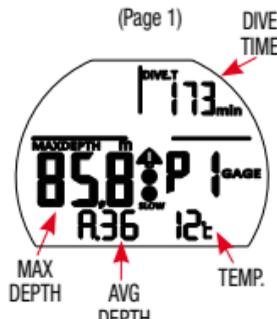


# PRE DIVE MENU


## AIR




## NITROX

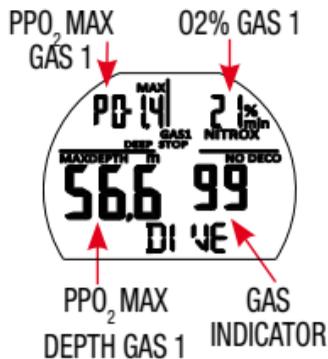

## FREE

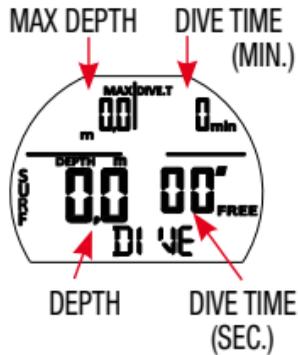


## GAGE

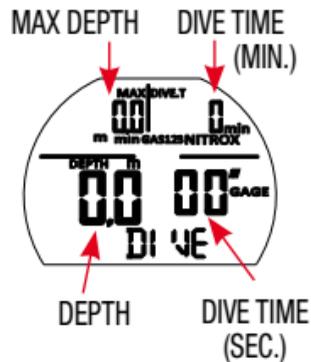

THE SCREEN SCROLL AUTOMATICALLY EVERY SECOND


(Page 2)

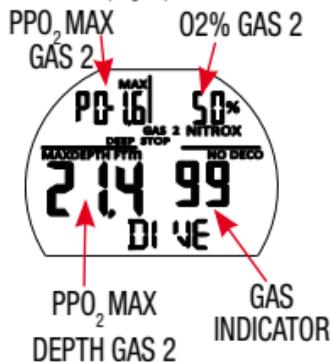

ONLY FOR MICHELANGELO

# DIVE MENU


## AIR

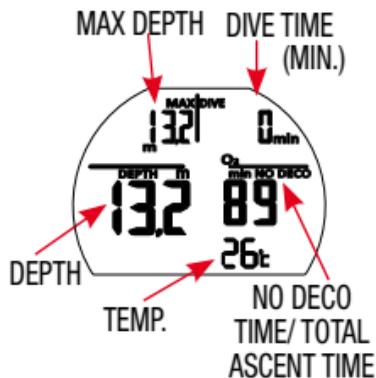


**SCROLL** ○

(Page 2)

PPO<sub>2</sub> MAX /  
PPO<sub>2</sub> DEPTH MAX MODE

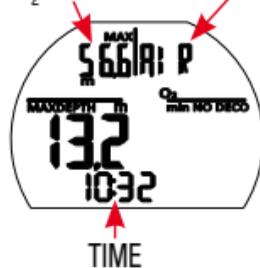


## NITROX

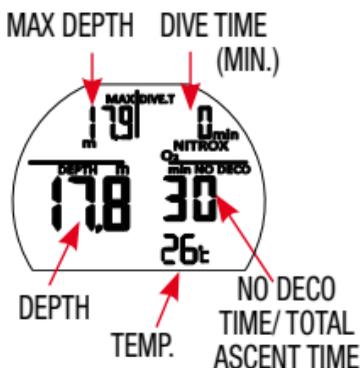


**SCROLL** ○

(Page 2)

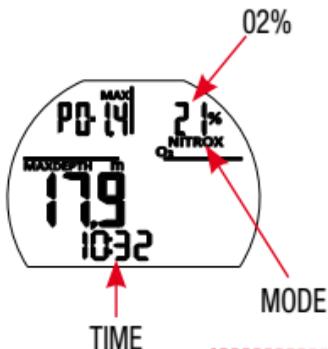


## NITROX GAS SWITCH

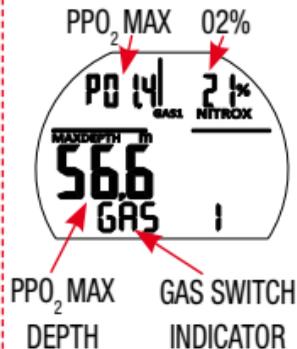

**ENTER** ●


(Page 2)

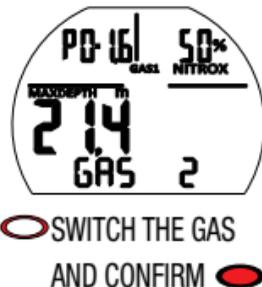

ONLY FOR MICHELANGELO

# POST DIVE


## FREE

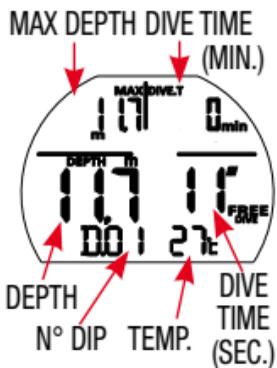


SCROLL

(Page 2)


SESSION TIME

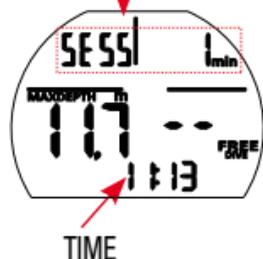


## GAGE

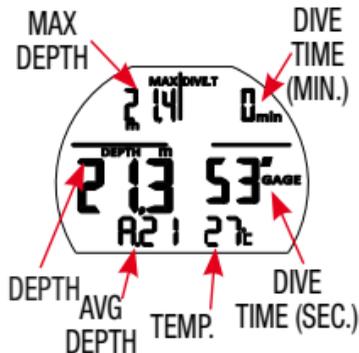


SCROLL

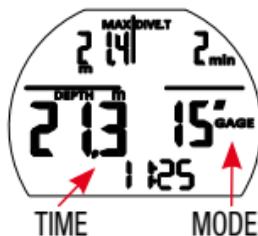

## AIR

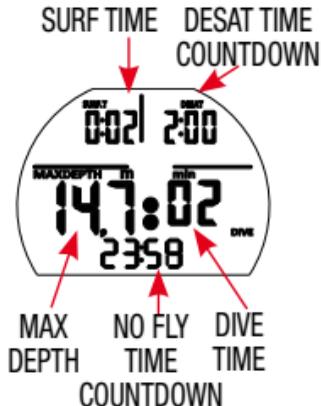

## NITROX

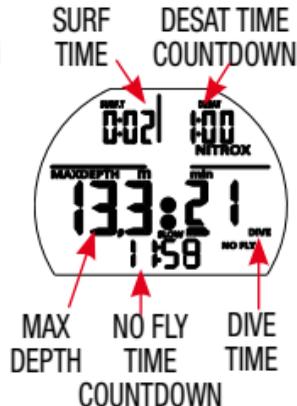


SWITCH OFF  
AUTOMATICALLY IN 10 MIN.

## SURFACE


**FREE**

MAX DEPTH DIVE TIME  
(MIN.)

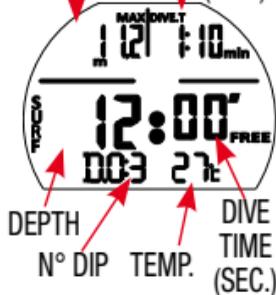

**SCROLL TWO TIMES**

TO END THE SESSION  
(SURFACE)

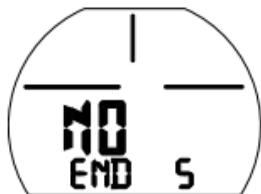

**SCROLL**



YES / NO

and confirm



## BATTERY



LOW BATTERY  
(YOU SHOULD CHANGE THE BATTERY SOON)



YOU MUST CHANGE THE  
BATTERY  
(DIVE FUNCTION IS DISABLED)

Note: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

***CRESSI***  
SINCE 1946

Via G. Adamoli, 501 - 16165 GENOVA - ITALY  
TEL. +39 010 830.79.1 - FAX +39 010 830.79.220  
info@cressi-sub.it - www.cressi.com

