

Warranty certificate Exidéal sphaera

This warranty guarantees that if a failure occurs within the following period from the date of purchase, free repair will be served as described below.

The purpose of use of the personal information you have written is described below. Please refer.

Stock Number	
Serial Number	
Warranty Term One year after shipment	
Purchase Date	
Customer information	ZIP
	Address
	Name
	TEL
Distributor	

【Regulation for free repair】

1) If the product fails during the warranty period under the correct usage according to the instruction manual and the label attached to the main body, free repair will be served based on the contents of this warranty card.

●Please bring the warranty when you need the free repair.

Shipping charges for all warranty repairs are at the owner's expense when you send it to our customer service or original distributor.

●Please contact our customer service if you do not to ask for free repair at the original distributor.

2) Please contact our customer service about free repair when you move to another place.

3) Please contact our customer service when you can not receive free repair service at the original distributor due to the product being given as a gift.

4) This warranty does not apply:

●The damage caused by misuse, repair, alteration,

●The damage caused by relocation of storage, transport, drop after purchasing

●The damage caused by liquid contact, fire, earthquake or other external cause, to incorrect use with abnormal voltage or an undesignated power source (voltage, frequency)

●Shipping damage or damage caused by mishandling by the freight carrier

●The damage caused by use with other than home use (Example: business purpose)

●Not provide this warranty

●Not provide proof-purchase day, distributor name, your name and reformatted in this warranty

5) consumable items are not covered by the warranty.

6)This warranty is only valid in Japan.

7)We do not reissue this warranty.

■Purpose for usage of the personal information

※We will maintain and use customer information (copy of warranty) for free repair support and safety inspection within the warranty period.

※This warranty guarantees that if a failure occurs within the following period from the date of purchase, free repair will be served. It does not limit the customer's legal rights and obligations to the person responsible for warranty and other business partners, issuing this warranty. Please contact our customer service when you have questions about repair after the end of the warranty period.

※ For after-sales service after the warranty period has expired, refer to "After purchase Service" in the manual.

Haslux Co., Ltd.

ZIP:106-0032

29F, ARK HILLS SENGOKUYAMA MORI TOWER, 1-9-10, Roppongi, Minato-ku, Tokyo, Japan

TEL:+81-3-6206-6188

FAX:+81-3-6206-6289


<https://www.exideal.jp>

Warranty attached

Manual / Warranty

Sphera
Exidéal

P. 1-P. 2	Safety notes
P. 3	Items included and name of each part
P. 4	Description of button/display
P. 5-P. 6	Product features/Before using
P. 7	Preparing
P. 8	How to use
P. 9-P. 10	Program list
P. 11	After using/After-sales service
P. 12	Q&A
P. 13	Troubleshooting
P. 14	After-purchase Service / Specifications
P. 15	Warranty

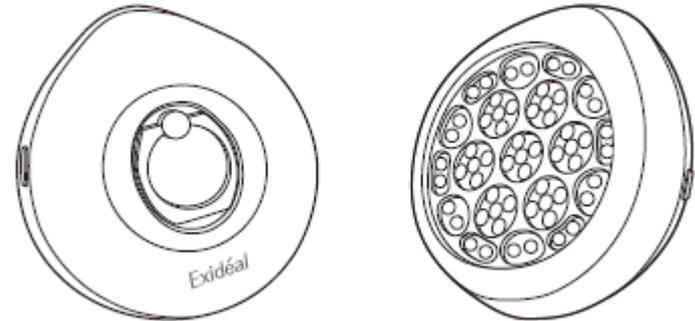

Thank you for purchasing our product "Exidéal sphaera".

Please read this manual carefully and use our product.

The warranty is included on the back side of this manual. Please keep it safe.

Haslux CO., Ltd.

Safety notes

Please read this instruction manual carefully and use the product safely and correctly.

- These notes provide instruction on the safe and correct use of our product and to prevent injury and damage.
- Below are the classifications for these notes;

Caution classification

Danger This symbol indicates an imminently hazardous situation which, if not avoided, may result in death or serious injury.

Warning This symbol indicates that the user risks of death or serious injury if not avoided.

Caution This symbol indicates a potentially hazardous situation, which, if not avoided, may result in personal injury or damage to the equipment.

Explanation of Figure

- This symbol is displayed for acts prohibited.
- This symbol Indicates a mandatory action that must be followed.

Danger

Persons who use a heart pacemaker or electro-medical apparatus that may cause malpractice. Please do not use this product.

Warning

When using this product, do not look directly into LED light.

Do not use this product for any other purposes than making your face and body beautiful, or do not use the broken product. If you have any concerns about your skin and physical condition when using, please consult a doctor before using.

For those who have any skin problems listed below, please do not use this product. It may worsen skin problems.

- Photosensitivity
- Those who have skin disease or medical history of skin problems
- Dermatitis (Atopic dermatitis, Contact dermatitis, excessive sunburn, etc.)
- Metal allergy
- Areas with purulence due to acne and pimple
- Eczema, swelling, and warts (including virus)
- Purpura
- Melasma

For those who have any disease listed below, please do not use this product. It may cause unexpected accidents or skin and body problems.

- Acute disease
- Blood disease (hemorrhagic disease, hemophilia, etc.)
- Those who are being under treatment or being followed up for abnormal blood pressure
- Febrile disease
- Malignant tumor
- Epidemic (infectious diseases)
- Visceral disease
- Facial neuropathy
- Head and ophthalmologic sequelae due to traffic accidents
- Those who have any abnormality in bone (osteoporosis, fracture, etc.)
- Acute pain disease (sprain, muscle strain, etc.)

For those who have any of the following, please do not use this product. It may cause unexpected accidents or skin and body problems.

- Those who have epileptic seizures that respond to blinking lights
- Allergic constitution
- Those who have telangiectasia due to long-term use of steroid hormones or due to liver dysfunction
- Those who are during menstruation
- Those who are pregnant, one month after childbirth, and during nursing
- Those who are under dental treatment, or temporomandibular disorders
- Those who are in a growth process
- Those who are after drinking alcohol or taking medicine (especially medicine that induces sleep)
- Those who are very tired, who do not feel well, and who need rest
- Those who are with body temperature of 38°C or higher (Fever period)

Do not use this if there is any damage and abnormal heating in the cord and the dedicated AC adapter, or if it is loosely inserted into the outlet. There is a risk of fire, electric shock, short circuit, and burns.

Do not hurt, damage, modify, forcibly bend, pull, twist, place a heavy object on the cord. There is a risk of fire, electric shock, short circuit, and burns.

Be sure to use with AC 100-240V outlet. Also be sure to use the dedicated AC adapter for this product. If not, it may cause fire, electric shock, and failure.

Remove precious metals such as earrings or necklaces for use. It may cause accidents or problems.

Warning

- Do not store this product in a bathroom or in a humid place, and do not place it on where is subject to water (such as a washbasin). There is a risk of fire or electric shock due to deterioration.
- Do not throw this product into fire or heat it, charge and use it, or leave it alone at a high temperature. If not, it may cause heating and fire, burst, because this product has rechargeable battery built-in.
- Do not use this product near any flammable object (alcohol, thinner, benzene, liquid remover, spray, etc.) If not, it may cause fire or electric shock, or injury.
- In the following cases, please stop using this product, turn the power off, and unplug the dedicated AC adapter from the outlet. There is a risk of fire or burns due to abnormal output.
 - Smoke from this product
 - Abnormal heating from this product
 - Abnormal noise from this product
 - Odor from this product
- Never modify, disassemble or repair this product except by repair service engineers designated by us. There is a risk of fire or injury due to abnormal operation.
- Do not soak this product in water. There is a risk of electric shock or short circuit.

Be sure to turn the power off when not in use or when cleaning this product. It may cause electric shock, short circuit, or fire. Unplug the dedicated AC adapter from the outlet except when charging. It may cause electric shock or earth leakage fire due to insulation deterioration.

Do not connect or disconnect the dedicated AC adapter with wet hands. Also, make sure there is no water on the charging terminal before charging. There is a risk of electric shock or short circuit.

This product contains a very strong infrared irradiation pulse program, infrared remote control devices such as television or air conditioner may not work. In the event that malfunction or any situation where remote control cannot be used arises, please turn off the power of this product.

Strictly observe Keep this product out of reach of children. If not, it may cause accidents and problems.

Do not use with pets or young children, and do not let them play with this product. If not, it may cause accidents or injury.

For those who use this product for the first time or who have sensitive skin, shorten usage time to use it while checking the skin condition. If not, it may cause accidents and problems.

Follow the instruction manual for usage time and frequency. If not, it may cause accidents or problems.

If you feel pain or discomfort, stop using this product. If not, it may cause accidents and problems.

Do not keep applying this product on the same area and be sure to move it on the skin. If not, it may cause burns or low temperature burns.

Caution



- On the day of hair removal or shaving process, do not apply this product on the same area. There is a risk of swelling and redness.
- Strictly observe** Do not drop, throw, and give a strong shock on this product. If not, it may cause accidents and problems. Do not place anything on this product. When unplugging the dedicated AC adapter, be sure to hold the adapter plug and not to pull on the cord.

Not to store this product in the following places.

 - Place exposed to direct sunlight
 - Place with high humidity
 - Place with a lot of dust
 - Place where there is a risk of ignition
 - Place exposed to wind and rain
 - Place at high temperature or below zero
 - Place where chemicals or gas are generated
 - Place with violent vibration
- Do not wipe this product with chemicals such as alcohol, thinner, benzene, alkaline detergent, bleach, neutral detergent, or disinfectant. If not, it may cause malfunction such as deformation, discoloration, crack, or damage.

※ Please keep this warranty in an accessible place for easy reference.
 ※ Misuse and incorrect storage of this product are not covered by the warranty, and repair is subject to charge even during the warranty period.


Items included and name of each part

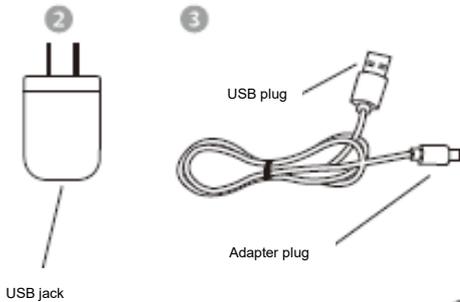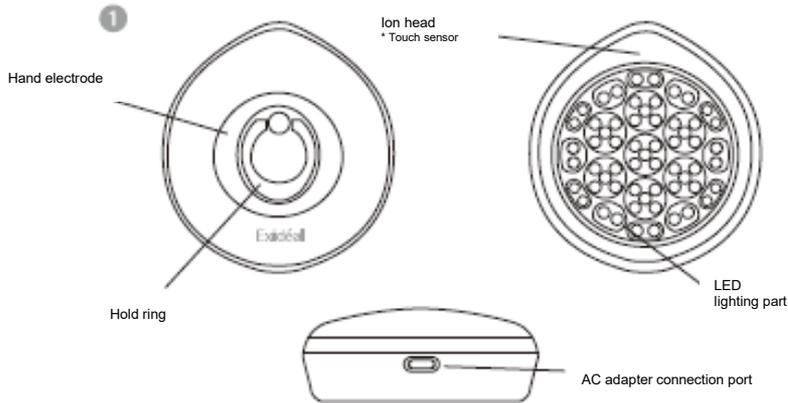

Included items


- ① Main body
- ② Dedicated AC adapter
- ③ Dedicated USB cable
- ④ Dedicated porch
- ⑤ Dedicated cleaning cloth

Caution
The type of dedicated AC adapter included in the package varies depending on the sales area.

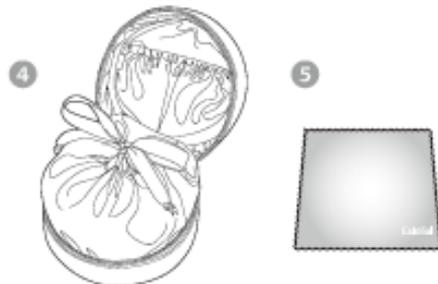

Description of button/display

Power / Program button

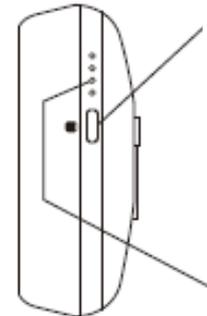

- Long press to power on and enter standby mode. (startup sound → standby mode : remaining battery indicated)
- Short press to switch each LED program (P01 to P04) and irradiation will start automatically.
- Press the button during ion program operation switches to standby mode.
- Long press to power off both in standby mode and during each program operation. (power off sound → remaining battery indicates for 1 second → power off)
- * Auto-off function built-in : When the program ends, the power turns off automatically. In addition, if there is no operation for 60 seconds in standby mode, the power turns off automatically. (power off sound → remaining battery indicates for 1 second → power off)

Program / Remaining battery indication on display

- 100% · In standby mode, the value of remaining battery blinks.
- 75% · Lights up while each LED program (P01 to P04) is running.
- 50% * See P.9 for details of display.
- 25% · Blinks one by one while ion program (P05 /P06) is running.
- * See P.10 for details of display.
- When turn off the power, the value of remaining battery indicates for 1 second.

Remaining battery display

Ion program display


- Lights up when ion program is operating.
- * See P.10 for details of display.

Ion program button

- Press the button in standby mode or during each LED program operation switches to ion program, and desincrustation program (P05) starts automatically.
- Each time you press the button, ion program (P05/P06) can be switched.

Vibration button

- Pressing the button while each program is running activates vibration function (interlocking mode.)
- Each time you press the button, you can switch the Interlocking mode → weak → strong → OFF.
- * If the program is changed, vibration function will be automatically turned off, please set it again.
- * You cannot use vibration function without program.
- * P02 will not activate the vibration function because they cannot be used together in the program.

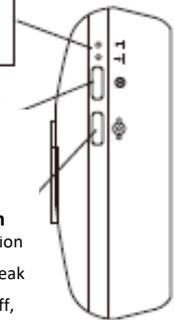

Product features

1 Small LED with high luminance and high output

By adopting chip type LED and calculated layout design, we have achieved to equip with high luminance and high output LED (65pcs of 4 wavelengths) even with compact handy facial beauty device.

You can get real beauty care at home that you've been able to get only at beauty salon.

2 Circle optical design

A unique optical design that increases the irradiation efficiency by 120 to 130%, with the calculated LED arrangement and angle, and the mutual reflection of the mirror-finished reflector (mirror panel) and skin, enable more efficient photo rejuvenation.

* Compares with a beauty device that is not equipped with mirror reflector

3 Pulse irradiation

By adopting high-speed pulse irradiation, the instantaneous energy of light is much higher than that of the continuous irradiation type.

4 Water-resistant

Special specification only for handy type. You can be assured that it is safe to use it with plenty of skin care product.

* Not Waterproof.

5 Operating time

You can use it for up to 60 minutes.* Can be used for long time and suitable for traveling.

* Depending on the program.

6 High sensitivity touch sensor

When the ion head is moved away from the skin, LED dimming and vibration deceleration are automatically done.

If no operation is performed for 60 seconds in standby mode, the power is automatically turned off. Safe design with energy-saving mode has been realized.

7 Hold ring

Putting a finger through the ring to hold the main body increases its stability and improves the ease of holding. It also stabilizes the vibration function and long-term operation, serves as fall prevention.



8 Body care possible

You can use it not only for your face, but also for all parts of your body.

Hip and decollate are difficult to care, LED+α function allows them easier.



9 For travelling / business trip

It can be used not only in Japan, but also in all over the world*. *Compatible countries for 100-240V

◆Desincrustation

Dirt that cannot be completely removed by normal cleansing will get out with sucking power of positive ion.

◆Iontophoresis

Weak current of negative ion penetrates beauty ingredients into stratum corneum of the skin.

◆Vibration function

Equipped with three modes: the interlocking mode that vibration changes according to the program, weak mode and strong mode. Omnidirectional vibration realized by original circular movement taps your skin gently and delicately, supporting your treatment care.

Before using


Frequency of use	Use within 20 minutes in total a day.
About skin	<p>Before you use, be sure to perform a patch test (skin test) for each cosmetic you use. (P.7)</p> <p>* This is a simple test to check any skin problems in advance.</p> <p>Use this product with your bare skin (after removing make-up and facial washing).</p> <p>Use this product while checking your skin condition.</p> <p>* If you have any skin problem, please stop using this cosmetics with the product and consult a doctor.</p>
Accessories	Before using, please remove the accessories around your face and neck such as earrings.

Preparing

◆ Charge


When you use the product for the first time or when the battery is exhausted, please charge with the dedicated AC adapter.

- Insert the USB plug into the USB jack of the dedicated AC adapter.
- Insert the adapter plug into the AC adapter connection port at the bottom of the main body.
- Insert the power plug into the outlet.
- When charging starts, the remaining battery indicator blinks.
- When charging is completed, the remaining battery indicator lights-off.



● Approximate charging time : About 90 min. – 150 min.

- Operating time : About 25 min. – 60 min.
- Recommended charging temperature : About 15°C - 35°C
- * It differs depending on the program and using environment.
- * While charging, the main body cannot be operated.
- * When you use after charging, please pull the adapter plug out.
- * When the battery runs out while using, power-off sound is emitted. After the remaining battery indicator (25%) blinks for 3 seconds, the power turns off automatically.
- * When you insert the power plug into the outlet while the power is on, the power turns off automatically, and start charging.
- < Warning >
 - Be sure to use the dedicated AC adapter. Or it may cause accidents or failure.
 - Connect the main body and adapter plug first before inserting the power plug into the outlet, so as not to occur short circuit.

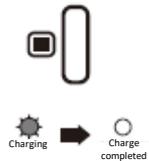

◆ Patch test (skin test)

When you use this product and cosmetics for the first time, be sure to perform a test to prevent skin problems in advance.

- Wash the area (inside the arm) to be performed a patch test with soap, and cleanly wipe with towels.
- Apply cosmetics (lotion, beauty essence) at inside part of the arm, and select the Desincrustation(P05) or iontophoresis (P06).
- Apply the ion head to the same area above, keep moving for about 3 minutes.
- If there is no abnormalities within 48 hours, you can use this product.
 - * Be careful with any abnormalities on your skin when you use.
 - * Do not use the product if it does not suit your skin condition.

<Hold ring>

- Raise the ring from bottom to top.
- * Please don't open the ring more than 90° .
The base is fixed, so please do not forcibly open and rotate. Or it may cause damage or failure.
- Please be sure to hold the main unit with your finger put through the hold ring.
- * Don't walk around with your finger keeps putting through the hold ring.
- While program is running, please hold it the way you can touch the hand electrode with hand.



How to use

1 Remove make up and wash your face to be clean bare skin.

- You cannot use it over makeup.

2 Put on your cosmetics to moisturize the skin firmly.

3 Put your finger (index finger) through the hold ring to hold the main body so that you can touch the hand electrode with hand.

4 Turn the power on and select the program.

- By a short press, you can switch LED program (P01 to P04) or ion program (P05 / P06), then irradiation starts automatically.

● LED program (P01 to P04)

Please select the program according to your skin condition and troubles.
For the details of each program, please refer to the program list (P.9-10).

● Desincrustation program (P05)

Please use it with your skin wet.
After the treatment, please wipe off with cotton cloth soaked with lotion, or rinse off lightly.

● Iontophoresis program (P06)

Please use it with lotion / beauty essence (contains vitamin C, vitamin C derivative).

- When you press the vibration button while each program is running, vibration function (interlocking mode) will activate.

5 Put the ion head and LED lighting part on the skin and move it slowly.

- Touch sensor is equipped, please keep the ion head touching the skin while using.
- When the program (about 5 minutes) ends, the power-off sound emits and the power turns off automatically.

6 After the treatment, moisturize the skin firmly again.

7 Clean the main body after using and store it in the dedicated porch. (P.11)

<Cautions for use>

- * Please be sure to use the ion head / LED lighting part touching your skin.
- * Please do not use it around eyelids or hollows around the eyes.
- * Please do not look directly into LED light.
- * If you use your own cosmetics, please be sure to use water soluble cosmetics.
Do not use the cosmetics that contain oily ingredients (oil, cream, etc.), that have warming effect or scrubbing ones. Or it may cause product failure and skin troubles.
- * Recommended operating environmental temperature : about 15°C - 35°C

Program list

You can select a combination of 6 programs and vibration function according to your skin condition and troubles.

Program	Purpose	Function	Time	Vibration function	Frequency of use (reference)
P01 Texture / Tenseness	For age-appropriate care, aim for textured skin with tense	LED 	About 5 min.		Possible every day
P02 Adolescent skin	Support skin that becomes unstable due to disturbed life rhythms and dietary habits to smooth skin	LED 	About 5 min.		Possible every day
P03 Rough skin / Dry skin	Care for dry and rough skin that is bothering all year round, and fluctuating skin due to irregular life	LED 	About 5 min.		Possible every day
P04 Bright skin	For the skin that is affected by external environment when going out, this aftercare program makes your skin bright	LED 	About 5 min.		Possible every day

Blue : Adolescent skin / T-zone, etc.
 Yellow : Texture / resilience, prevention of rough skin
 Red : Aging skin* / dry skin *care according to age
 Near infrared ray : resilience / skin environment
 ※Each mode consists of unique program that combines multiple wavelengths.

Light up
 Blink...
 Light off

Program	Purpose	Function	Time	Vibration function	Frequency of use (reference)
P05 Desincrustation	Please use this program when you want to let dirt out what cannot be completely washed off and to remove old keratin	LED+ Desincrustation 	About 5 min.		2-3 times a week
P06 Iontophoresis	Please use this program when you want to penetrate the beauty ingredients into the stratum corneum	LED+ Iontophoresis 	About 5 min.		2-3 times a week

After using

◆ How to clean

- ① Wipe off the dirt on the LED lighting part and ion head with cloth which squeezed tightly after dipping in water.
- ※ Do maintenance with the power off.
- ※ Do not use the chemicals such as alcohol, thinner, benzene, alkaline detergent, bleach, neutral detergent, sterilizer, or disinfectant.
- ※ Do not keep this product with lotion and beauty essence remained.
- ② Wipe off the dirt on the main body with the dedicated cleaning cloth or dry cloth.
- ※ This product is not waterproof, so do not wash it with water.

◆ How to store

- When you do not use this product for a long time, please clean the main body and store it.
- When not using, please turn off the power, unplug the dedicated AC adapter from the main body and the outlet, and store it in the dedicated pouch.
- Do not store this product near a stove or heater, in hot and humid place such as bathroom, place exposed to direct sunlight, or in unstable place.

After-sales service

◆ Rechargeable battery

- Rechargeable battery is a consumable item. (Not covered by warranty)
- If the operating time is extremely short after charging, it is considered that the rechargeable battery has reached the end of life.
- If you want to replace the rechargeable battery, please contact the place of purchase or our customer service (P.14).

◆ How to disposal

- When you dispose this product, please dispose it in accordance with your local regulations for sorting.
- This product uses lithium ion rechargeable battery.

Q&A

	Question	Answer
Q1	What is LED? Is the color good for beauty?	LED is an abbreviation of Light Emitting Diode. It is a semiconductor that is characterized by having a specific light (wavelength) and is used for home appliances and display. The color of light itself is made up of waves with a specific cycle, and the cycle of waves is called the wavelength. Penetration into the skin* depends on this wavelength. In this product for beauty, those carefully selected with particular emphasis on wavelength and intensity ones are contained. *stratum corneum
Q2	Does it affect my eyes?	No. It does not directly affect your eyes. Please do not look directly into LED light as it may feel dark temporarily after seeing a very strong light momentarily.
Q3	Can I use it if I have acne?	Do not use if the inflammation is severe. When the inflammation has subsided, please restart while observing the situation gradually.
Q4	Can I use it if I am tingling right after sunburn?	Please do not use it for three days when your epidermis is burned by ultraviolet light. You can use it if there is no stiffness or any other trouble with your skin after cleaning your face.
Q5	Can I use it in other countries?	Yes. This product is compatible with 100-240V, please check the voltage of using countries. You can use it only by changing the shape of an outlet, not need to have a voltage converter.
Q6	How long should I use this ?	It is about 20 minutes a day as a reference. It is recommended that you continue the treatment every day rather than use for a long time at a time.
Q7	Can I use this in a bath?	This product is not waterproof, so please don't use it in bath, shower, or wash it with water. *Please do not store this product with water or in a humid place.
Q8	Can I use this with makeup on?	Use this product after removing makeup (after cleansing and washing your face). Use this product after moisturizing your skin with lotion or beauty essences, etc.
Q9	Can I purchase spare parts if needed? Can the product be repaired?	You can do both. Please contact the shop where you purchased the product or our Exidéal customer service.
Q10	How long is the life of rechargeable battery?	The battery life is about 3 years. (The warranty period of the main body is one year from the date of purchase, but consumable items including rechargeable battery are not covered by the warranty.)

Troubleshooting

Symptom of trouble	Possible causes	How to deal with
Cannot Power On	The power/program button is not turned on.	Long press the power/program button (about 3 seconds) to turn on the power.
	Insufficient charge.	Please charge. (P.7)
The power turns off during use. /Can only be used for a few minutes even after charging.	Insufficient charge.	Please charge. (P.7)
	Auto-off function worked. *If no operation for 60 seconds in standby mode, the power turns off automatically.	Press the power/program button again to turn the power on.
	The mode in use has ended.	When each mode ends, the power turns off automatically.
	Battery life is up.	Battery needs to be replaced. Please contact our customer service.
Charging does not start.	Dedicated AC adapter is not inserted into the outlet.	Insert the dedicated AC adapter plug into the outlet. (P.7)
	It is in standby mode.	Press the power/program button and select the program.
LED does not light on. /Partly does not light on.	Any failure inside the main body	Turn the power on again and restart. If the problem is not resolved, please stop using and contact our customer service.
	The near-infrared light is colorless and transparent, and it is invisible even during irradiation.	
Vibration does not start.	Vibration function is turned off.	Press the vibration button and select the mode you like.
	P02 (Adolescent skin program) is selected.	While P02 is being used, vibration function does not activate because it cannot be used together with the program.
LED irradiation goes out / vibration stops while using the program.	Ion head part is away from the skin.	Touch sensor is equipped with ion head part and please don't let it come off your skin while the program is running. When ion head is away from the skin, LED irradiation will automatically be dimmed, and vibration will automatically be low speed mode.
	Any failure inside the main body	Please stop using and contact our customer service.
Desincrustation/ion tophoresis is weak, cannot be felt.	Ion is almost not felt by the body. Also, there are individual differences in how to feel.	
The main body is heating.	Continuously used for long time	Continuous use for long time may make the main body slightly hot. Turn the power off and wait for some time before using. If the problem is not resolved, please stop using and contact our customer service.

Caution

Please contact our customer service if this troubleshooting guide does not answer your questions.

After-purchase Service

■ Warranty

The warranty is attached to the back cover. Please fill in all necessary information such as location purchased and the date of purchase and keep it safe. Please read this warranty description carefully.

■ Warranty period

The guaranteed term is one year from the date of purchase.

■ Request for repair

Please contact our customer service if you still have problems after troubleshooting.

※Shipping costs shall be borne by the Customer. We pay shipping costs after repair.

● During warranty period

We will repair without charge according to the regulations of warranty. Please bring or send the product with this warranty and the proof-of-purchase, which can verify the date of purchase.

● After warranty period

When the product still performs after repairing, we will repair with charge based on the needs of customers.

Please contact the original distributor or our customer service.

■ If any unsure about after service

Please contact our customer service.

Specifications

MADE IN JAPAN

Battery specification	Lithium ion rechargeable battery	Rated Input Power(Power Source)	DC5V 0.5A
Power Dissipation	2.5W (Maximum)	Approximate charging time	About 90 min. - 150 min. Recommended charging temperature : About 15°C~ 35°C
Weight	About 155 g	LED Output Wavelength	470nm~940nm
Product Dimension	about W90 × H40 × D95mm	Optimum Temperature	Operating Temperature Range /0°C~+40°C Storage Temperature Range /0°C~+45°C

* This product is a beauty device and no effects of medical equipment.

Hasluc Co., Ltd.

● Beauty Business Division

ZIP:106-0032
29F ALK HILLS SENGOKUYAMA MORI TOWER, 1-9-10, Toranomon, Minato-ku, Tokyo
TEL:+81-3-6206-6188 FAX:+81-3-6206-6289

● Osaka Merchandise Center

ZIP:566-0055
2-2-6 Sinzaikae, Settu City, Osaka Fu
TEL:+81-6-6827-0307 FAX:+81-6-6827-0304