


Keysight 1130A-Series Differential and Single-Ended Probes

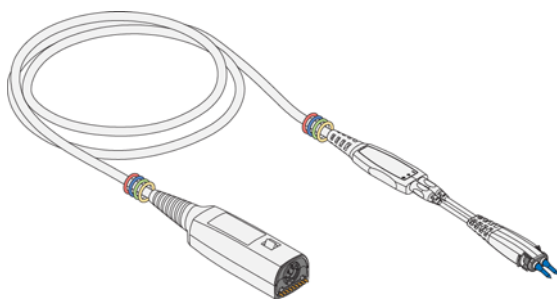

Notices

© Keysight Technologies, Inc. 2016

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

01130-97010

Edition

Third Edition, March 2016

Printed in USA

Published by:
Keysight Technologies, Inc.
1400 Fountaingrove Parkway
Santa Rosa, CA, 95403

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR

2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Keysight Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Contents

Contents

1 Getting Started

Introduction	8
Probe Handling	12
Using Offset With InfiniiMax Active Probes	16
Slew Rate Requirements for Different Technologies	18
Available Accessories	20
Safety Information	29
Service	32

2 Using Probe Heads

Recommended Configurations at a Glance	36
1. E2677B Differential Solder-in Head with Full BW Resistors	38
2. E2678B Differential Socketed Head	40
3. E2675B Differential Browser	43
4. N5380B SMA Head	46
5. N2851A QuickTip Probe Head	49
6. E2679A Single-Ended Solder-In Head	53
7. E2676A Single-Ended Browser	54
8. E2677B Differential Solder-In Head with Medium BW Resistors	56
9. E2679A Single-Ended Solder-In Head with Long Wire	58
10. E2678B Differential Socketed Head with Damped Wire Accessory	60
11. E2678B Differential Socketed Head with Header Adapter	62
Replacing Resistors on E2677B/9A Solder-In Probe Heads	63

3 Calibrating Probes

Calibration for Solder-In and Socketed Probe Heads	68
Calibration for Hand-held Browser Probe Heads	75

4 Characteristics and Specifications

General	78
Environmental	80
Regulatory	81
Probe Dimensions	82

5 1130A Performance Data Plots

E2675B Differential Browser	84
E2676A Single-Ended Browser	87
E2677B Differential Solder-in Probe Head (Full BW)	90

E2677B Differential Solder-in Probe Head (Medium BW)	93
E2678A/B Differential Socketed Probe Head (Full BW)	96
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	99
E2679A Single-Ended Solder-in Probe Head (Full BW)	102
E2679A Single-Ended Solder-in Probe Head (Medium BW)	105
N2851A QuickTip Head with N2849A QuickTip	108

6 1131A Performance Data Plots

E2675B Differential Browser	110
E2676A Single-Ended Browser	113
E2677B Differential Solder-in Probe Head (Full BW)	116
E2677B Differential Solder-in Probe Head (Medium BW)	119
E2678A/B Differential Socketed Probe Head (Full BW)	122
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	125
E2679A Single-Ended Solder-in Probe Head (Full BW)	128
E2679A Single-Ended Solder-in Probe Head (Medium BW)	131
N2851A QuickTip Head with N2849A QuickTip	134

7 1132A Performance Data Plots

E2675B Differential Browser	136
E2676A Single-Ended Browser	139
E2677B Differential Solder-in Probe Head (Full BW)	142
E2677B Differential Solder-in Probe Head (Medium BW)	145
E2678A/B Differential Socketed Probe Head (Full BW)	148
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	151
E2679A Single-Ended Solder-in Probe Head (Full BW)	154
E2679A Single-Ended Solder-in Probe Head (Medium BW)	157
N2851A QuickTip Head with N2849A QuickTip	160

8 1134A Performance Data Plots

E2675B Differential Browser	162
E2676A Single-Ended Browser	165
E2677B Differential Solder-in Probe Head (Full BW)	168
E2677B Differential Solder-in Probe Head (Medium BW)	171
E2678A/B Differential Socketed Probe Head (Full BW)	174
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	177
E2679A Single-Ended Solder-in Probe Head (Full BW)	180
E2679A Single-Ended Solder-in Probe Head (Medium BW)	183
N5380B SMA Probe Head	186
N2851A QuickTip Head with N2849A QuickTip	188

9 Performance Verification

Using the 8720ES VNA successfully	190
Procedure	191
Performance Test Record	198

10 SPICE Models

SPICE Model for Differential Probe Heads	201
SPICE Model for Single-Ended Probe Heads	202
SPICE Deck and Measured/Modeled Data Matching	203

11 Replacement Parts

E2675B Differential Browser Probe Head	214
E2677B Differential Solder-In Probe Head	214
E2678A/B Differential Socketed Probe Head	215
E2679A Single-Ended Solder-in Probe Head	215
Other Accessories	216

Index

1 Getting Started

Introduction	8
Probe Handling	12
Using Offset With InfiniiMax Active Probes	16
Slew Rate Requirements for Different Technologies	18
Available Accessories	20
E2668A Single-Ended Connectivity Kit	20
E2669A Differential Connectivity Kit	21
N5450B Extreme Temp Cable Extension Kit	23
N2880A InfiniiMax In-Line Attenuator Kit	24
N2881A InfiniiMax DC Blocking Caps	28
Safety Information	29
Service	32

The 1130/1/2/4A InfiniiMax active probes are designed for probing differential and single-ended high-frequency signals. The probes are compatible with the Infiniium AutoProbe Interface which completely configures the Infiniium series of oscilloscopes for the probes.

WARNING

Before using the probe, refer to "Safety Information" on page 29.

CAUTION

Before using the probes, refer to "Probe Handling" on page 12.

Introduction

Before you can use the probe, you must connect one of the available probe heads to an 1130/1/2/4A probe amplifier.

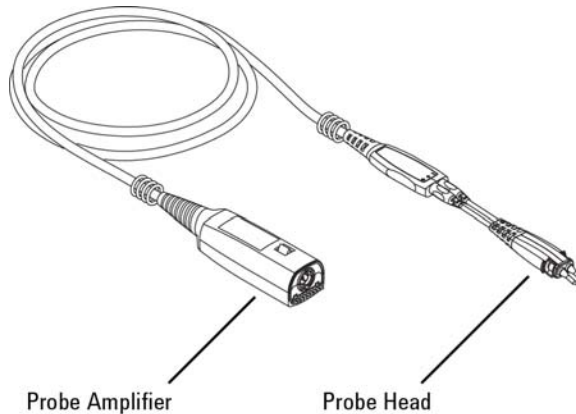


Figure 1 Probe Amplifier with Attached Head

Probe Heads

The available probe heads are shown in **Figure 2** on page 9 and are documented in **Chapter 2**, “Using Probe Heads”. The InfiniiMax I probe heads are designed specifically for the 1130/1/2/4A probe amplifiers. The InfiniiMax II probe heads are designed for 1168/9A probe amplifiers, but can also be used with the 1130/1/2/4A probe amplifiers.

The probe heads can be ordered at the same time as 1130/1/2/4A probe amplifiers. The E2669A and E2668A connectivity kits, described on **page 21** and **page 20** conveniently package multiple probe heads and their accessories.

Differential probe heads offer easy measurement of differential signals and greatly improve the measurement of single-ended signals. Single-ended probe heads offer extremely small size for probing single-ended signals in confined spaces.

Compatible Oscilloscopes

Table 1 on page 10 lists the oscilloscopes that are compatible with the 1130/1/2/4A probes. Is Your Oscilloscope Software Up-to-Date? Keysight periodically releases Oscilloscope software updates to support your probe, fix known defects, and incorporate product enhancements. To download the latest firmware, go to www.keysight.com and search for your oscilloscope’s topic. Click on the “Drivers, Firmware & Software” tab.

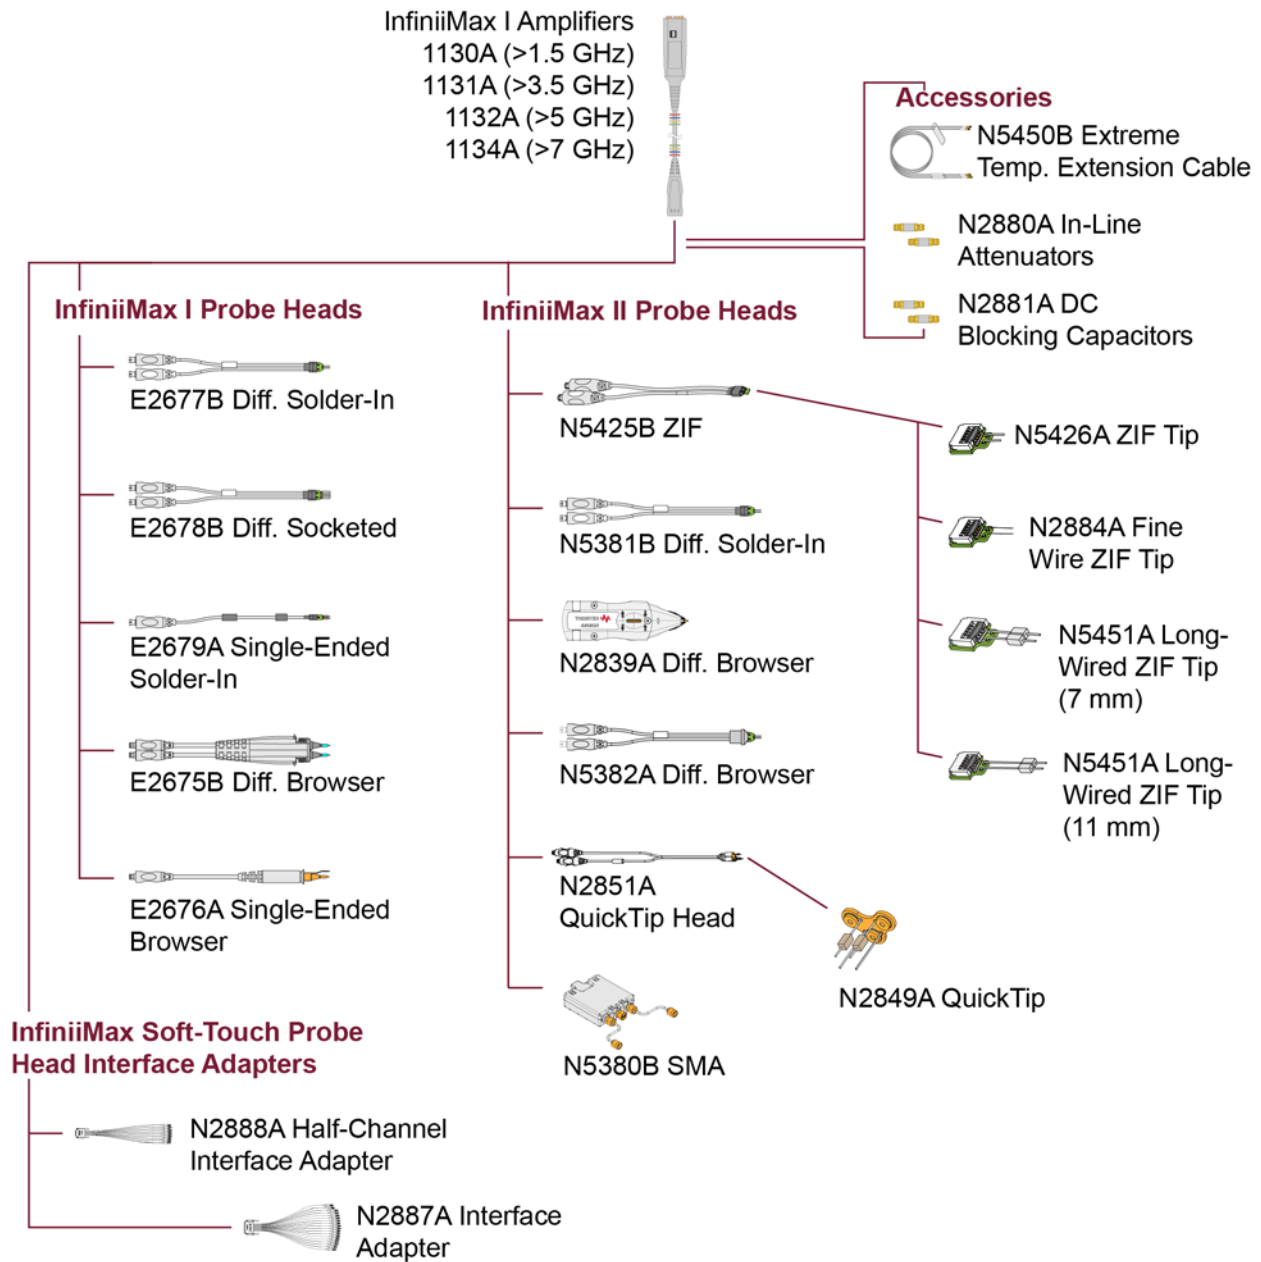


Figure 2 Available Probe Heads

NOTE

N2849A QuickTips are also compatible with the N2848A InfiniiMode probe heads which are designed for N2830/1/2A InfiniiMax III+ and N2800/1/2/3A InfiniiMax III probes.

Table 1 Compatible Oscilloscopes

Oscilloscope	Adapter Required
Infiniium Oscilloscopes	
S-Series	none
90000 X-, and Q-Series	N5442A
90000A Series	none
86100C/D Series	N1022A/B
9000 H-Series	none
9000A-Series	none
8000A-Series	none
InfiniiVision Oscilloscopes	
6000 X-Series	none
4000 X-Series	none
3000 X-Series	none
7000A Series	none
6000A Series (350 MHz – 1 GHz)	none
5000A Series	none

Channel Identification Rings

When multiple probes are connected to the oscilloscope, use the channel identification rings to associate the channel inputs with each probe. Place one colored ring near the probe's channel connector and place an identical color ring near the probe head.

Inspecting the Probe

Figure 3 on page 11 shows the accessories that are shipped with the 1130/1/2/4A probe amplifiers. The probe amplifiers do not come with a probe head *unless* selected at the time of order. Any head shown in **Figure 2** on page 9 can be ordered at any time for any 1130/1/2/4A probes.

- Inspect the shipping container for damage.

Keep the damaged shipping container or cushioning material until the contents of the shipment have been checked for completeness and the probe has been checked mechanically and electrically.

- Check the accessories.

- If the contents are incomplete or damaged, notify your Keysight Technologies Sales Office.
- Inspect the probe. If there is mechanical damage or defect, or if the probe does not operate properly or pass calibration tests, notify your Keysight Technologies Sales Office.

If the shipping container is damaged, or the cushioning materials show signs of stress, notify the carrier as well as your Keysight Technologies Sales Office. Keep the shipping materials for the carrier's inspection. The Keysight Technologies office will arrange for repair or replacement at Keysight Technologies' option without waiting for claim settlement.

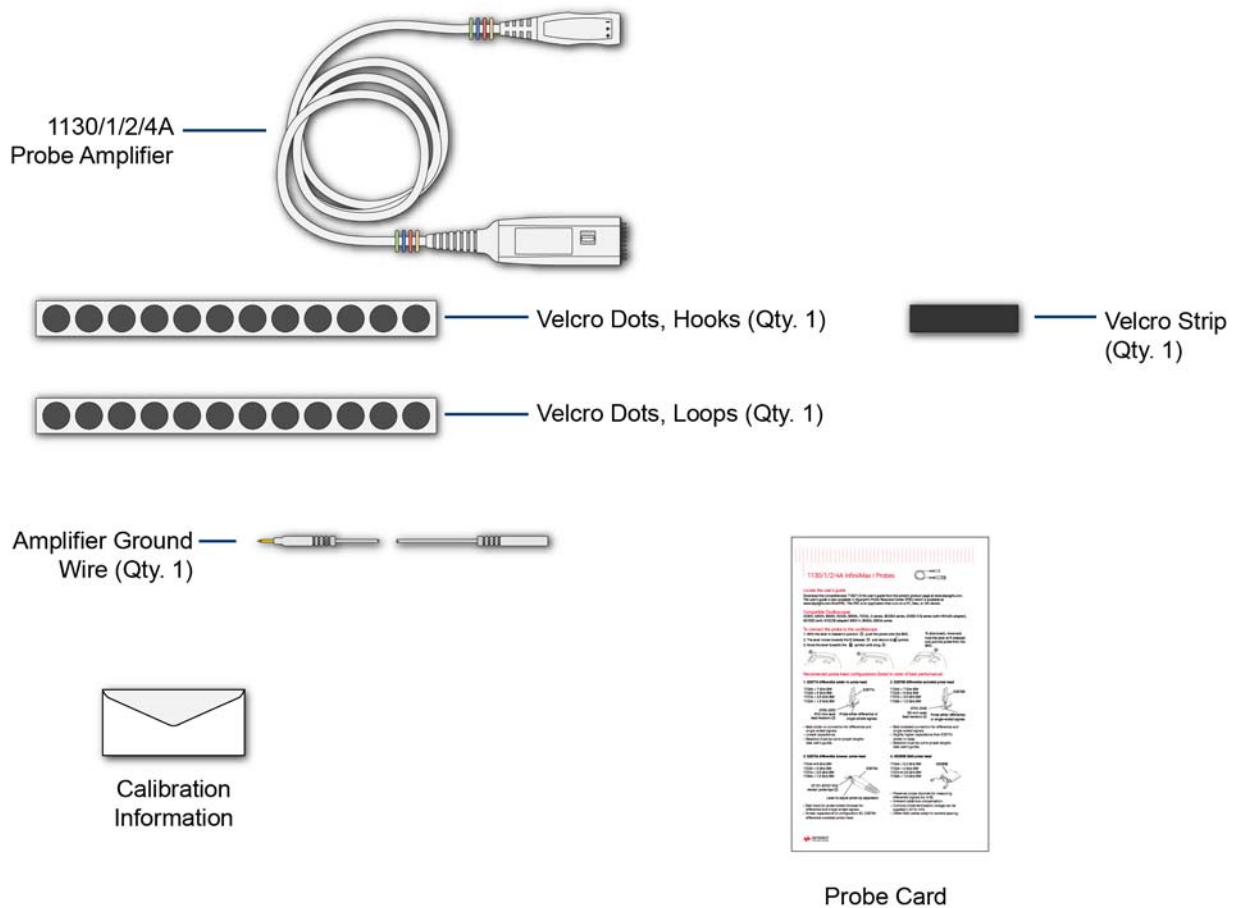


Figure 3 Accessories Supplied With the Probe Amplifier

Probe Handling

This probe has been designed to withstand a moderate amount of physical and electrical stress. However, with an active probe, the technologies necessary to achieve high performance do not allow the probe to be unbreakable. Treat the probe with care. It can be damaged if excessive force is applied to the probe tip. This damage is considered to be abuse and will void the warranty when verified by Keysight Technologies service professionals.

- Exercise care to prevent the probe end from receiving mechanical shock.
- Store the probe in a shock-resistant case such as the foam-lined shipping case which came with the probe.

Connecting and Disconnecting Probe Heads

When disconnecting a probe head from an amplifier, pull the probe head connectors straight out of the sockets as shown in **Figure 4**. When connecting a probe head to an amplifier, push straight in. Always grasp the indentations located on the sides of the amplifier as shown in **Figure 4**. There are also indentations on many of the probe head sockets so you have a convenient place to grasp there as well.



Figure 4 Properly Pulling the Probe Head Straight Out

CAUTION

Avoid damaging the connection pins. Never bend the probe head in order to “pop” it loose from the amplifier. Do not wiggle the probe head up and down or twist it to remove the connectors from the sockets.

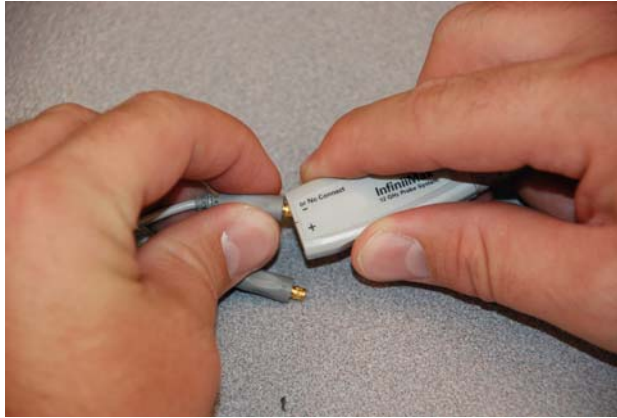


Figure 5 Improperly Disconnecting a Probe Head From an Amplifier

Handling the Probe Cable

CAUTION

Avoid degrading the probe's performance. Do not twist, kink, or tightly bend the probe's cable.

CAUTION

When the probe is attached to an oscilloscope, avoid letting object hit the probe cable where the cable exits the probe amplifier and bend it well beyond its limit.

When storing the probe, coil the cable in a large loops and avoid twisting the cable. Coil the cable in a similar manner to how garden hoses or extension cords are typically coiled. You can start by wrapping the cable around your thumb as shown in [Figure 6](#). Then continue to circle your thumb, but provide a slight twist with each rotation. This allows the cable rotations to lie flat against each other and will eliminate the net twisting of the cable in the end.



Figure 6 Recommended Coil for Storage

CAUTION

Make the coil's radius fairly large so it does not induce kinking or bending.

Connecting the Probe to an Oscilloscope

The probes are only meant to be plugged into gold plated BNCs (like those on Infiniium oscilloscopes). To connect the probe to the oscilloscope, simply push the probe into the BNC connector and the locking mechanism automatically engages. To disconnect the probe, push and hold the locking lever to the left and then remove the probe.

Handling the Probe Amplifier

The probe amplifier contains a delicate circuit board. Treat it carefully and take standard precautions (for example, not dropping it repeatedly or from large heights, not getting it wet, not smashing it with heavy objects, etc.). These probes are sensitive ESD devices so standard precautions need to be used to not ruin the probe from the build-up of static charges.

Securing Probe Heads and Amplifiers to Your DUTs

When soldering a probe head to a circuit, first provide strain relief by using low temperature hot glue (use as little as possible) or non-conductive double-sided tape. Do not use super glue and do not get the low temperature hot glue on the actual probe head tip as this can damage the precision components of your probing system (only use the low temperature hot glue on the probe head cables). The provided velcro pads can be used to secure your probe amplifier casing to the board.

Once strain relief has been provided, solder the probe tip to the circuit board and then plug the probe head into the probe amplifier.

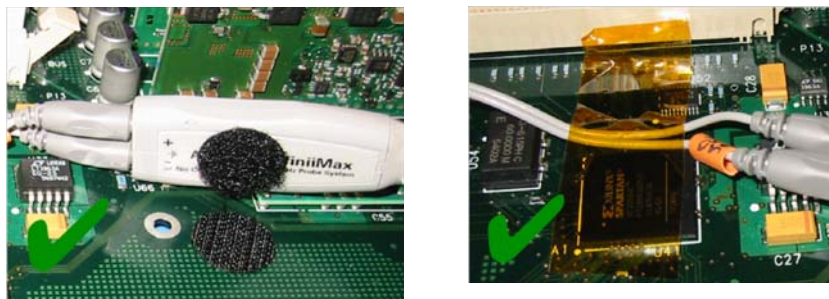


Figure 7 Correct Securing Methods

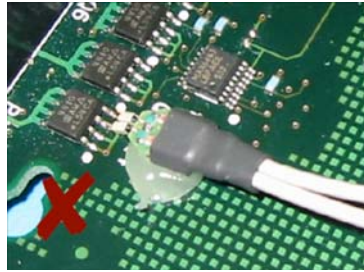


Figure 8 Incorrect Securing Method Because Glue is Placed on the Probe Head Tip

The velcro dots can be used to secure the probe amplifier to a circuit board removing the weight of the probe from the circuit connection. Attach a Velcro dots to both the probe amplifier and the circuit board as shown in **Figure 9** on page 15.

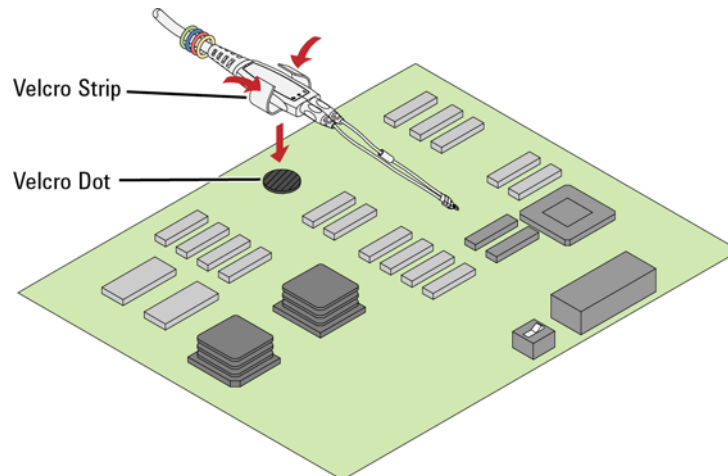


Figure 9 Using the Velcro Dots

Using Offset With InfiniiMax Active Probes

It is important to understand how the 113xA probes behave with respect to offset when different probe head / signal combinations are used.

The purpose of offset in active probes or oscilloscope front ends is to allow the subtraction of most or all of the dc component of the input signal so the signal can better utilize the dynamic range of the input. When using an InfiniiMax probe with an Infiniium oscilloscope, you can select the case (see the three cases described below) that applies for your measurement by selecting the **Probes** button under the channel setup menu. This allows you to select which type of probe head is being used and, if it is a differential probe head, allows you to select whether you are probing a differential or single-ended signal. With these inputs, the oscilloscope will use the proper type of offset for your measurement case. The specifics for each case are discussed below.

As an important side note, whenever adjusting the offset for a particular probe head, make sure to have a triggered signal.

Case 1. A single-ended probe head probing a single-ended signal

For this case, the offset control on the oscilloscope controls the probe offset and the channel offset is set to zero. This allows the offset voltage to be subtracted from the input signal before the signal gets to the differential amplifier. Since this subtraction is done before any active circuits, the offset range is large ($\pm 12\text{V}$ for the 113X amplifiers and $25\text{-k}\Omega$ probe heads). Note that the minus probe tip is not present when using a single-ended probe head which means nothing is plugged into the "-" input of the probe amp. This is normal and causes no problems.

Case 2. A differential probe head probing a single-ended signal

For this case, the offset control on the oscilloscope controls the probe offset and the channel offset is set to zero. This allows the offset voltage to be subtracted from the input signal before the signal gets to the differential amplifier. Since this subtraction is done before any active circuits, the offset range is large ($\pm 12\text{V}$ for the 113X amplifiers and $25\text{-k}\Omega$ probe heads). A differential probe can make higher bandwidth and more accurate measurements on single-ended signals than a single-ended probe and this method of applying offset to only the plus side of a differential probe means there is no sacrificing of offset range.

Case 3. A differential probe head probing a differential signal

For this case, the offset control on the oscilloscope controls the oscilloscope channel offset. The probe offset is not used and set to zero. Since the plus and minus sides of differential signals have the same dc component, it will be subtracted out and the output of the probe will by definition be centered around ground.

The channel offset allows the waveform seen on screen to be moved as desired. The allowable dc component in the plus and minus signals is determined by the common mode range of the probe which for the 113x probe amps and 25 k Ω probe heads is ± 6.75 V.

Slew Rate Requirements for Different Technologies

The following table shows the slew rates for several different technologies. The maximum allowed input slew rate is 18 V/ns for single-ended signals and 30 V/ns for differential signals. **Table 2** shows that the maximum required slew rate for the different technologies is much less than that of the probe.

Table 2 Slew Rate Requirements

Name of Technology	Differential Signal	Max Single-Ended Slew Rate* (V/ns)	Max Differential Slew Rate† (V/ns)	Driver Min Edge Rate (20%-80% ps)	Max Transmitter Level (Diff V)
PCI Express (3GIO)	YES	9.6	19.2	50	1.6
RapidIO Serial 3.125Gb	YES	8.0	16.0	60	1.6
10GbE XAUI (4x3.125Gb)	YES	8.0	16.0	60	1.6
1394b	YES	8.0	16.0	60	1.6
Fibre Channel 2125	YES	8.0	16.0	75	1
Gigabit Ethernet 1000Base-CX	YES	7.8	15.5	85	2.2
RapidIO 8/16 2Gb	YES	7.2	14.4	50	1.2
Infiniband 2.5Gb	YES	4.8	9.6	100	1.6
HyperTransport 1.6Gb	YES	4.0	8.0	113	1.5
SATA (1.5Gb)	YES	1.3	2.7	134	0.6
USB 2.0	YES	0.9	1.8	375	1.1
DDR 200/266/333	NO	7.2	n/a	300	3.6
PCI	NO	4.3	n/a	500	3.6
AGP-8X	NO	3.1	n/a	137	0.7

* The probe specification is 18 V/ns

† The probe specification is 30 V/ns

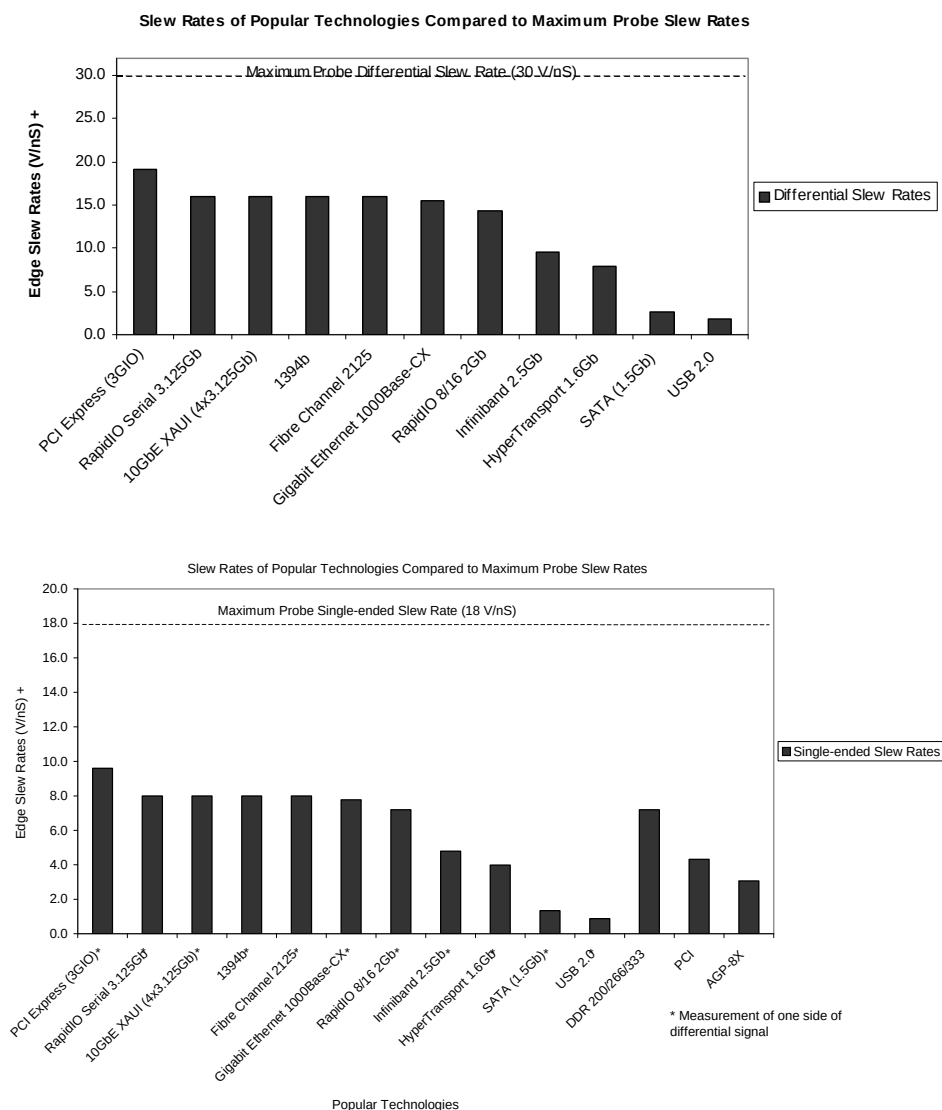


Figure 10 Slew Rates of Popular Technologies Compared to Maximum Probe Slew Rates

$$\frac{\text{Maximum Edge Amplitude} \times 0.6}{\text{Minimum 20\% to 80\% Rise Time}}$$


Available Accessories

This section lists accessories that are available in addition to the probe heads described in [Chapter 2](#), “Using Probe Heads”.


E2668A Single-Ended Connectivity Kit

The optional E2668A single-ended connectivity kit is an accessory that provides the three probe heads shown in [Figure 11](#). A single-ended socket-tip probe head was not developed since it did not offer a significant size advantage. The kit can be ordered at the same time as 1130/1/2/4A probe amplifiers.

E2679A Single-Ended Solder-In (quantity 1)



E2678B Differential Socketed (quantity 1)



E2676A Single-Ended Browser (quantity 1)



Figure 11 E2668A Single-Ended Connectivity Kit (*not to scale*)

Table 3 Supplied Accessories (Sheet 1 of 2)

Description	Qty Supplied	Used With			Part Number *
		E2679A	E2678B	E2676A	
E2679A Single-Ended Solder-In Head	1	–	–	–	–
E2678B Differential Socketed Head	1	–	–	–	–
E2676A Single-Ended Browser	1	–	–	–	–
91Ω resistor for full bandwidth	16	✓			0700-2353
150Ω resistor for medium bandwidth	8	✓			0700-2350
0Ω resistor for full and medium bandwidth	24	✓			0700-2348
91Ω resistor template	2	✓			01131-94311
150Ω resistor template	2	✓			01131-94308
160Ω damped wire accessory	6		✓		01130-21302
82Ω resistor for full bandwidth	48		✓		01130-81506
Socket for 25 mil (25/1000 inch) square pins, female on both ends	4		✓		01131-85201

Table 3 Supplied Accessories (Sheet 2 of 2)


Description	Qty Supplied	Used With			Part Number *
		E2679A	E2678B	E2676A	
25 mil female socket w/20 mil round male pin on other end	4		✓		01131-85202
Heat shrink tubing for square-pin socket accessory	4		✓		01130-41101
Header adapter, 91Ω	2		✓		01130-63201
82Ω resistor template	1		✓		01131-94309
Resistive tip (blue), 91Ω	10			✓	01131-62107
Ergonomic handle	1			✓	01130-43202
Ground collar assembly for single-ended browser	2			✓	01130-60005
Socketed ground lead 6 inches	1			✓	E2676-21301

* Not orderable.


E2669A Differential Connectivity Kit

The optional E2669A differential connectivity kit provides multiple quantities of the three probe heads as shown in **Figure 12**. These probe heads allow full bandwidth probing of differential and single-ended signals. The kit can be ordered at the same time as 1130/1/2/4A probe amplifiers.

E2678B Differential Socketed
(quantity 2)



E2677B Differential Solder-In
(quantity 4)



E2675B Differential Browser
(quantity 1)




Figure 12 E2669A Differential Connectivity Kit (*not to scale*)

Table 4 Supplied Accessories

Description	Qty Supplied	Used With			Part Number *
		E2678B	E2677B	E2675B	
E2678B Differential Socketed Head	2	–	–	–	–
E2677B Differential Solder-In Head	4	–	–	–	–
E2675B Differential Browser	1	–	–	–	–
160Ω damped wire accessory	12	✓			01130-21302
82Ω resistor for full bandwidth	96	✓			01130-81506
Socket for 25 mil (25/1000 inch) square pins, female on both ends	8	✓			01131-85201
25 mil female socket w/20 mil round male pin on other end	8	✓			01131-85202
Heat shrink socket accessory	8	✓			01130-41101
Header adapter, 91Ω	4	✓			01130-63201
82Ω resistor template	1	✓			01131-94309
91Ω resistor for full bandwidth	80		✓		0700-2353
150Ω resistor for medium bandwidth	40		✓		0700-2350
91Ω resistor template	1		✓		01131-94311
150Ω resistor template	1		✓		01131-94308
Resistive tip (blue), 91Ω	20			✓	01131-62107
Ergonomic handle	1			✓	01131-43201

* Not orderable.

NOTE

Resistor performance. The S2 resistors were changed from 100Ω to 91Ω for slightly better performance. Either value produces a response that is well within specifications. If you have some of the older 100Ω resistors, ensure that you use either two 100Ω or two 91Ω resistors. Do not mix them.

N5450B Extreme Temp Cable Extension Kit

The extreme temperature cable extension kit is an accessory that allows an oscilloscope probe to be used to monitor a device in a temperature chamber. Keysight's Infiniimax probe amplifiers have a specified operating temperature range from 5° C to 40° C, but the probe heads can be operated over a much larger range of temperatures. Use the extension cables to physically separate the amplifier from the probe head which allows you to operate the probe head inside a temperature chamber while the probe amplifier remains outside the chamber.



To ensure a high-quality measurement, the N5450B cable set have been phase-matched at the factory. A coupling tag is included with the cables to ensure the cables stay as a matched pair. To install the coupling tag, slip the small end of each cable through the holes in the tag. The tag can be positioned anywhere along the length of the cable and can withstand the temperature ranges specified.

Table 5 Probing Temperature Ranges

Probe Head Configuration*	Temperature Range (°C)	Average Lifetime of the Probe Head (cycles)†
N5381B	-55 to +150	> 250
E2677B	-25 to +80	> 1000
E2678A/B		
N5425B + N5426A		
N5451A		

* Refers to the probe head or tip that is attached to the cable extension kit.

† A cycle is defined to be a temperature sweep from either -55° C to 150° C and then back to -55° C or from -25° C to 80° C and then back to -25° C depending upon the probe head configuration being used.

CAUTION

Avoid rapid changes in temperature that can lead to moisture accumulating in the form of condensation on the probe components, as well as the DUT. If this occurs, wait until the moisture has evaporated before making any measurements.

CAUTION

Additional care must be taken when handling probe heads used during extreme temperature cycling because this process makes the probe heads less robust.

CAUTION

Secure the ends of the extension cable near the probe head in the temperature chamber such that the probe head legs are not tugged or moved around significantly.

CAUTION

Prevent abrasion and tears in the cable's jacket, do not rest the extension cables on any metal objects or objects with sharp edges.

CAUTION

Do not kink the cables. The cables are designed to be flexible, but are not designed to be bent sharply.

NOTE

Keep your extreme temperature testing probes separate from the probes they use under milder conditions. This is because cycling probe heads through extreme temperature ranges has a marked effect on their lifetimes as listed in [Table 5](#). Only the lifetime of the probe head is affected by temperature cycling. The extension cables and probe amplifier should not need to be replaced with extended temperature cycling.

NOTE

Discoloration or texture changes are possible with the extension cables. These changes do not, however, affect the performance or the quality of a measurement.

N2880A InfiniiMax In-Line Attenuator Kit

The in-line attenuators are an accessory for the probes. The dynamic ranges of the 1130A-series probes are 5 Vp-p. If you need to measure larger signals, the architecture of the InfiniiMax probes allows you to add the N2880A InfiniiMax In-Line Attenuators between the probe head and the probe amplifier to increase the dynamic range (see picture below). Additionally, these attenuators enable you to increase the offset range of the probe (see the table below). When using the N2880A In-Line Attenuators, the bandwidth and rise time of your probing system is not affected. There is, however, a trade-off in noise (see table below) and in the accuracy of DC offset relative to the input.



Figure 13 Placement of Attenuators Between Probe Amplifier and Head

The maximum input voltage of the InfiniiMax probe heads is ± 30 Vdc (depending on the frequencies of your signal, the maximum allowed slew rate (see table below) may require that the maximum input voltage magnitude be less than 30V), so they should not be used to measure signals that exceed this range. This places a practical limit of 20 dB on the attenuators used with the InfiniiMax probing system. Larger attenuation ratios will only degrade the noise performance and gain of the system.

The N2880A kit consists of 3 pairs of attenuators (6 dB, 12 dB, and 20 dB). These attenuators come as matched pairs and should only be used with each other. If you look on each attenuator, you will see a serial number. The pair of matching attenuators in each set will have the same four digit numeric prefix and will differ by the last letter (one attenuator in the matched pair will be labeled A and the other will be labeled B).

All InfiniiMax probe heads and amplifiers are compatible with the N2880A In-Line Attenuators. However, due to the N5380B dual-SMA probe head's maximum input voltage specification of 2.28 V_{RMS}, the N5380B is not suitable for measuring signals large enough to require an added attenuator.

Table 6 N2880A With 1130A-Series Probe Amplifiers

Added Attenuator	Dynamic Range	Offset Range	Typical Noise Referred to	Maximum Allowed Input Slew Rate* (se = single-ended) (diff = differential)	Nominal DC Attenuation of Probe System
None	5 Vp-p	±12 V	3 mV RMS	se: 18 V/ns, diff: 30 V/ns	10:1
6 dB (2:1)	10 Vp-p	±24 V	7.8 mV RMS	se: 36 V/ns, diff: 60 V/ns	20:1
12 dB (4:1)	20 Vp-p	±30 V [†]	16.7 mV RMS	se: 72 V/ns, diff: 120 V/ns	40:1
20 dB (10:1)	50 Vp-p	±30 V*	41.7 mV RMS	se: 180 V/ns, diff: 300 V/ns	100:1

* These slew rate do not apply when the N5380B SMA probe head is used with the InfiniiMax amplifiers.

† The actual range of DC voltage for these attenuators is greater than +/- 30 V, but the usable range of DC voltage at the probe input is limited to ±30 Vdc. Also, depending on the frequencies of your signal, the maximum allowed slew rate may require that the maximum input voltage magnitude be less than 30 V.

NOTE

The values shown above do not apply to the N5380B dual-SMA probe head. Due to the maximum input voltage specification of 2.28 V_{RMS} for the N5380B, it is not suitable for measuring signals large enough to require an added attenuator.

The software in the Infiniium and InfiniiVision oscilloscopes will detect a probe when it is connected and by default will assume that no additional attenuators are installed. If you want to scale readings and settings on the oscilloscope so they are correct with the attenuators installed, refer to the procedures below for your specific oscilloscope series.

Configuring Attenuators on a Infiniium Scope

You cannot calibrate your InfiniiMax probes with the attenuators attached. Calibrate the InfiniiMax probes as you normally would (with no attenuators), configure the attenuators as discussed in the next section, and begin probing.

First, plug your InfiniiMax probe amplifier / probe head into one of the oscilloscope channels with the attenuators connected. Then enter the Probe Setup dialog box (can be reached via Setup > Probes on the oscilloscope menu). Press the Configure

Probing System button. A pop-up window will appear where you can select External Scaling. Click the Decibel radio button under the External Scaling section and then set the Gain field to either –6 dB, –12 dB, or –20 dB depending on the attenuator you are using (be sure to include the negative sign). Finally, you will need to manually set the Offset field in this dialog box to zero out the signal.

Calibrating Probe with Attenuators on a InfiniiVision Scope


The following instructions only apply if you have InfiniiVision software release 5.25 or newer installed on your oscilloscope.

- 1 Plug your InfiniiMax probe amplifier / probe head into one of the oscilloscope channels with the attenuators attached.
- 2 Press the Channel on/off key to turn the channel on (if the channel is off).
- 3 Press the Probe softkey in the Channel menu. A series of probe related softkeys will appear.
- 4 Repeatedly press the second softkey from the left softkey until the probe head selection matches the attenuator you are using. The choices are:
 - 10:1 single-ended browser
 - 10:1 differential browser
 - 10:1 (+6 dB Atten) single-ended browser
 - 10:1 (+6 dB Atten) differential browser
 - 10:1 (+12 dB Atten) single-ended browser
 - 10:1 (+12 dB Atten) differential browser
 - 10:1 (+20 dB Atten) single-ended browser
 - 10:1 (+20 dB Atten) differential browser

Once the probe head configuration has been selected, you can press the Calibration key in the same probe menu and follow the on-screen instructions to calibrate the probe/attenuator setup.

Frequency Response Plots

Figure 14 on page 27 shows the frequency response plots for four setups: the probe without any attenuators, the probe with the 6 dB attenuators, the probe with the 12 dB attenuators, and the probe with the 20 dB attenuators.

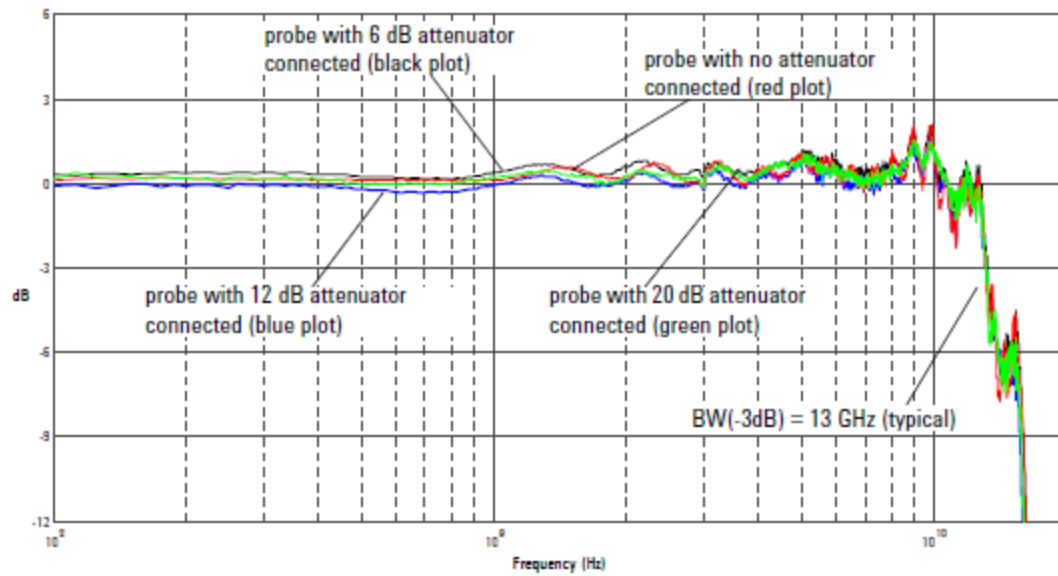

Red = $\text{dB}(V_{\text{out}}/V_{\text{in}}) + 10.8 \text{ dB of probe}$

Black = $\text{dB}(V_{\text{out}}/V_{\text{in}}) + 6\text{dB attenuator} + 10.8 \text{ dB}$

Blue = $\text{dB}(V_{\text{out}}/V_{\text{in}}) + 12 \text{ dB attenuator} + 10.8 \text{ dB of probe}$

Green = $\text{dB}(V_{\text{out}}/V_{\text{in}}) + 20 \text{ dB attenuator} + 10.8 \text{ dB of probe}$

Figure 14 Frequency Response

N2881A InfiniiMax DC Blocking Caps

The DC blocking capacitors are an accessory for the probes. The architecture of the InfiniiMax probing system allows you to place the N2881A DC Blocking Caps in between the probe amplifier and the probe head (as shown in the picture below). These N2881A InfiniiMax DC Blocking Caps block out the DC component of the input signal (up to 30 Vdc). The N2881A InfiniiMax DC Blocking Caps can be used with the N2880A In-Line Attenuators. The order of the two products in the probing system (i.e. which one is closest to the probe amplifier) does not matter.



Figure 15 Placement of DC Blocking Caps Between Probe Amplifier and Head

Figure 16 on page 28 shows the frequency response plot of the N2881A DC Blocking Caps (no probe included).

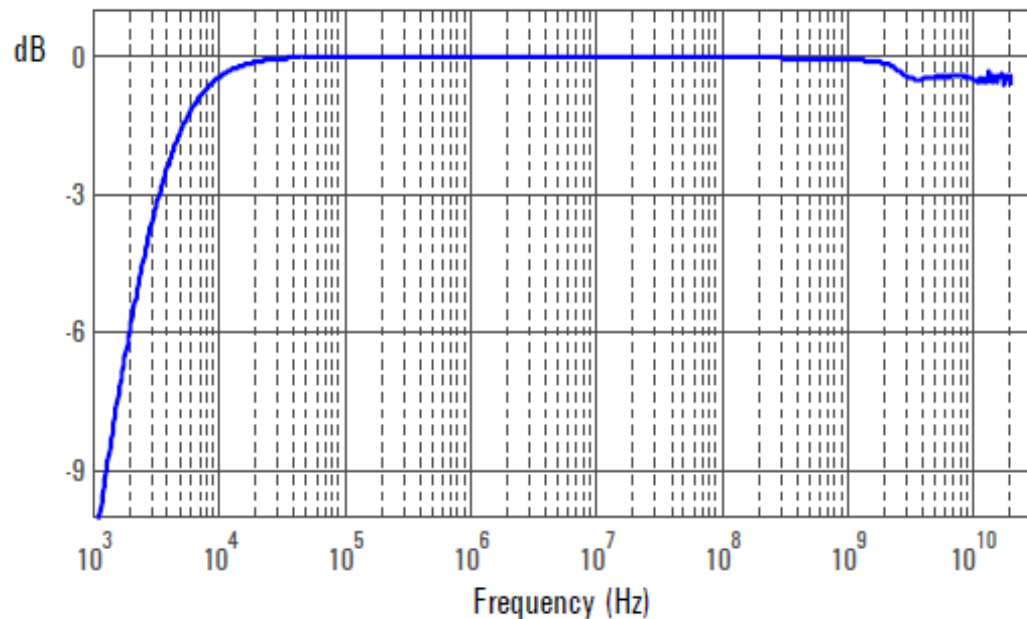


Figure 16 Graph of DC Blocking Cap insertion loss (S2,1) versus frequency (DC Blocking Cap only)

Safety Information



This manual provides information and warnings essential for operating this probe in a safe manner and for maintaining it in safe operating condition. Before using this equipment and to ensure safe operation and to obtain maximum performance from the probe, carefully read and observe the following warnings, cautions, and notes.

This product has been designed and tested in accordance with accepted industry standards, and has been supplied in a safe condition. The documentation contains information and warnings that must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

Note the external markings on the probe that are described in this document.

To avoid personal injury and to prevent fire or damage to this product or products connected to it, review and comply with the following safety precautions. Be aware that if you use this probe assembly in a manner not specified, the protection this product provides may be impaired.

WARNING**Use Only Grounded Instruments.**

Do not connect the probe's ground lead to a potential other than earth ground. Always make sure the probe and the oscilloscope are grounded properly.

WARNING**Connect and Disconnect Properly.**

Connect the probe to the oscilloscope and connect the ground lead to earth ground before connecting the probe to the circuit under test. Disconnect the probe input and the probe ground lead from the circuit under test before disconnecting the probe from the oscilloscope.

WARNING**Observe Probe Ratings.**

Do not apply any electrical potential to the probe input which exceeds the maximum rating of the probe. Make sure to comply with the voltage versus frequency derating curve found in this manual.

WARNING**Indoor Use Only.**

Do not operate in wet/damp environments. Keep product surfaces dry and clean.

WARNING**Do Not Operate With Suspected Failures. Refer to qualified service personnel.**

WARNING

Never leave the probe connected to a conductor while it is not connected to an oscilloscope or voltage measuring instrument.

WARNING

Do not use a probe which is cracked, damaged or has defective leads.

WARNING

Do not install substitute parts or perform any unauthorized modification to the probe.

WARNING

Do not operate the probe or oscilloscope in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

WARNING

Do not use the probe or oscilloscope in a manner not specified by the manufacturer.

WARNING

Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

CAUTION

The probe cable is a sensitive part of the probe and, therefore, you should be careful not to damage it through excessive bending or pulling. Avoid any mechanical shocks to this product in order to guarantee accurate performance and protection.

Concerning the Oscilloscope or Voltage Measuring Instrument to Which the Probe is Connected

WARNING

Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.

WARNING

If you energize the instrument by an auto transformer (for voltage reduction or mains isolation), the ground pin of the input connector terminal must be connected to the earth terminal of the power source.

WARNING

Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.

WARNING

Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuse holders. To do so could cause a shock or fire hazard.

WARNING

Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.

Service

The following symptoms may indicate a problem with the probe or the way it is used. The probe is a high frequency device with many critical relationships between parts. For example, the frequency response of the amplifier on the hybrid is trimmed to match the output coaxial cable. As a result, to return the probe to optimum performance requires factory repair. If the probe is under warranty, normal warranty services apply.

Probe Calibration Fails

Probe calibration failure with an oscilloscope is usually caused by improper setup. If the calibration will not pass, check the following:

- Check that the probe passes a waveform with the correct amplitude.
- If the probe is powered by the oscilloscope, check that the offset is approximately correct. The probe calibration cannot correct major failures.
- Be sure the oscilloscope passes calibration without the probe.

Incorrect Pulse Response (flatness)

If the probe's pulse response shows a top that is not flat, check for the following:

- Output of probe must be terminated into a proper 50Ω termination. If you are using the probe with an Infiniium oscilloscope, this should not be a problem. If you are using the probe with other test gear, ensure the probe is terminated into a low reflectivity 50Ω load ($\sim \pm 2\%$).
- If the coax or coaxes of the probe head in use has excessive damage, then reflections may be seen within ~ 1 ns of the input edge. If you suspect a probe head, swap it with another probe head and see if the non-flatness problem is fixed.
- If the one of the components in the tip have been damaged there may be a frequency gain non-flatness at around 40 MHz. If you suspect a probe head, swap it with another probe head and see if the non-flatness problem is fixed.

Incorrect Input Resistance

The input resistance is determined by the probe head in use. If the probe head is defective, damaged, or has been exposed to excessive voltage, the input resistor may be damaged. If this is the case, the probe head is no longer useful. A new probe head will need to be obtained either through purchase or warranty return.

Incorrect Offset

Assuming the probe head in use is properly functioning, incorrect offset may be caused by defect or damage to the probe amplifier or by lack of probe calibration with the oscilloscope.

Returning the Probe for Service

If the probe is found to be defective we recommend sending it to an authorized service center for all repair and calibration needs. Perform the following steps before shipping the probe back to Keysight Technologies for service.

- 1 Contact your nearest Keysight sales office for information on obtaining an RMA number and return address.
- 2 Write the following information on a tag and attach it to the malfunctioning equipment.
 - Name and address of owner
 - Product model number (for example, 1130A)
 - Product Serial Number (for example, MYXXXXXXXX)
 - Description of failure or service required

NOTE

Include probing and browsing heads if you feel the probe is not meeting performance specifications or a yearly calibration is requested.

- 3 Protect the probe by wrapping in plastic or heavy paper.
- 4 Pack the probe in the original carrying case or if not available use bubble wrap or packing peanuts.
- 5 Place securely in sealed shipping container and mark container as "FRAGILE".

NOTE

If any correspondence is required, refer to the product by serial number and model number.

Contacting Keysight Technologies

For technical assistance, contact your local Keysight Call Center.

- In the Americas, call 1 (800) 829-4444
- In other regions, visit <http://www.keysight.com/find/assist>

Before returning an instrument for service, you must first call the Call Center at 1 (800) 829-4444.

2 Using Probe Heads

Recommended Configurations at a Glance	36
1. E2677B Differential Solder-in Head with Full BW Resistors	38
2. E2678B Differential Socketed Head	40
3. E2675B Differential Browser	43
4. N5380B SMA Head	46
5. N2851A QuickTip Probe Head	49
6. E2679A Single-Ended Solder-In Head	53
7. E2676A Single-Ended Browser	54
8. E2677B Differential Solder-In Head with Medium BW Resistors	56
9. E2679A Single-Ended Solder-In Head with Long Wire	58
10. E2678B Differential Socketed Head with Damped Wire Accessory	60
11. E2678B Differential Socketed Head with Header Adapter	62
Replacing Resistors on E2677B/9A Solder-In Probe Heads	63

NOTE

Graphs showing the performance of the heads for each probe amplifier are shown in [Chapter 5](#), [Chapter 6](#), [Chapter 7](#), and [Chapter 8](#).

This chapter describes the various probe heads. The probe configurations are listed in the order of the best performance to the least performance. The recommended configurations are designed to give the best probe performance for different probing situations. This allows you to quickly make the measurements you need with confidence in the performance and signal fidelity. Using the recommended connection configurations is your key to making accurate oscilloscope measurements with known performance levels.

Recommended Configurations at a Glance

Table 7 Configurations at a Glance (Sheet 1 of 2)

Recommended Order of Use	BW (GHz)	Cdiff * (pF)	Cse † (pF)	Usage
E2677B Differential Solder-In (full bandwidth resistors) (Refer to page 38 .)				
1	1134A: > 7 1132A: >5 1131A: >3.5 1130A: >1.5	0.27	0.44	Differential and Single-ended signals Solder-in hands free connection Hard to reach targets Very small fine pitch targets Characterization
E2678B Differential Socketed (full bandwidth resistors) (Refer to page 40 .)				
2	1134A: > 7 1132A: > 5 1131A: ~3.5 1130A: >1.5	0.34	0.56	Differential and Single-ended signals Removable connection using solder-in resistor pins Hard to reach targets
E2675B Differential Browser (Refer to page 43 .)				
3	1134A: ~ 6 1132A: > 5 1131A: ~3.5 1130A: >1.5	0.32	0.57	Differential and Single-ended signals Hand-held browsing Probe holders General purpose troubleshooting Ergonomic handle available
N5380B Differential SMA Head (Refer to page 46 .)				
4	1134A: >6 1132A: > 5 1131A: >3.5 1130A: >1.5	N/A	N/A	Full bandwidth Preserve oscilloscope channels as opposed to using the A minus B mode. Removes inherent cable loss through compensation. Common mode termination voltage can be applied Offset matched sma cables adapt to variable spacing
N2851A QuickTip Probe Head (Refer to page 49 .)				
5	1134A: = 7 1132A: = 5 1131A: = 3.5 1130A: = 1.5	340 fF	200 fF	Easy, secure magnetic connection between head and tip. Use N2848A and N2849A with InfiniiMax III+ amplifier for InfiniiMode function.
E2679A Single-Ended Solder-In (full bandwidth resistors) (Refer to page 53 .)				
6	1134A: ~ 5.2 1132A: > 5 1131A: ~ 3.5 1130A: >1.5	N/A	0.50	Single-ended signals only Solder-in hands free connection when physical size is critical Hard to reach targets Very small fine pitch targets

Table 7 Configurations at a Glance (Sheet 2 of 2)

Recommended Order of Use	BW (GHz)	Cdiff [*] (pF)	Cse [†] (pF)	Usage
E2676A Single-Ended Browser (Refer to page 54.)				
7	1134A: ~ 5.5 1132A: > 5 1131A: ~3.5 1130A: > 1.5	N/A	0.65	Single-ended signals only Hand or probe holder where physical size is critical General purpose troubleshooting Ergonomic handle available
E2677B Differential Solder-In (medium bandwidth resistors) (Refer to page 56.)				
8	1134A: ~ 2.9 1132A: ~ 2.9 1131A: ~ 2.9 1130A: > 1.5	0.33	0.52	Differential and Single-ended signals Solder-in hands free connection Larger span and reach than #1 Very small fine pitch targets
E2679A Single-Ended Solder-In with Long Wire (Refer to page 58.)				
9	1134A: ~ 2.2 1132A: ~ 2.2 1131A: ~ 2.2 1130A: > 1.5	N/A	0.58	Single-ended signals only Solder-in hands free connection when physical size is critical Larger span and reach than #4 Hard to reach targets Very small fine pitch targets
E2678B Differential Socketed with Damped Wire Accessory (Refer to page 60.)				
10	1134A: ~ 1.2 1132A: ~ 1.2 1131A: ~ 1.2 1130A: ~ 1.2	0.63	0.95	Differential and Single-ended signals For very wide spaced targets Connection to 25 mil square pins when used with supplied sockets
E2678B Differential Socketed with Header Adapter (Refer to page 62.)				
11	1134A: ~ 1.2 1132A: ~ 1.2 1131A: ~ 1.2 1130A: ~ 1.2	0.70	0.97	Differential and Single-ended signals For very wide spaced targets Connection to 25 mil square pins when used with supplied sockets

* Capacitance seen by differential signals

† Capacitance seen by single-ended signals

1. E2677B Differential Solder-in Head with Full BW Resistors



This probe configuration provides the full bandwidth signals and the lowest capacitive loading for measuring both single-ended and differential signals.

This head allows a soldered connection into a system for a reliable, hands-free connection. At the tip it uses a miniature axial lead resistor with 8 mil diameter leads which allows connection to very small, fine pitch targets.




Table 8 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	>3.5	1134A	>7

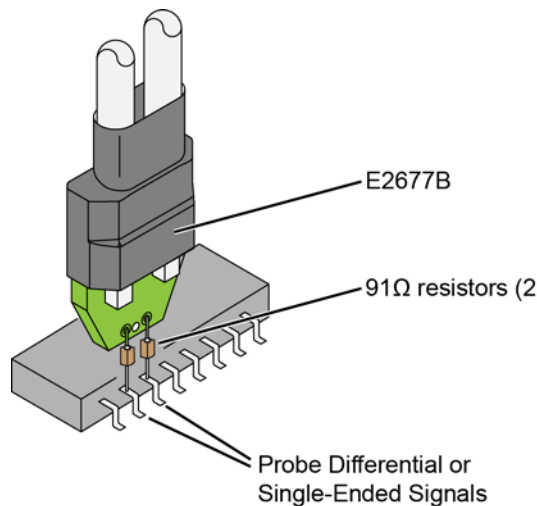


Figure 17 E2677B

The probe head resistors must be soldered to the circuit that you are measuring. Because of the small size of the resistor leads, it is easy to solder them to very small geometry circuits.

NOTE

To install or repair resistor leads. Refer to **“Replacing Resistors on E2677B/9A Solder-In Probe Heads”** on page 63”.

NOTE

Performance plots. Refer to **Chapter 5**, “1130A Performance Data Plots, **Chapter 6**, “1131A Performance Data Plots, **Chapter 7**, “1132A Performance Data Plots, and **Chapter 8**, “1134A Performance Data Plots.

CAUTION

Do not solder in resistor leads with a big ball of solder right next to the resistor body. Normally the nickel lead will limit the heat transfer to the resistor body and protect the resistor, but if a ball of solder is right next to the resistor body on the lead, the resistor may come apart internally.

CAUTION

When soldering leads to DUT always use plenty of flux. The flux will ensure a good, strong solder joint without having to use an excessive amount of solder.

CAUTION

Strain relieve the micro coax leading away from the solder-in tips using hook-and-loop fasteners or adhesive tape to protect delicate connections.

NOTE

Before using the resistors, the resistor wires must be cut to the correct dimensions. For the correct dimensions see **"Replacing Resistors on E2677B/9A Solder-In Probe Heads"** on page 63".


Table 9 Supplied Accessories

Description	Qty Supplied	Part Number
91Ω resistor for full bandwidth	20	0700-2353 (not orderable)
150Ω resistor for medium bandwidth	10	0700-2350 (not orderable)
91Ω resistor template	1	01131-94311 (not orderable)
150Ω resistor template	1	01131-94308 (not orderable)

2. E2678B Differential Socketed Head



This probe configuration allows a removable, hands-free connection that provides full bandwidth with a minor increase in capacitance over the probe head for probing differential and single-ended signals. Additionally, 3.6 cm resistor tip wire accessories are provided for high fidelity lower bandwidth probing of signals with very wide spacing. It is recommended that a 25 mil diameter plated through hole on the board for mounting the lead resistors.



NOTE

The E2678B is a direct replacement for the E2678A that provides a more robust connection between the E2678B head's socket and printed circuit board. The E2678B's performance and fit are identical to that of the E2678A.

Table 10 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	~3.5	1134A	>7

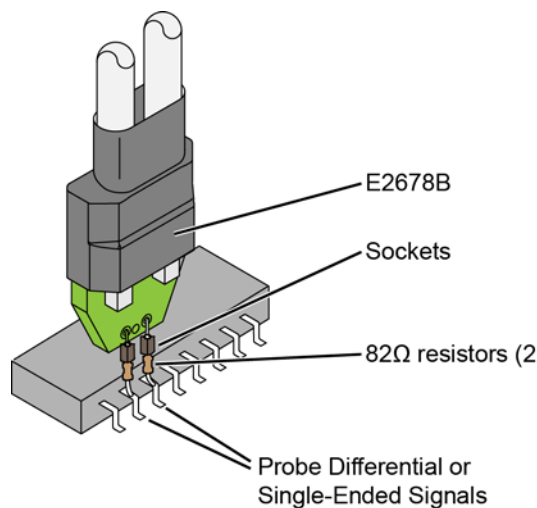


Figure 18 E2678B

The 82Ω axial lead resistors are soldered to the circuit that you are measuring. The socketed differential probe head is plugged onto the resistors. This makes it easier to move the probe from one location to another. Because of the larger size of the resistor leads, the target for soldering must be larger than the solder-in probe heads.

NOTE

To install or repair resistor leads. Refer to the information found in this section.

NOTE

Performance plots. Refer to [Chapter 5](#), “1130A Performance Data Plots,” [Chapter 6](#), “1131A Performance Data Plots,” [Chapter 7](#), “1132A Performance Data Plots,” and [Chapter 8](#), “1134A Performance Data Plots.”

PC Board Target Dimensions

The spacing for the socketed tip differential probe head is 0.100 inch (2.54 mm). For soldering on a PC board, the targets can be two vias that can accept the 0.020 inch (0.508 mm) diameter resistor leads. A via of 0.025 inch (0.635 mm) diameter is recommended. If soldering a resistor lead to a surface pad on your PC board, the resistor leads can be bent in an "L" shape and soldered down. A pad size of at least 0.030 x 0.030 inch (0.762 mm x 0.762 mm) is recommended.

Shaping the Resistors

Before installing the 82Ω resistors (01130-81506) onto your device under test, the resistor wires must be trimmed using diagonal cutters and bent to the correct dimensions as shown in [Figure 19](#). Use tweezers, to place the resistor body inside the rectangle of the supplied trim guage. Use diagonal cutters to trim the leads even with the trim lines.

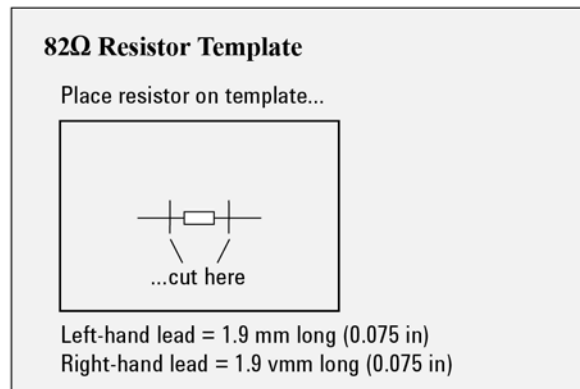


Figure 19 Resistor Trim Dimensions and Trim Guage

Table 11 Supplied Accessories

Description	Qty Supplied	Part Number
160 Ω damped wire accessory	6	01130-21302
82 Ω resistor for full bandwidth	48	01130-81506 (not orderable)
Socket for 25 mil (25/1000 inch) square pins, female on both ends	4	01131-85201 (not orderable)
25 mil female socket w/20 mil round male pin on other end	4	01131-85202 (not orderable)
Heats hrink socket accessory	4	01130-41101 (not orderable)
Header adapter, 91 Ω	2	01130-63201
82 Ω resistor template	1	01131-94309

3. E2675B Differential Browser



The E2675B differential browser configuration is the best choice for general purpose troubleshooting of a circuit board. This probe head provides the highest performance hand-held browser for measuring differential and single-ended signals while maintaining excellent usability due to the adjustable tip spacing and full z-axis compliance. The tab on the side of the probe allows the probe tips to be adjusted for different circuit geometries.




Table 12 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	~3.5	1134A	>6

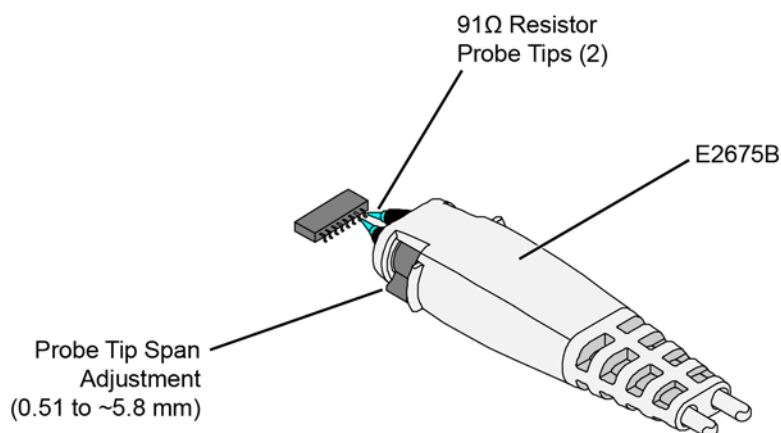


Figure 20 Differential Browser

NOTE

Performance plots. Refer to [Chapter 5](#), “1130A Performance Data Plots,” [Chapter 6](#), “1131A Performance Data Plots,” [Chapter 7](#), “1132A Performance Data Plots,” and [Chapter 8](#), “1134A Performance Data Plots.”

CAUTION

Do not use the E2675B probe head as a tool to scrape solder mask or other items off of a circuit board. The blue tips can easily be broken off if the browser is not used properly. Always hold the probe head so that the blue tips remain vertical during measurements as shown in [Figure 21](#).



Figure 21 Proper Vertical Orientation of the Blue Tips

When holding the E2675B for extended periods of time, use the supplied ergonomic handle. **Figure 22** on page 44 and **Figure 23** on page 44 show how to attach and remove the handle from the probe head.

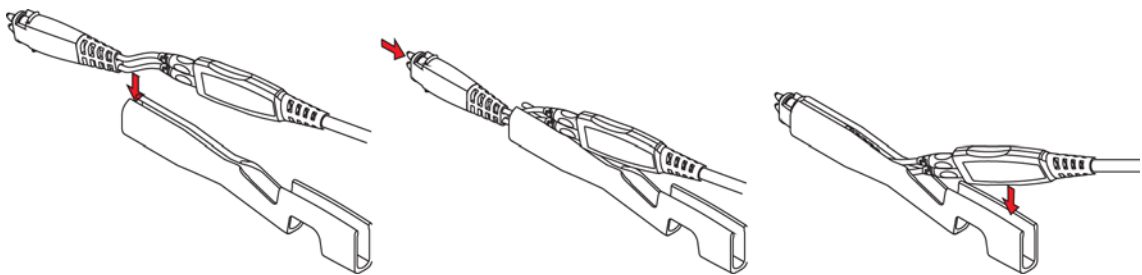


Figure 22 Inserting the Probe

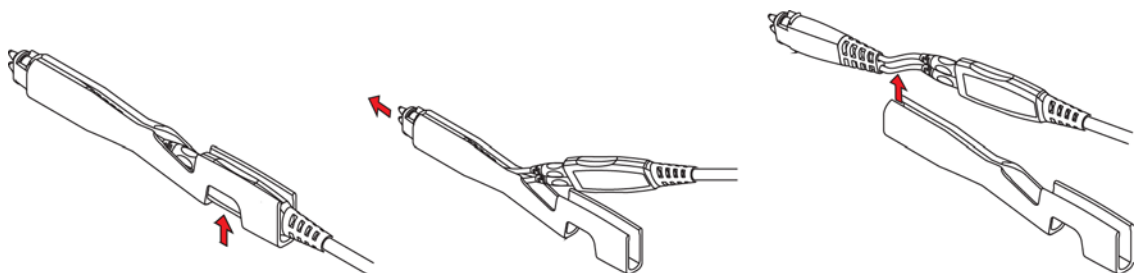


Figure 23 Removing the Probe

Table 13 Supplied Accessories

Description	Qty Supplied	Part Number
Resistive tip (blue), 91 Ω	20	01131-62107
Ergonomic handle	1	01131-43201

4. N5380B SMA Head

The N5380B SMA probe head provides the highest bandwidth for connecting to SMA connectors. The input resistance is 50Ω on both inputs. A shorting cap connects one side of both resistances to ground. For applications that require the resistances to be referenced to a voltage other than ground, the shorting cap can be removed and a dc voltage can be applied.



NOTE

The E2695A 8 GHz SMA head for InfiniiMax I probe amplifiers was discontinued in December 2013 and replaced by the N5380B 12 GHz SMA head.

Table 14 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	~3.5	1134A	>5.2

NOTE

Performance plots. Refer to **"N5380B SMA Probe Head"** on page 186".

Disconnecting the N5380B

When disconnecting a probe amplifier from the N5380B SMA probe head, grasp the probe amplifier as shown in **Figure 24** on page 46 and pull it straight away from the SMA probe head without any rocking (either side-to-side or up-and-down).

CAUTION

Pulling on the probe amplifier cable or strain relief, or rocking the probe amplifier to remove it, may damage the probe head or probe amplifier.

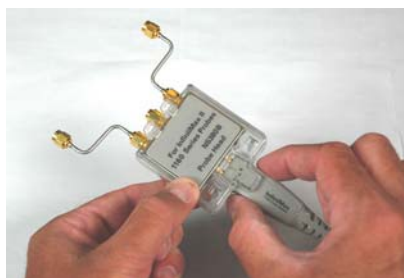


Figure 24 Disconnecting the N5380B

N5380A/B Head Support

The probe amplifier can become damaged if the N5380A/B does not have an N5380-64701 SMA head support attached. N5380B heads come with the SMA head support already attached. For older N5380A heads, the head support can be ordered. As shown in **Figure 25**, the current design of the N5380-64701 has been changed from the original design. The original design is no longer offered. Both the original and new design provide the same level of protection for the probe amplifier and can be attached to both N5380B and N5380A heads.

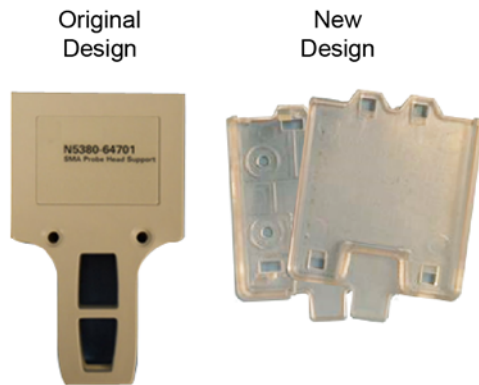


Figure 25 Original and New Head Support Designs

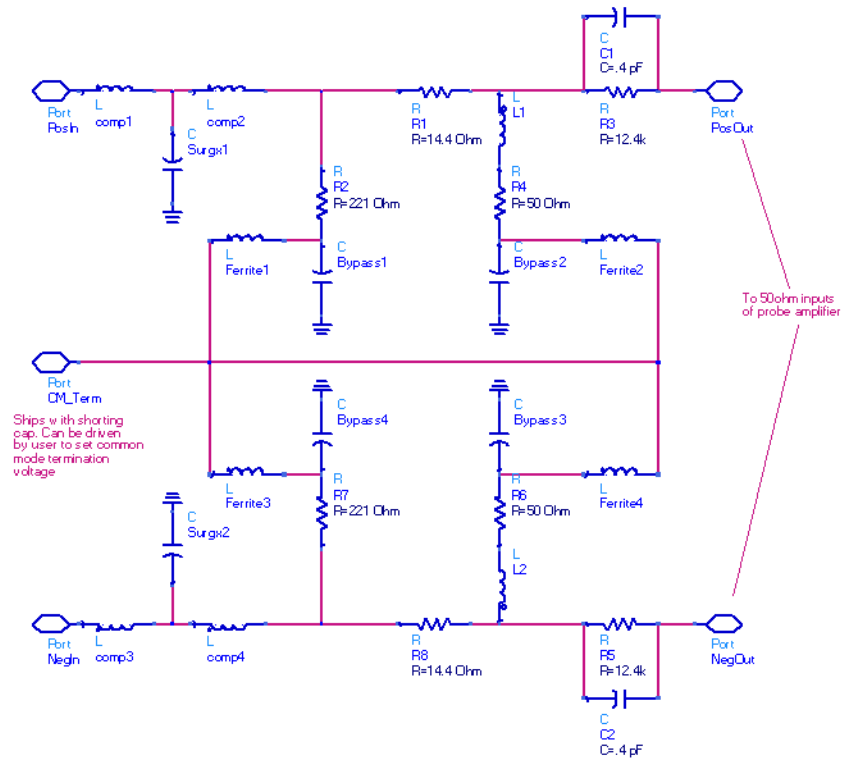


Figure 26 N5380B Schematic

5. N2851A QuickTip Probe Head

The N2851A QuickTip probe head is used with an N2849A QuickTip and together they provide the following advantages:



- Easy-to-make secure magnetic mechanical connection between the probe head and QuickTip. Three magnets in the head connect the two sides of a differential signal and a ground. No latch lever is used!

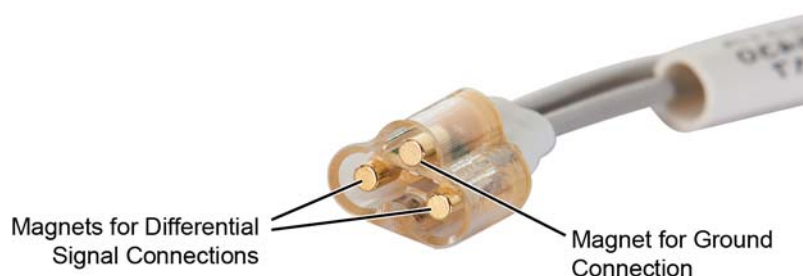


Figure 27 Magnet Connections in Probe Head

- Extreme temperature environments such as temperature chambers.

Table 15 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	1.5	1132A	5
1131A	3.5	1134A	7

Permanently solder any number of QuickTips to your DUT as shown in **Figure 28** on page 50. Because the probe head is magnetically connected (instead of mechanically connected) to the QuickTip, you can effortlessly connect and disconnect to each QuickTip. For best performance, position the QuickTip vertically on the DUT. The N2849A QuickTip has two signal leads and two ground leads. The ground leads have minimal effect on your differential measurements. However, if you are making only differential measurements you can optionally cut off the ground leads or fold them out of the way. Be aware that without the ground leads, the mechanical stability of the QuickTip will be reduced and you will need to stabilize the probe head.

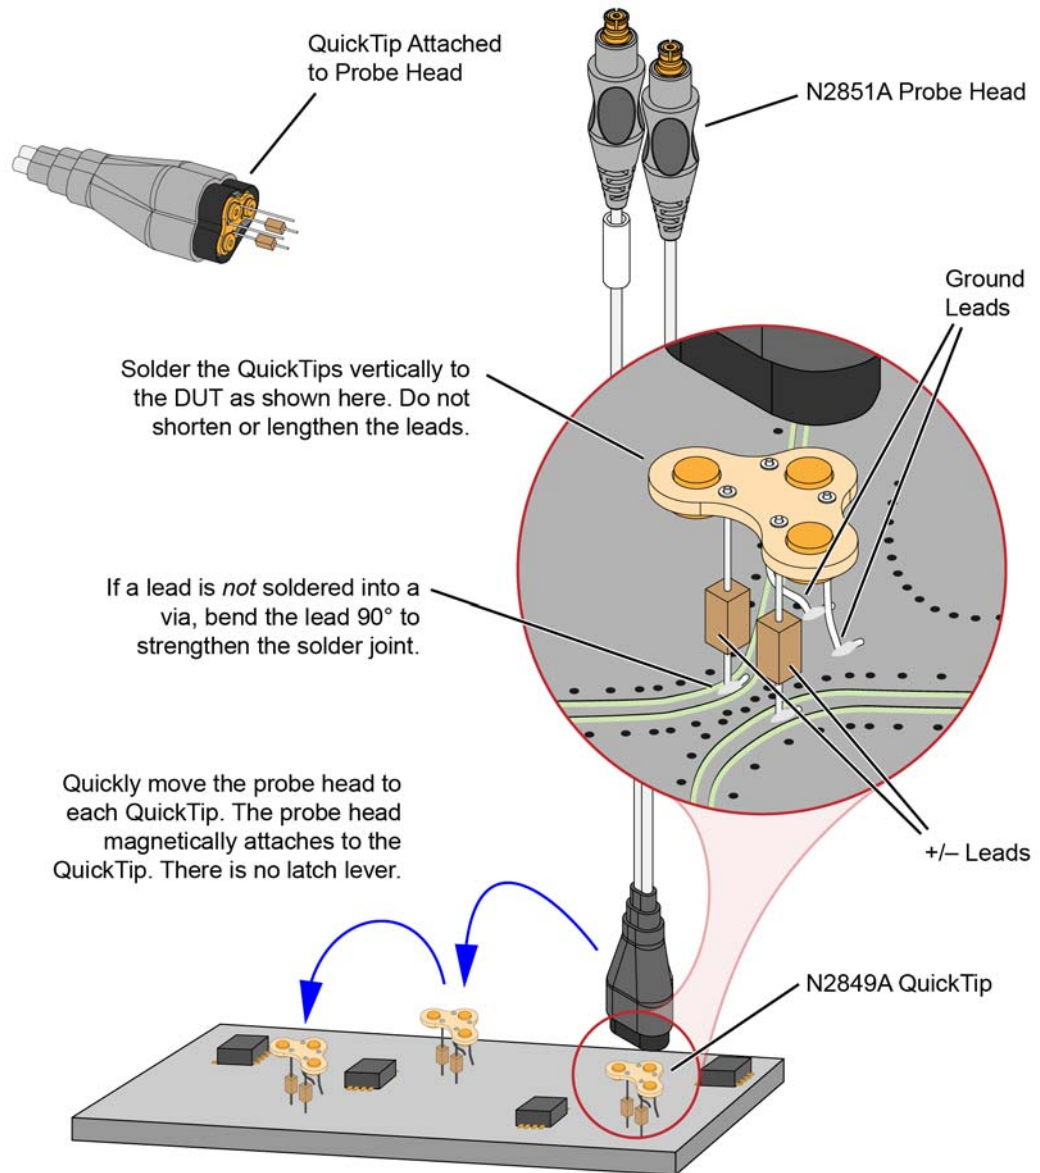


Figure 28 Probing with the N2851A Probe Head and N2849A QuickTip

NOTE

N2849A QuickTips are also compatible with N2848A QuickTip InfiniiMode Probe Heads, which are designed for N2800/1/2/3A, N2830/1/2A, and N7000/1/2/3A probes.

CAUTION

Do not replace or repair the N2849A QuickTip's resistor or ground leads. Attempting to do so will damage the ability of the tip to mate with the N2851A probe head.

NOTE

The N2851A does not include any N2849A QuickTips. The N2849A must be ordered separately.

NOTE

Before connecting the QuickTip head to the tip, use the tack-putty (N5439-65201) included with the N2848A QuickTip probe head or the N2787A 3D probe positioner for securing the probe amplifier to a rigid body near the DUT.

Connecting a QuickTip to the DUT

Use the following tips when soldering the QuickTips to your DUT:

- Orient the QuickTip vertically as shown in **Figure 28** on page 50.
- Solder the four leads to vias or surfaces.

CAUTION

Always mechanically strain-relieve the QuickTip head *before* using to protect both your probe accessories and DUT from damage.

NOTE

Resistor and wire leads on the QuickTip are factory trimmed to the proper length for use. Adding wire length to the tip of the mini-axial lead resistors or to the ground leads will degrade the performance of the probe.

NOTE

Soldering the ground wires is not required when making differential or single-ended (+ or – leads) measurements.

- When soldering to a via, always trim the lead close to the via's underside.
- If a lead is to be soldered to a surface and *not* a via, make a stronger solder joint by bending the end of the lead 90°. For signal leads, bend the wire approximately half way between the resistor and the end of the wire. Bend the ground leads at about the same distance.

CAUTION

Be careful not to damage the tip wires when handling the QuickTips. Wires can be carefully reshaped with tweezers or fingers if necessary.

CAUTION

The QuickTips are very fragile. They must be manufactured in this way in order to meet the high-performance, high bandwidth applications they are intended for. Be extremely careful when handling.

Cleaning the Magnetic Connections

If the three magnetic connections in the head become dirty, clean the connections using the following steps:

- 1 Use compressed air or a cloth to remove any loose dirt.
- 2 Gently rub a small piece of tack putty (supplied with the probe) against the magnetic connections to clean off any remaining surface grime.

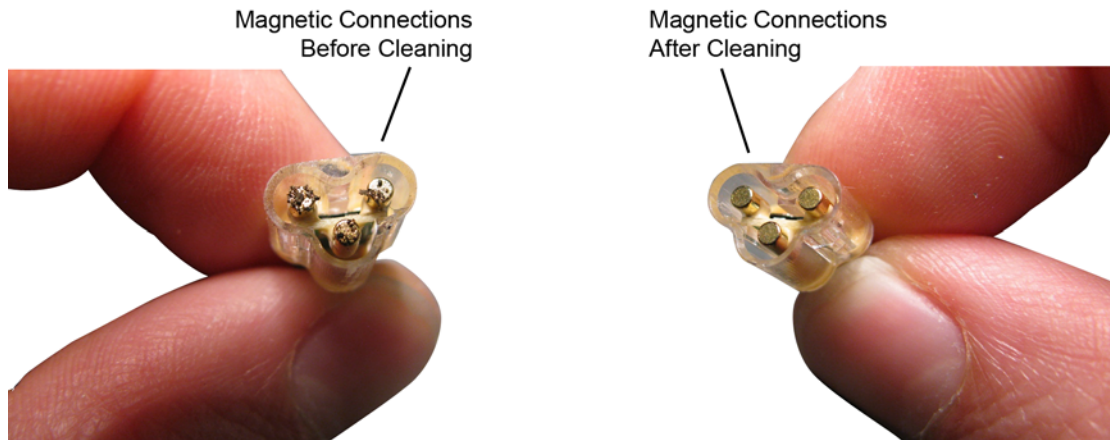


Figure 29 N2851A Head Before and After Cleaning

6. E2679A Single-Ended Solder-In Head



The E2679A probe head provides good bandwidth measurements of single-ended signals only with a probe head that is physically very small. The probe head resistors must be soldered to the circuit that you are measuring. Because of the small size of the resistor leads, it is easy to solder them to very small geometry circuits.

Table 16 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	~3.5	1134A	>5.2

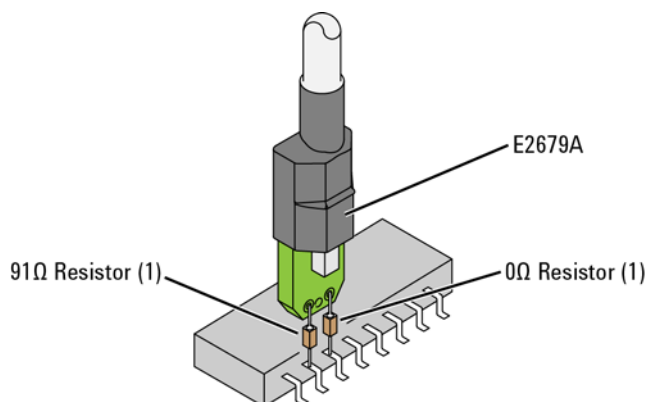


Figure 30 E2679A

NOTE

To install or repair resistor leads. Refer to [“Replacing Resistors on E2677B/9A Solder-In Probe Heads”](#) on page 63”.

NOTE

Performance plots. Refer to [Chapter 5](#), “1130A Performance Data Plots, [Chapter 6](#), “1131A Performance Data Plots, [Chapter 7](#), “1132A Performance Data Plots, and [Chapter 8](#), “1134A Performance Data Plots.

7. E2676A Single-Ended Browser



The E2676A single-ended browser is a good choice for general purpose probing of single-ended signals when physical size is critical. This browser has lower bandwidth than the differential browser, but is very small which allows probing in tight areas.

Table 17 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	>5
1131A	~3.5	1134A	>5.5

For wider span, non-performance critical browsing (rise times greater than ~0.5 ns), the E2676-21301 socketed ground lead can be used in place of the 01130-60005 ground collar.

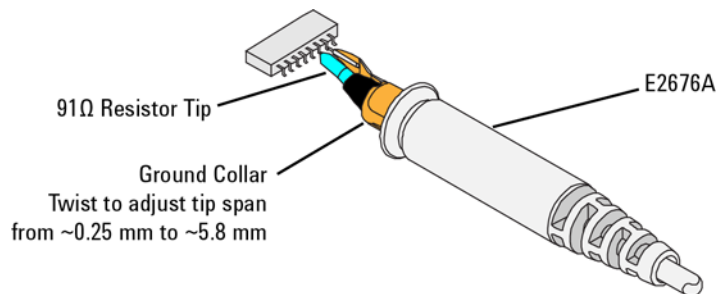


Figure 31 E2676A

When holding the E2675B for extended periods of time, use the supplied ergonomic handle. **Figure 32** and **Figure 33** show how to attach and remove the handle from the probe head.

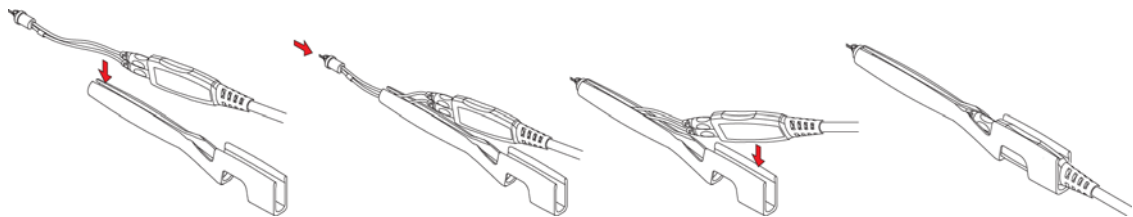


Figure 32 Inserting the Probe into the Handle

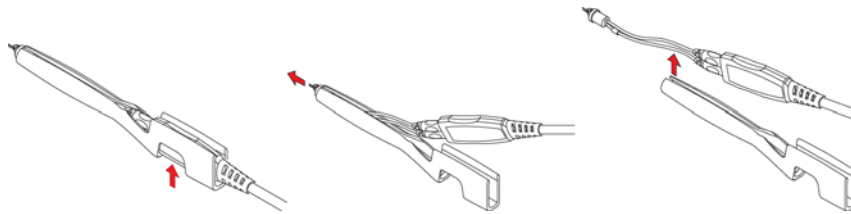


Figure 33 Removing the Probe from the Handle

8. E2677B Differential Solder-In Head with Medium BW Resistors



The E2677B with medium BW resistors (150Ω mini-axial lead) probe configuration provides medium bandwidth measurements of differential or single-ended signals.

Table 18 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	~2.9
1131A	~2.9	1134A	~2.9

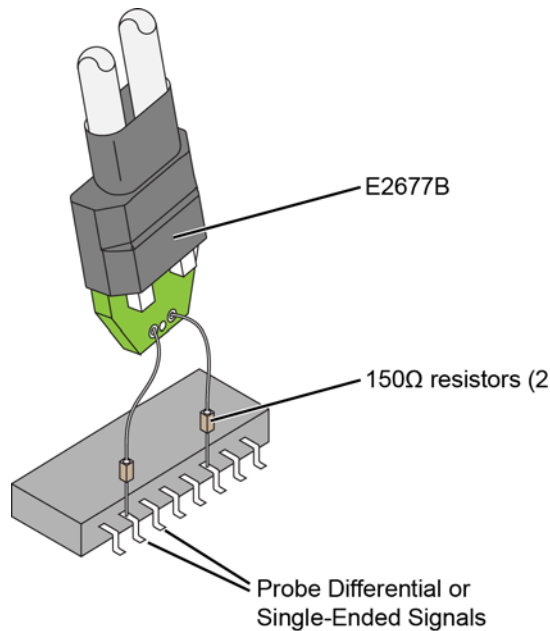


Figure 34 Solder-in Differential Probe Head (Medium Bandwidth)

The longer resistor length allows connection to widely spaced points or points in tight areas. The probe head resistors must be soldered to the circuit that you are measuring. Because of the small size of the resistor leads, it is easy to solder them to very small geometry circuits. This configuration can probe circuit points that are farther apart than the full bandwidth configurations.

NOTE

To install or repair resistor leads. Refer to **“Replacing Resistors on E2677B/9A Solder-In Probe Heads”** on page 63”.

NOTE

Performance plots. Refer to [Chapter 5](#), “1130A Performance Data Plots,” [Chapter 6](#), “1131A Performance Data Plots,” [Chapter 7](#), “1132A Performance Data Plots,” and [Chapter 8](#), “1134A Performance Data Plots.”

9. E2679A Single-Ended Solder-In Head with Long Wire



The E2679A probe head with long wire leads provides medium bandwidth measurements of single-ended signals. The longer resistor lead length allows connection to widely spaced points or points in tight areas.




Table 19 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	>1.5	1132A	~2.9
1131A	~2.9	1134A	~2.9

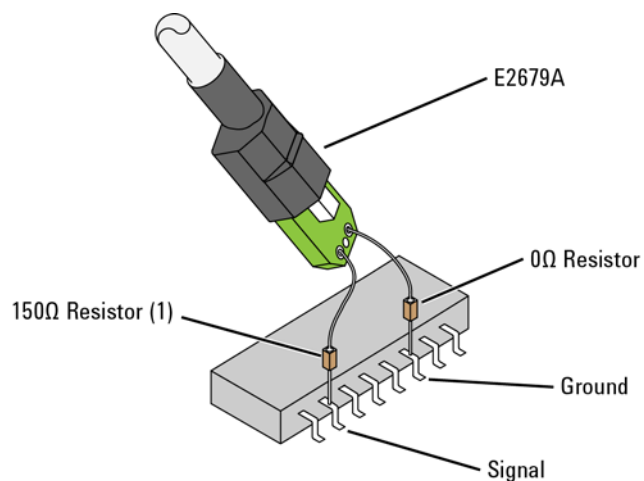


Figure 35 E2679A (Medium Bandwidth)

The probe head resistors must be soldered to the circuit that you are measuring. Because of the small size of the resistor leads, it is easy to solder them to very small geometry circuits. This configuration can probe circuit points that are farther apart than the full bandwidth configurations.

NOTE

To install or repair resistor leads. Refer to [“Replacing Resistors on E2677B/9A Solder-In Probe Heads”](#) on page 63”.

Table 20 Supplied Accessories

Description	Qty Supplied	Part Number *
91 Ω resistor for full bandwidth	16	0700-2353
150 Ω resistor for medium bandwidth	8	0700-2350
0 Ω resistor for full and medium bandwidth	24	0700-2348
91 Ω resistor template	2	01131-94311
150 Ω resistor template	2	01131-94308

* *Not orderable.*

10. E2678B Differential Socketed Head with Damped Wire Accessory



This E2678A/B probe configuration provides maximum connection reach and flexibility with good signal fidelity but lower bandwidth for measuring differential or single-ended signals.

Table 21 Bandwidth

Probe Amplifier	BW (GHz)	Probe Amplifier	BW (GHz)
1130A	~1.2	1132A	~1.2
1131A	~1.2	1134A	~1.2

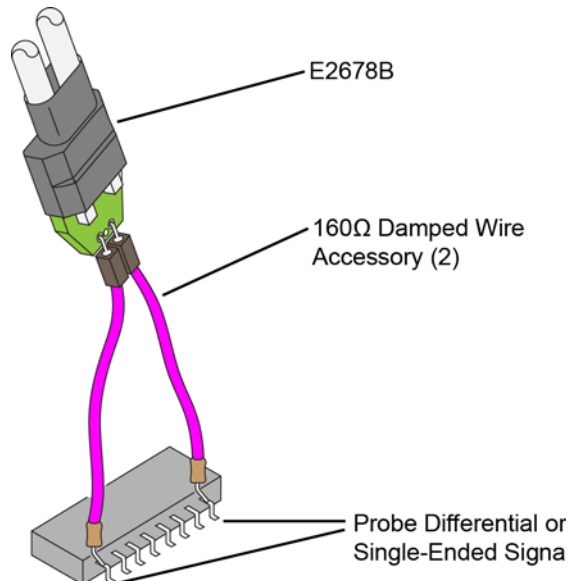


Figure 36 E2678B with Damped Wire Accessory

NOTE

The E2678B is a direct replacement for the E2678A that provides a more robust connection between the E2678B head's socket and printed circuit board. The E2678B's performance and fit are identical to that of the E2678A.

The damped wires must be soldered to the circuit that you are measuring. This configuration can probe circuit points that are farther apart than other configurations. This probe head come with a damped wire accessory that includes two 160Ω resistors.

NOTE

Performance plots. Refer to [Chapter 5](#), “1130A Performance Data Plots, [Chapter 6](#), “1131A Performance Data Plots, [Chapter 7](#), “1132A Performance Data Plots, and [Chapter 8](#), “1134A Performance Data Plots.

11. E2678B Differential Socketed Head with Header Adapter

This probe configuration can be used to connect to 25 mil square pin headers with 100 mil spacing such as those used in USB testing. The header adapter is recommended for use with the 1130A and 1131A InfiniiMax probes.

NOTE

If the header adapter is used with higher bandwidth probe amplifiers such as the 1132A (5 GHz) or the 1134A (7GHz), the rise time of the input signal should be slower than ~150 ps (10% to 90%) to limit the effects of resonances in the adapter.

NOTE

The E2678B is a direct replacement for the E2678A that provides a more robust connection between the E2678B head's socket and printed circuit board. The E2678B's performance and fit are identical to that of the E2678A.

All of the specifications and characteristics of the header adapter are the same as those for the socketed differential probe head except for the input capacitance shown in [Table 22](#).

Table 22 Characteristic Capacitance

Identification	Capacitance	Description
C _m	0.43 pF	Model for input C is C _m between the tips and C _g to ground each tip
C _g	0.54 pF	
C _{diff}	0.70 pF	Differential mode capacitance is C _m + C _g /2
C _{se}	0.97 pF	Single-ended mode capacitance is C _m + C _g

To adapt the 01130-21302 damped wire accessory from solder-in to plug-on, solder the tip into the 01131-85201 square pin socket and then slip the 01131-41101 heat-shrink sleeve over the solder joint and heat the heat-shrink tubing with a heat gun. This allows the damped wire accessories to be used to plug onto 25 mil square pins.

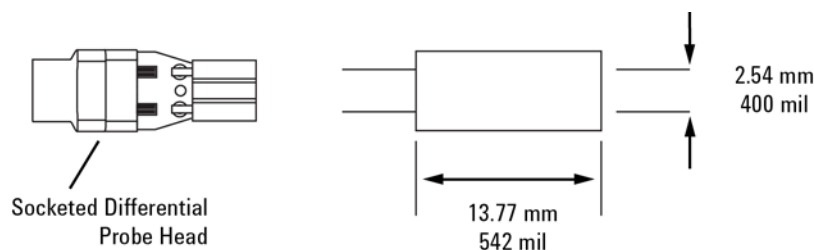


Figure 37 01130-63201 Header Adapter Dimensions

Replacing Resistors on E2677B/9A Solder-In Probe Heads

Use the following procedure to install or replace the wire leads when the mini-axial resistors become damaged or break off due to use.

Table 23 Resistors and Bandwidth

Resistor	For Bandwidth
91 Ω	Full
150 Ω	Medium
0 Ω	Full and Medium

NOTE

Resistor performance. The 91 Ω resistors were changed from 100 Ω to 91 Ω for slightly better performance. Either value produces a response that is well within specifications.

Table 24 Recommended Equipment

Equipment
Vise or clamp for holding tip
Metcal STTC-022 (600 °C) or STTC-122(700 °C) tip soldering iron or equivalent. The 600 °C tip will help limit burning of the FR4 tip PC board.
0.381 mm (0.015 in) diameter RMA flux standard tin/lead solder wire
Fine stainless steel tweezers
Rosin flux pencil, RMA type (Kester #186 or equivalent)
Diagonal cutters
Magnifier or low power microscope
Keysight supplied trim gauge (01131-94311)

Procedure

- 1 Use the vise or clamp to position the tip an inch or so off the work surface for easy access.

CAUTION

If using a vise, grip the tip on the sides with light force. When tightening the vise, use light force to avoid damaging the solder-in probe head. If using a tweezers clamp, grip the tip either on the sides or at the top and bottom.

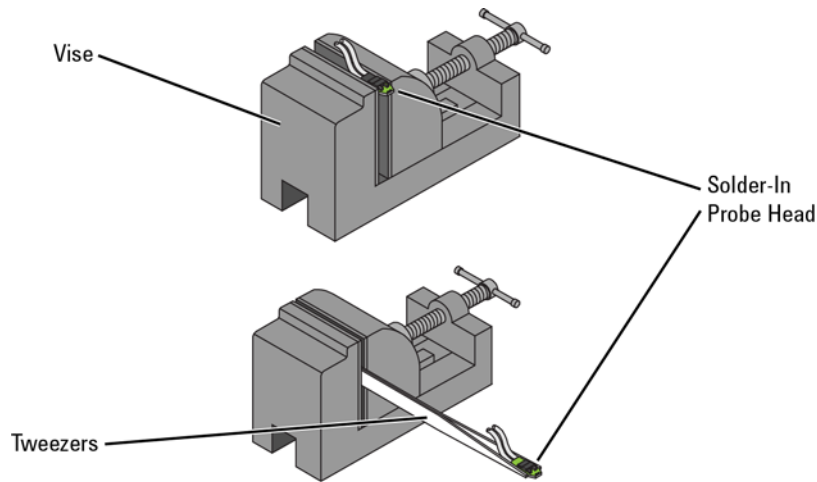


Figure 38 Clamping the Probe Head

- 2 If you need to remove an existing or damaged lead wire, grab each resistor lead or body with tweezers and pull very gently up. Touch the soldering iron to the solder joint just long enough for the resistor to come free of the probe head tip.

CAUTION

To avoid burning and damage to the pc board, do not keep the soldering iron in contact with the tip any longer than necessary. The solder joint has very low thermal mass, so the joint quickly melts and releases the wire.

NOTE

Make sure soldering iron tip is free of excess solder.

- 3 In needed, fill the mounting hole with solder in preparation for the new wire.
- 4 Use the flux pencil to coat the solder joint area with flux.
- 5 Prepare the mini-axial lead resistor for attachment to the head's pc board. The lead to be attached to head's pc board will have a 90° bend to go into through hole in the tip pc board.
- 6 Using tweezers, place the resistor body inside the rectangle of the trim template.

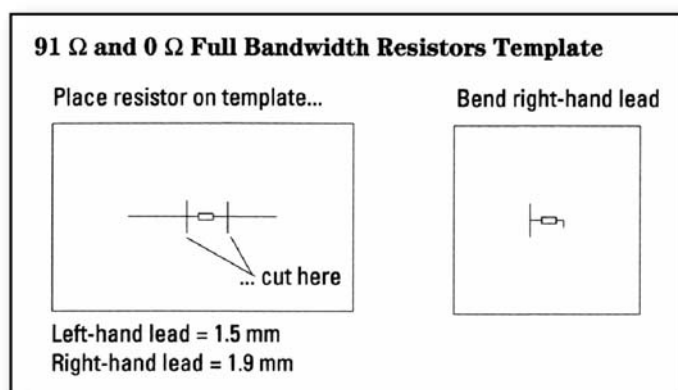


Figure 39 Keysight Supplied Template Included With Resistors

- 7 Using a knife, trim the leads even with the trim lines.
- 8 Place resistor body inside the rectangle of the bend template.
- 9 Using another pair of tweezers, bend the 1.90 mm or 8.89 mm lead 90° as shown in [Figure 40](#) and [Figure 41](#).

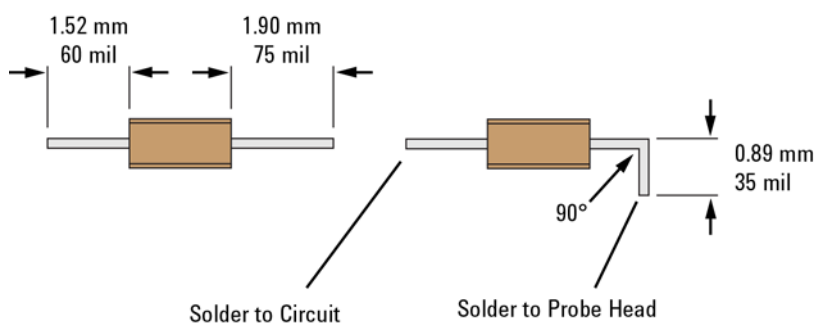


Figure 40 91Ω and 0Ω Combination Resistor Trim Dimensions

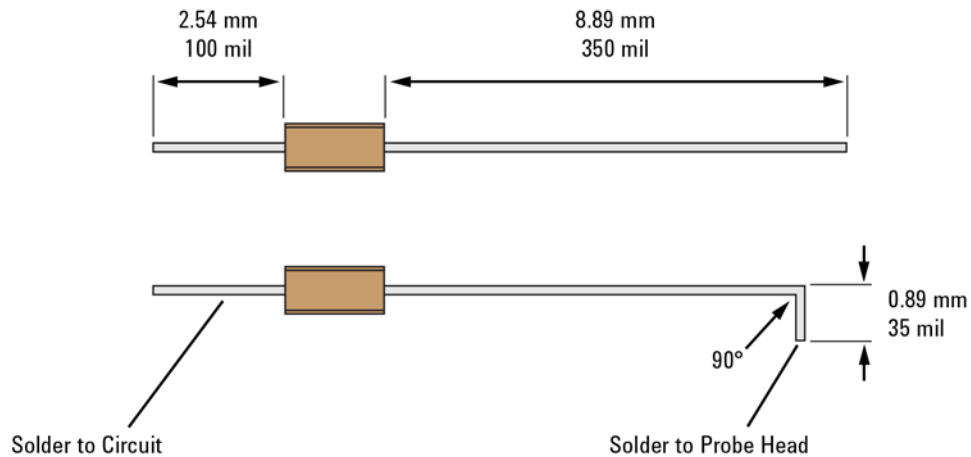


Figure 41 150Ω and 0Ω Combination Resistor Trim Dimensions

NOTE

Do not use the wrong value of resistor at the wrong length.

- 10 Holding the resistor lead or wire in one hand and soldering iron in the other, position the end of the resistor lead (after the 90° bend) over the solder filled hole. Touch the soldering iron to the side of the hole. When the solder in the hole melts, the resistor lead will fall into the hole. Remove soldering iron as soon as lead falls into the hole.

CAUTION

The thermal mass of the joint is very small, so taking extra time with the soldering iron in an attempt to ensure a good joint is not needed.

NOTE

Make sure the zero ohm resistor is used for ground leads on the E2679A single-ended probe head.

NOTE

For the E2677B differential solder-in probe head, the + and – connection can be determined when the probe head is plugged into the probe amplifier, so which way the tip is soldered in is not important.

3 Calibrating Probes

Calibration for Solder-In and Socketed Probe Heads **68**

Calibration for Hand-held Browser Probe Heads **75**

Calibrating the InfiniiMax probes (1168A, 1169A, 1130A, 1131A, 1132A, 1134A), the 1156A probe, the 1157A probe, or the 1158A probe is done using the E2655C Deskew and Calibration Kit. The kit contains the following parts:

- SMA (male) to SMA (male) adaptor
- SMA (male) to BNC (female) adaptor
- BNC (male) to SMA (male) adaptor
- 50 Ω SMA Terminator
- De-skew Fixture

When the probe has been calibrated, the dc gain, offset zero, and offset gain will be calibrated. The degree of accuracy specified at the probe tip is dependent on the oscilloscope system specifications.

This document contains procedures showing vertical and skew calibration solder-in differential probe head and the differential browser probe head. The procedures can also be applied to all of the different InfiniiMax probe configurations and for the 11560 and 1150A series active probe configurations.

Calibration for Solder-In and Socketed Probe Heads

Calibration of the solder-in and socketed probe heads consists of a vertical calibration and a skew calibration. The vertical calibration should be performed before the skew calibration. Both calibrations should be performed for best probe measurement performance.

NOTE

Before calibrating the probe, verify that the Infiniium oscilloscope has been calibrated recently and that the calibration Δ temperature is within $\pm 5^{\circ}\text{C}$. If this is not the case, calibrate the oscilloscope before calibrating the probe. This information is found in the Infiniium Calibration dialog box.

Step 1. Connecting the Probe for Calibration

The calibration procedure requires the following parts.

- BNC (male) to SMA (male) adapter
 - Deskew fixture
 - 50Ω SMA terminator
- 1 As shown in **Figure 42** on page 69, connect BNC (male) to SMA (male) adaptor to the deskew fixture on the connector closest to the yellow pincher.
 - 2 Connect the 50Ω SMA terminator to the connector farthest from the yellow pincher.
 - 3 Connect the BNC side of the deskew fixture to the Aux Out BNC of the Infiniium oscilloscope.
 - 4 Connect the probe to an oscilloscope channel.
 - 5 To minimize the wear and tear on the probe head, the probe head should be placed on a support to relieve the strain on the probe head cables.
 - 6 Push down on the back side of the yellow pincher. Insert the probe head resistor lead underneath the center of the yellow pincher and over the center conductor of the deskew fixture. The negative probe head resistor lead or ground lead must be underneath the yellow pincher and over one of the outside copper conductors (ground) of the deskew fixture. Make sure that the probe head is approximately perpendicular to the deskew fixture.

NOTE

For the socketed probe head, insert two properly trimmed 82Ω resistors into the sockets.

- 7 Release the yellow pincher.

NOTE

To ensure contact, pull up on the back side of the yellow pincher to ensure good contact between resistor leads and the deskew fixture.

Step 2. Verifying the Connection

- 1 On the Infiniium oscilloscope, press the autoscale button on the front panel.
- 2 Set the volts per division to 100 mV/div.
- 3 Set the horizontal scale to 1.00 ns/div.
- 4 Set the horizontal position to approximately 3 ns. You should see a waveform similar to that in **Figure 43** on page 70.

If you see a waveform similar to that of **Figure 44**, then you have a bad connection and should check all of your probe connections.

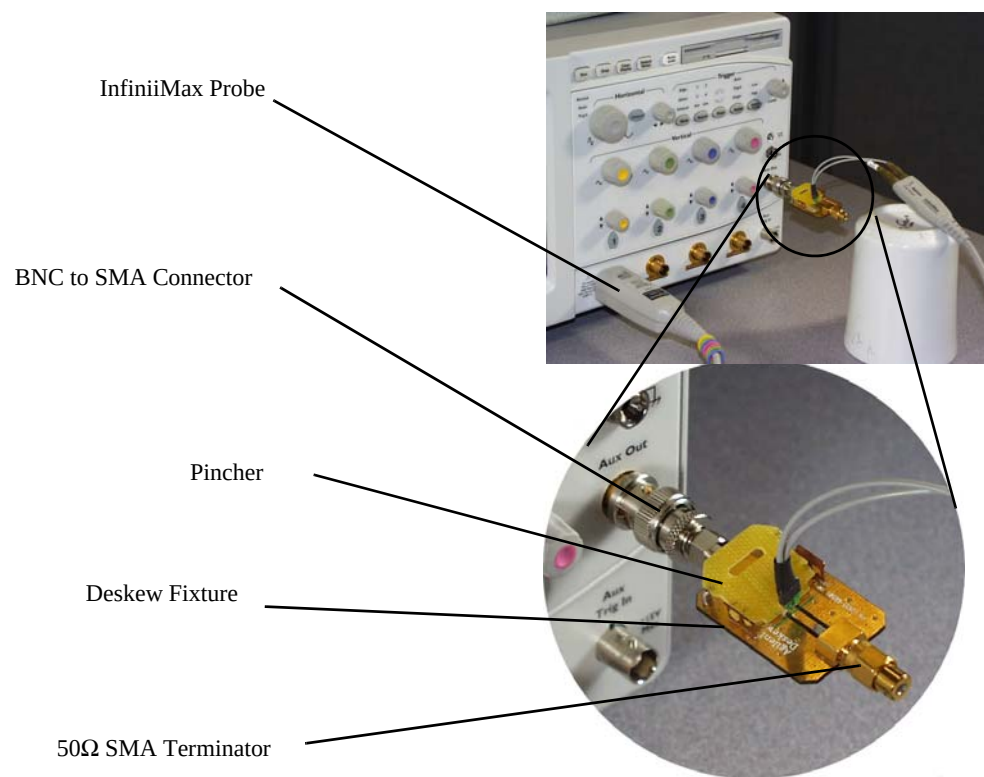


Figure 42 Connecting the Probe and Deskew Fixture

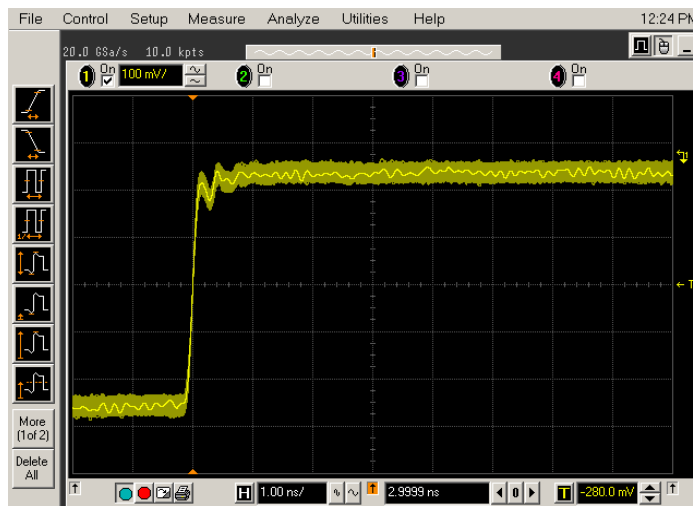


Figure 43 Good Connection

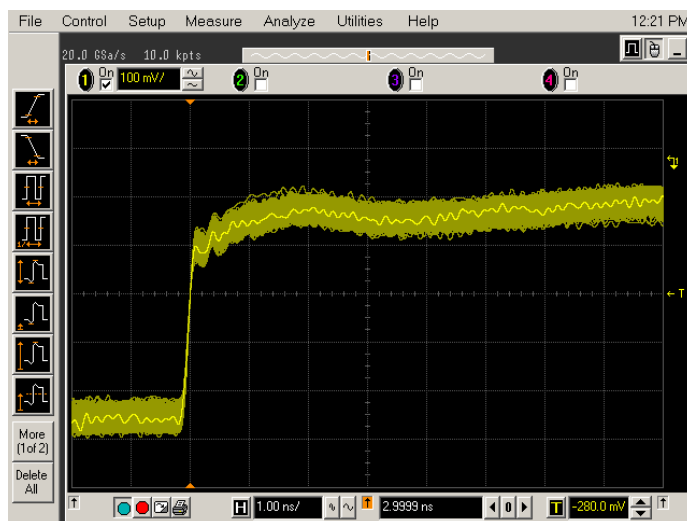


Figure 44 Bad Connection

Step 3. Running the Probe Calibration and Deskew

- 1 On the Infiniium oscilloscope in the Setup menu, select the channel connected to the probe.
- 2 In the Channel Setup dialog box select the Probes... button.
- 3 In the Probe Setup dialog box select the Calibrate Probe... button.
- 4 In the Probe Cal dialog box select the Calibrated Atten/Offset radio button.
- 5 Select the Start Atten/Offset Calibration... button and follow the on-screen instructions for the vertical calibration procedure.

- 6 Once the vertical calibration has successfully completed, select the Calibrated Skew... button.
- 7 Select the Start Skew Calibration... button and follow the on-screen instructions for the skew calibration. At the end of each calibration the oscilloscope will inform you if the calibration was or was not successful.

Verifying the Probe Calibration

If you have just successfully calibrated the probe, it is not necessary to perform this verification. However, if want to verify the probe was properly calibrated, the following procedure will help you verify the calibration.

The calibration procedure requires the following parts.

- BNC (male) to SMA (male) adaptor
- SMA (male) to BNC (female) adaptor
- BNC (male) to BNC (male) 12 inch cable such as the Keysight 8120-1838 (not included in this kit)
- Keysight 54855-61620 calibration cable (Infiniium oscilloscopes with bandwidths of 6 GHz and greater only)
- Keysight 54855-67604 precision 3.5 mm adaptors (Infiniium oscilloscopes with bandwidths of 6 GHz and greater only)
- Deskew fixture

For the following procedure, refer to **Figure 42** on page 69.

- 1 As shown in **Figure 45** on page 73, connect BNC (male) to SMA (male) adapter to the deskew fixture on the connector closest to the yellow pincher.
- 2 Connect the SMA (male) to BNC (female) to the connector farthest from the yellow pincher.
- 3 Connect the BNC (male) to BNC (male) cable to the BNC connector on the deskew fixture to one of the unused oscilloscope channels. For Infiniium oscilloscopes with bandwidths of 6 GHz and greater, use the 54855-61620 calibration cable and the two 54855-67604 precision 3.5 mm adapters.
- 4 Connect the BNC side of the deskew fixture to the Aux Out BNC of the Infiniium oscilloscope.
- 5 Connect the probe to an oscilloscope channel.
- 6 To minimize the wear and tear on the probe head, the probe head should be placed on a support to relieve the strain on the probe head cables.
- 7 Push down on the back side of the yellow pincher. Insert the probe head resistor lead underneath the center of the yellow pincher and over the center conductor of the deskew fixture. The negative probe head resistor lead or ground lead must be underneath the yellow pincher and over one of the outside copper conductors (ground) of the deskew fixture. Make sure that the probe head is approximately perpendicular to the deskew fixture.

NOTE

For the socketed probe head, insert two properly trimmed 82Ω resistors into the sockets.

8 Release the yellow pincher.

NOTE

To ensure contact, pull up on the back side of the yellow pincher to ensure good contact between resistor leads and the deskew fixture.

- 9 On the oscilloscope, press the autoscale button on the front panel.
- 10 Select Setup menu and choose the channel connected to the BNC cable from the pull-down menu.
- 11 Select the Probes... button.
- 12 Select the Configure Probe System button.
- 13 Select User Defined Probe from the pull-down menu.
- 14 Select the Calibrate Probe... button.
- 15 Select the Calibrated Skew radio button.
- 16 Once the skew calibration is completed, close all dialog boxes.
- 17 Select the Start Skew Calibration... button and follow the on-screen instructions.
- 18 Set the vertical scale for the displayed channels to 100 mV/div.
- 19 Set the horizontal range to 1.00 ns/div.
- 20 Set the horizontal position to approximately 3 ns.
- 21 Change the vertical position knobs of both channels until the waveforms overlap each other.
- 22 Select the Setup menu choose Acquisition... from the pull-down menu.
- 23 In the Acquisition Setup dialog box enable averaging. When you close the dialog box, you should see waveforms similar to that in **Figure 46** on page 74.

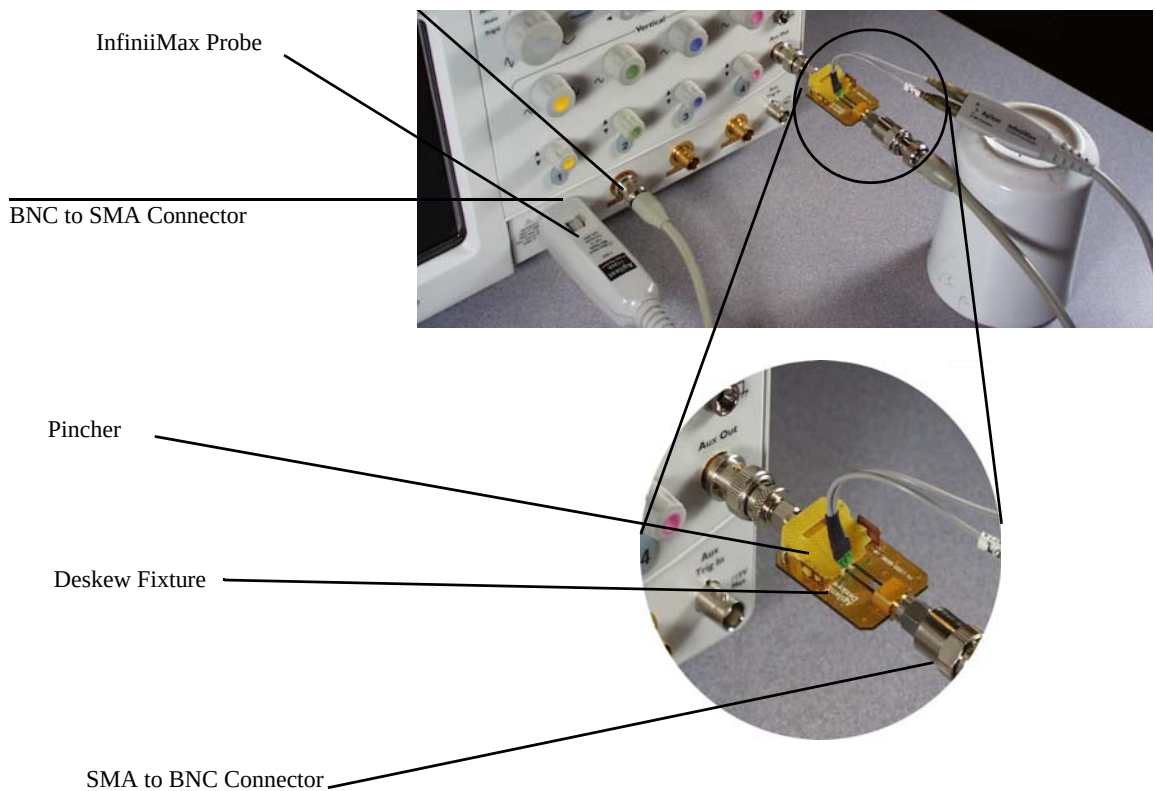


Figure 45 Connecting the Probe

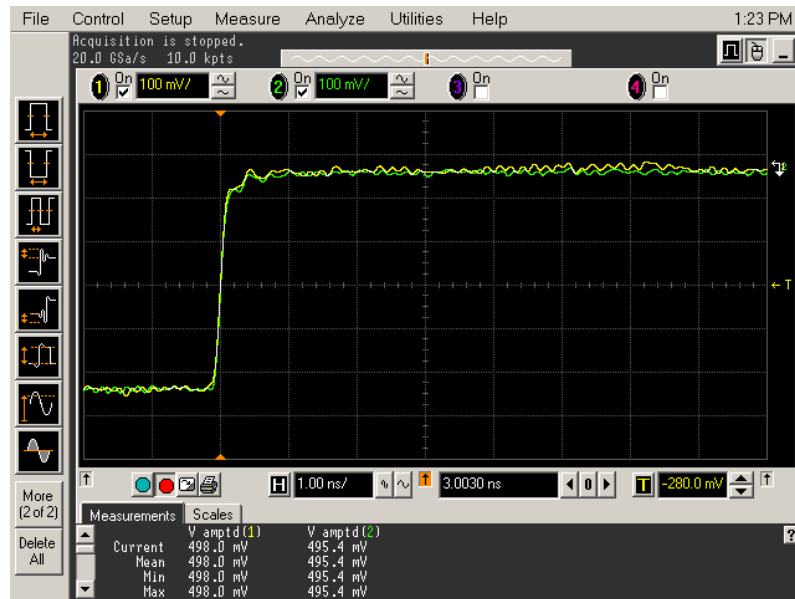


Figure 46 Overlapping Waveforms

Calibration for Hand-held Browser Probe Heads

Calibration of the hand-held browser probe heads consists of a vertical calibration and a skew calibration. The vertical calibration should be performed before the skew calibration. Both calibrations should be performed for best probe measurement performance.

NOTE

Before calibrating the probe, verify that the Infiniium oscilloscope has been calibrated recently and that the calibration Δ temperature is within ± 5 °C. If this is not the case, calibrate the oscilloscope before calibrating the probe. This information is found in Infiniium Calibration dialog box.

Calibration Setup

The calibration procedure requires the following parts.

- BNC (male) to SMA (male) adaptor
- Deskew fixture
- 50 Ω SMA terminator

- 1 As shown in **Figure 47** on page 76, connect BNC (male) to SMA (male) adaptor to the deskew fixture on the connector closest to the yellow pincher.
- 2 Connect the 50 Ω SMA terminator to the connector farthest from the yellow pincher.
- 3 Connect the BNC side of the deskew fixture to the Aux Out of the Infiniium oscilloscope.
- 4 Connect the probe to an oscilloscope channel.
- 5 Place the positive resistor tip of the browser on the center conductor of the deskew fixture between the green line and front end of the yellow pincher. The negative resistor tip or ground pin of the browser must be on either of the two outside conductors (ground) of the deskew fixture.
- 6 On the Infiniium oscilloscope in the Setup menu, select the channel connected to the probe.
- 7 In the Channel Setup dialog box select the Probes... button.
- 8 In the Probe Setup dialog box select the Calibrate Probe... button.
- 9 In the Probe Cal dialog box select the Calibrated Atten/Offset radio button.
- 10 Select the Start Atten/Offset Calibration... button and follow the on-screen instructions for the vertical calibration procedure.
- 11 Once the vertical calibration has successfully completed, select the Calibrated Skew... button.
- 12 Select the Start Skew Calibration... button and follow the on-screen instructions for the skew calibration.

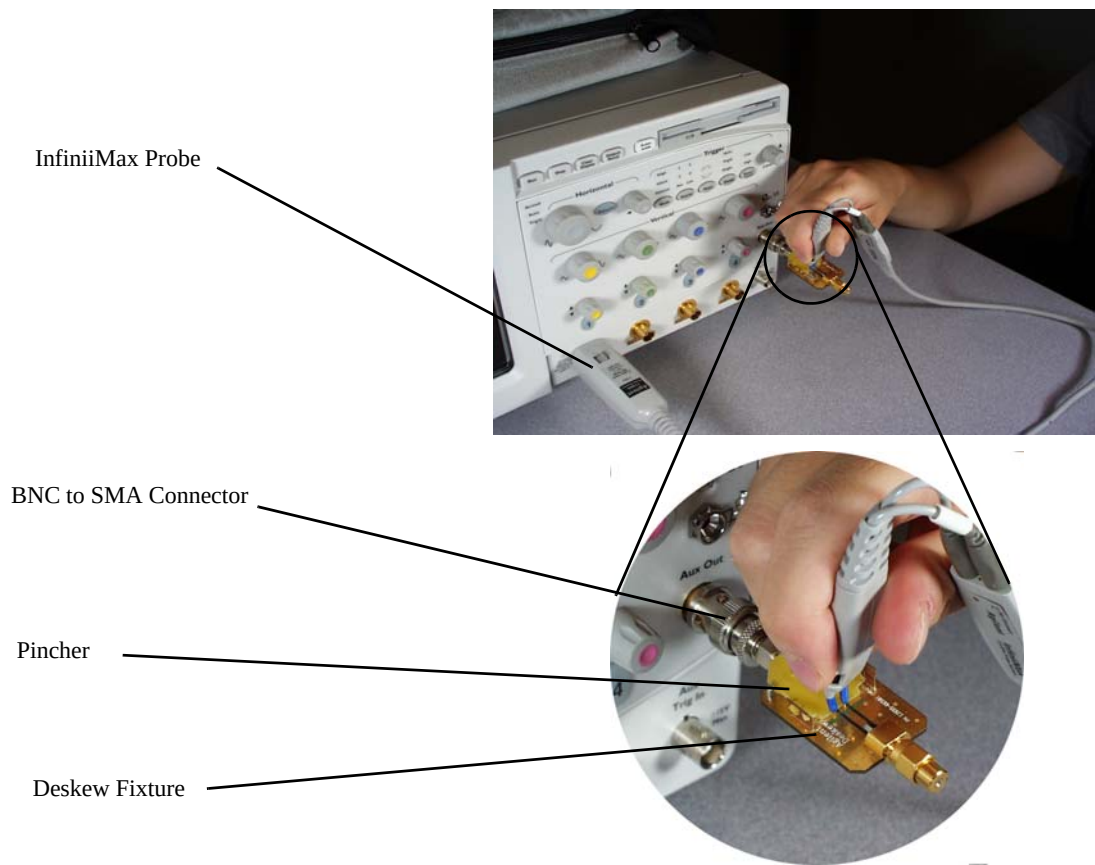


Figure 47 Placing the Probe on the Fixture

4 Characteristics and Specifications

General	78
Environmental	80
Regulatory	81
Probe Dimensions	82

All warranted specifications are denoted by a footnote reference number. All other characteristics are typical values.

General

Table 25 Characteristics and Specifications (Sheet 1 of 2)

Item	Characteristic *	Description
Bandwidth (–3 dB) (specification)		
1134A	> 7 GHz (specification) [†]	
1132A	> 5 GHz (specification) ^b	
1131A	> 3.5 GHz (specification) ^b	
1130A	> 1.5 GHz (specification) ^b	
Rise and Fall Time (10% to 90%)		
1134A	60 ps	
1132A	86 ps	
1131A	100 ps	
1130A	233 ps	
Oscilloscope and Probe System Bandwidth (–3 dB)		
1134A with 54855	6 GHz	
1132A with 54854	4 GHz	
1131A with 54853	2.5 GHz	
1131A with 54852	2 GHz	
1130A with 54833	2 GHz	
1130A with 54832	1 GHz	
Input Capacitance		
C _m	0.10 pF	Model for input C is C _m is between tips and C _g is to ground for each tip
C _g	0.34 pF	
C _{diff}	0.27 pF	Differential mode capacitance (capacitance when probing a differential signal = C _m + C _g /2)
C _{se}	0.44 pF	Single-ended mode capacitance (capacitance when probing a single-ended signal = C _m + C _g)

Table 25 Characteristics and Specifications (Sheet 2 of 2)

Item	Characteristic *	Description
Input Resistance		
Differential mode resistance	50 k Ω $\pm 2\%$	
Single-ended mode resistance each side to ground	25 k Ω $\pm 2\%$	
Input Dynamic Range	± 2.5 V	Differential or single-ended
Input Common Mode Range	± 6.75 V ± 1.25 V	dc to 100 Hz > 100 Hz
Maximum Signal Slew Rate (SR _{max}) [†]	18 V/ns 30 V/ns	When probing a single-ended signal When probing a differential signal
DC Attenuation	10:1 $\pm 3\%$ before calibration on oscilloscope 10:1 $\pm 1\%$ after calibration on oscilloscope	
Zero offset error referred to input	< 30 mV before calibration on oscilloscope < 5 mV after calibration on oscilloscope	
Offset Range	± 12.0 V	When probing single-ended
Offset Accuracy	< 3% of setting before calibration on oscilloscope < 1% of setting after calibration on oscilloscope	
Noise referred to input	3.0 mVrms	
Propagation Delay	6 ns	
Maximum Input Voltage	30V Peak, CAT I	Maximum non-destructive voltage on each input ground
ESD Tolerance	> 8 kV from 100 pF, 300 Ω HBM	

* Values shown are for the probe amp and solder-in differential probe head with full bandwidth resistor.

† Denotes that bandwidth is a warranted specification, all others are typical. Measured using the probe amplifier and solder-in differential probe head with full bandwidth resistor.

‡ SR_{max} of a sine wave = 2 P(Amp x frequency or SR_{max}) of a step @ Amp x 0.6 / trise (20 to 80%) for more information refer to [Table 2](#) on page 18.

Environmental

The following general characteristics apply to the active probe.

Table 26 Environmental Characteristics

Environmental Conditions	Operating Characteristic	Non-Operating Characteristic
Temperature	5 °C to +40 °C	–40 °C to +70 °C
Humidity	up to 95% relative humidity (non-condensing) at +40 °C	up to 90% relative humidity at +65 °C
Altitude	Up to 4,600 meters	Up to 15,300 meters
Power Requirements (voltages supplied by AutoProbe Interface)	+12 Vdc @ 11 mA –12 Vdc @ 5 mA +5 Vdc @ 28 mA –5 Vdc @ 92 mA 0.84 W	–
Weight	approximately 0.69 kg	
Dimensions	Refer to the outline in Figure 48 on page 82	
Pollution degree 2	Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.	
Use	Indoor Only	

Regulatory

CAT I and CAT II Definitions

Installation category (overvoltage category) I: Signal level, special equipment or parts of equipment, telecommunication, electronic, etc., with smaller transient overvoltages than installation category (overvoltage category) II. Installation category (overvoltage category) II: Local level, appliances, portable equipment etc., with smaller transient overvoltages than installation category (overvoltage category) III.

WEEE Compliance



This symbol indicates the Environmental Protection Use Period (EPUP) for the product's toxic substances for the China RoHS requirements.



The CE mark is a registered trademark of the European Community. ISM GRP 1-A denotes the instrument is an Industrial Scientific and Medical Group 1 Class A product. ICES/NMB-001 indicates product compliance with the Canadian Interference-Causing Equipment Standard.



This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a "Monitoring and Control Instrumentation" product.

Do not dispose in domestic household waste. To return unwanted products, contact your local Keysight office, or see www.keysight.com for more information.

Probe Dimensions

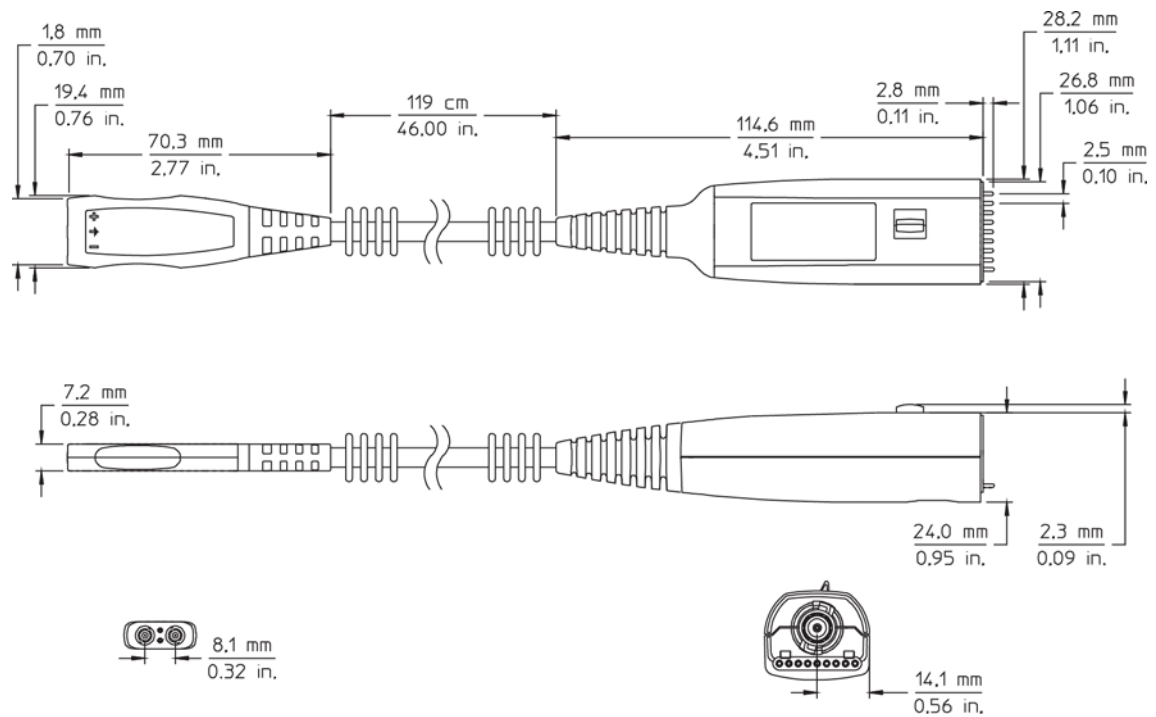


Figure 48 Probe Dimensions

5 1130A Performance Data Plots

E2675B Differential Browser	84
E2676A Single-Ended Browser	87
E2677B Differential Solder-in Probe Head (Full BW)	90
E2677B Differential Solder-in Probe Head (Medium BW)	93
E2678A/B Differential Socketed Probe Head (Full BW)	96
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	99
E2679A Single-Ended Solder-in Probe Head (Full BW)	102
E2679A Single-Ended Solder-in Probe Head (Medium BW)	105
N2851A QuickTip Head with N2849A QuickTip	108

This chapter provides graphs of the performance characteristics of the 1130A probes using the different probe heads that come with the E2668A single-ended and E2669A differential connectivity kits.

NOTE

All rise times shown are measured from the 10% to the 90% amplitude levels.

E2675B Differential Browser

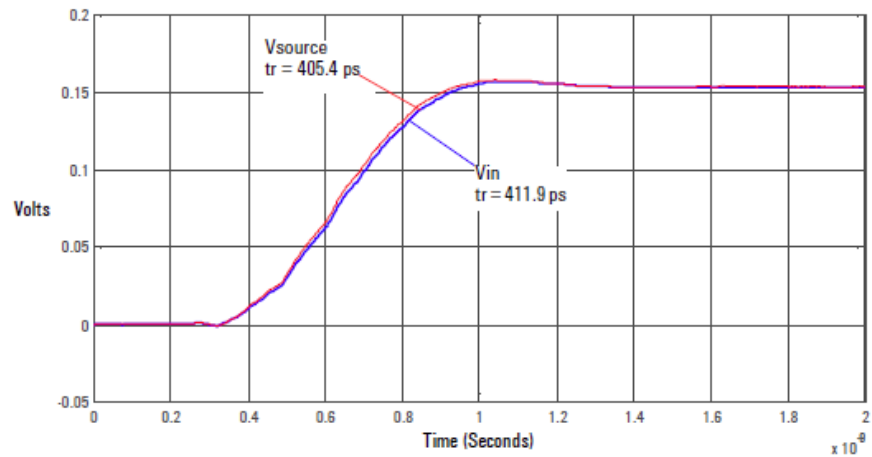


Figure 49 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

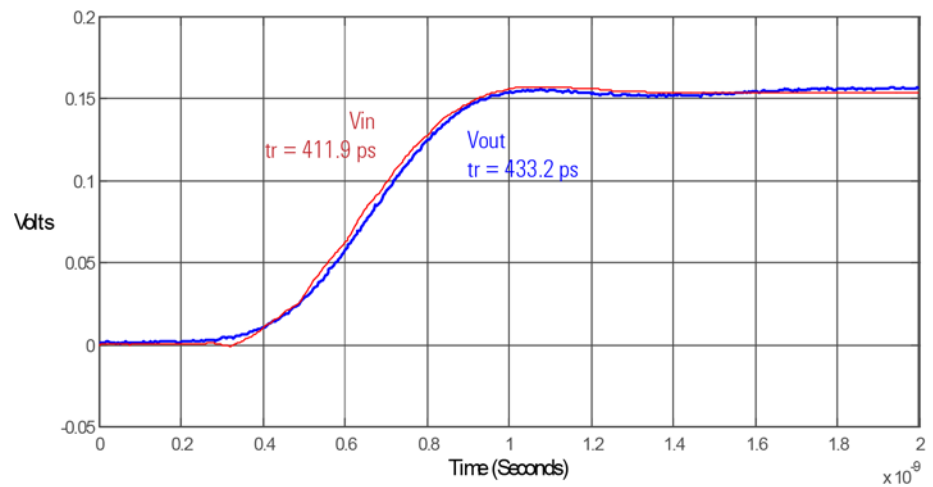


Figure 50 Graph of Vin and Vout of probe with a 25 ohm 405.4 ps step generator.

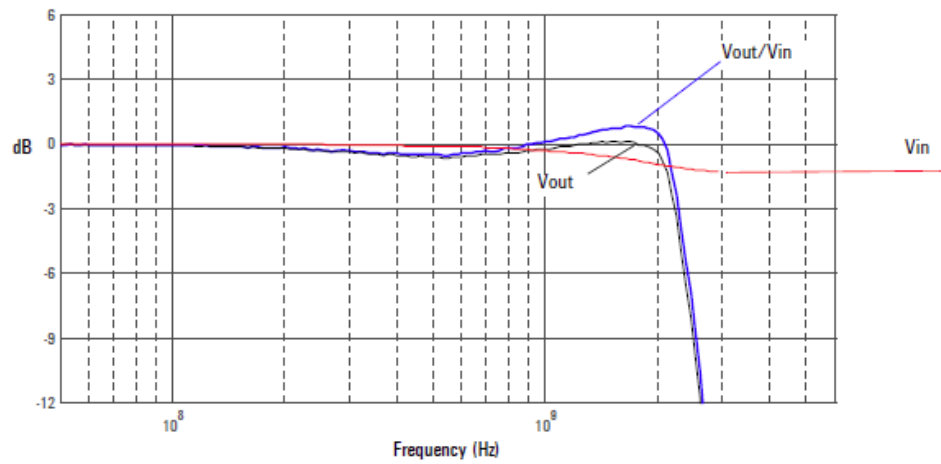


Figure 51 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

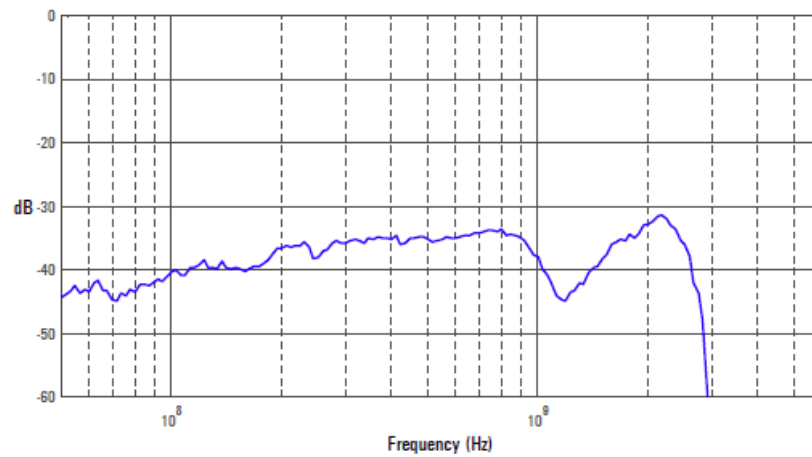


Figure 52 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

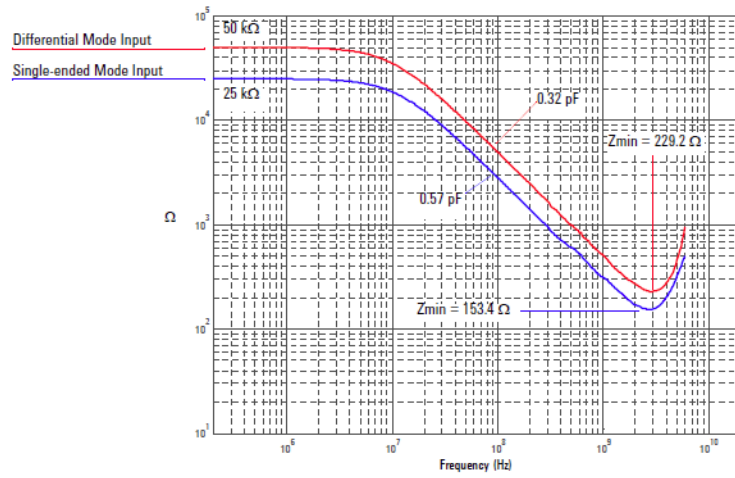


Figure 53 Magnitude plot of probe input impedance versus frequency.

E2676A Single-Ended Browser

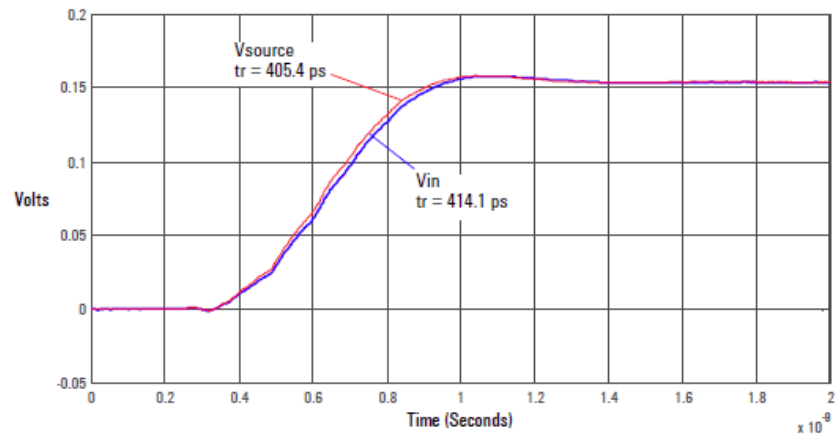


Figure 54 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

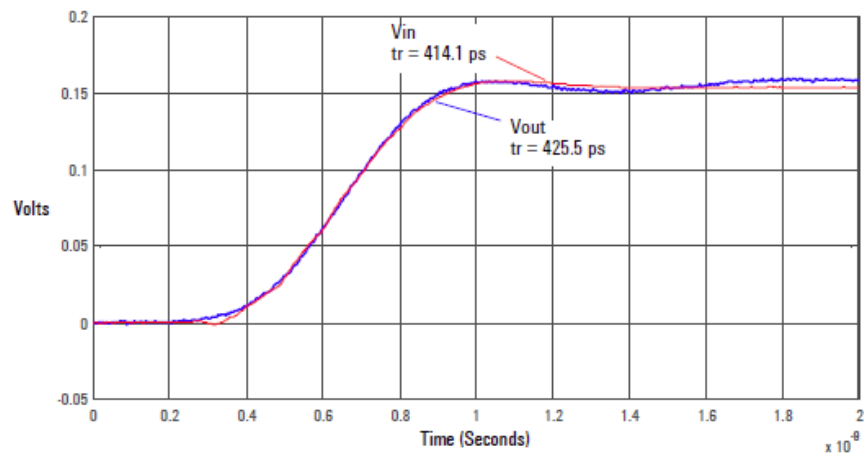


Figure 55 Graph of Vin and Vout of probe with a 25 ohm 405.4 ps step generator.

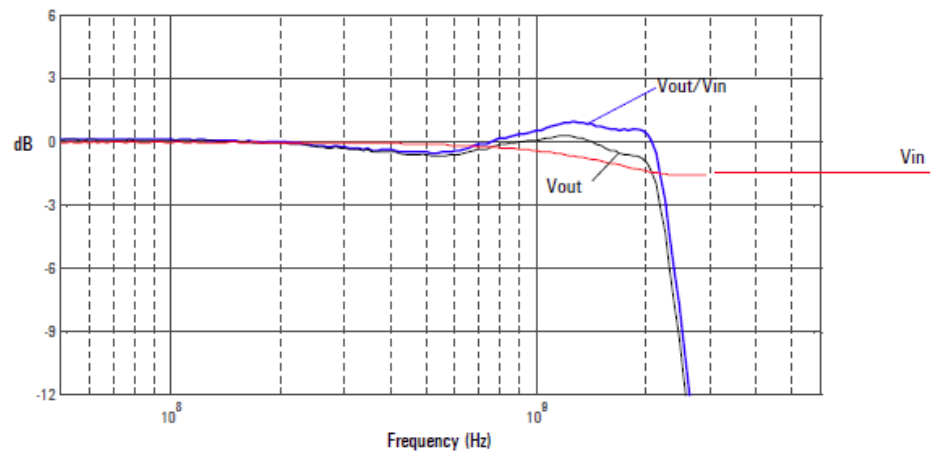


Figure 56 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

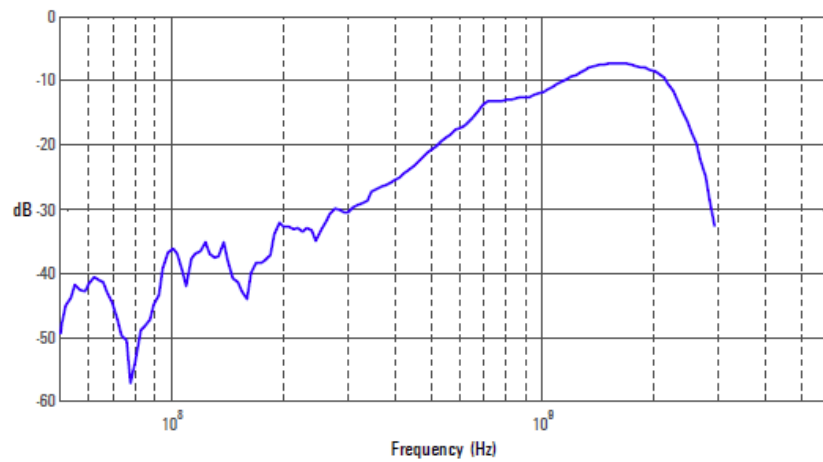


Figure 57 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

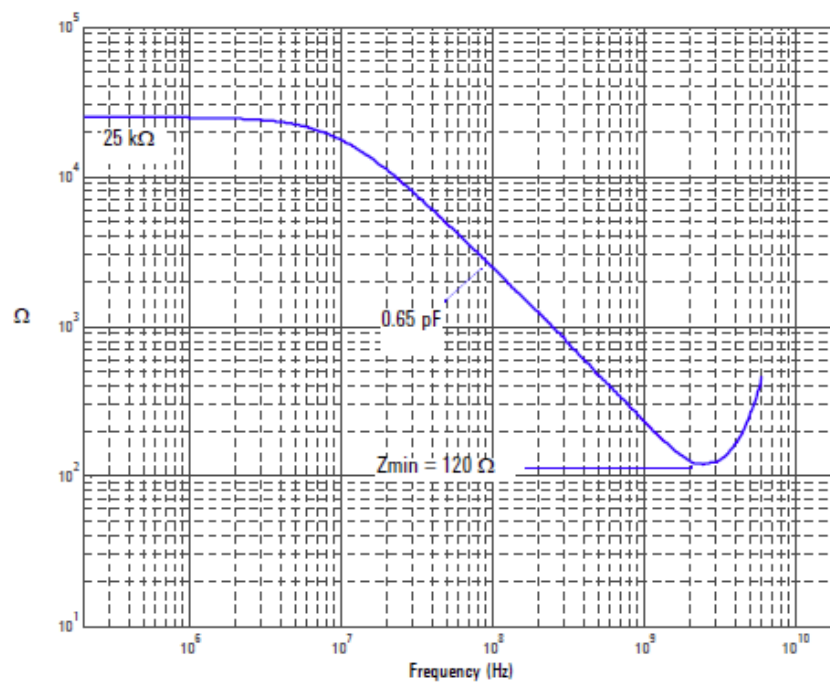


Figure 58 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Full BW)

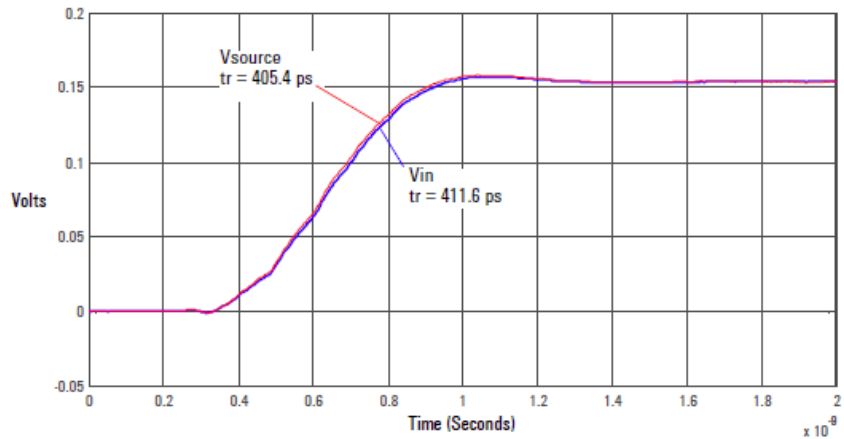


Figure 59 Graph of 25 ohm 100 ps step generator with and without probe connected.

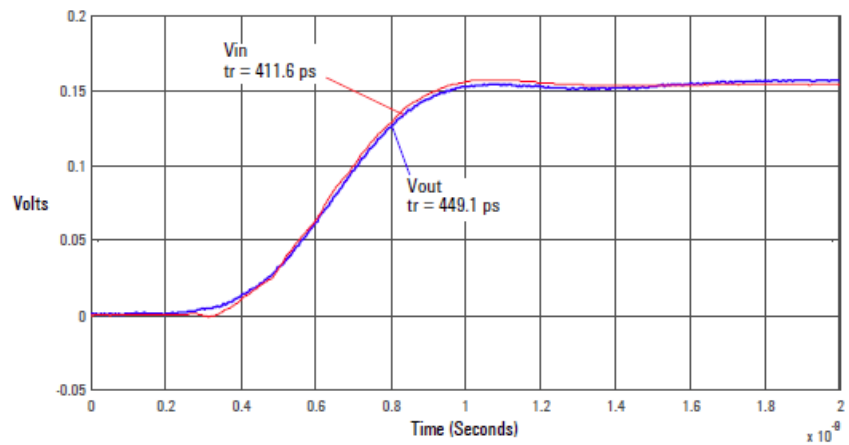


Figure 60 Graph of Vin and Vout of probe with a 25 ohm 405.4 ps step generator.

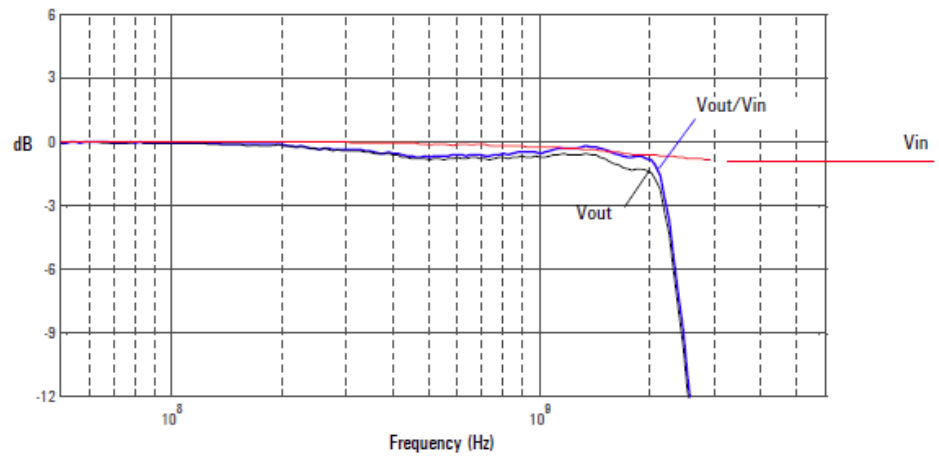


Figure 61 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

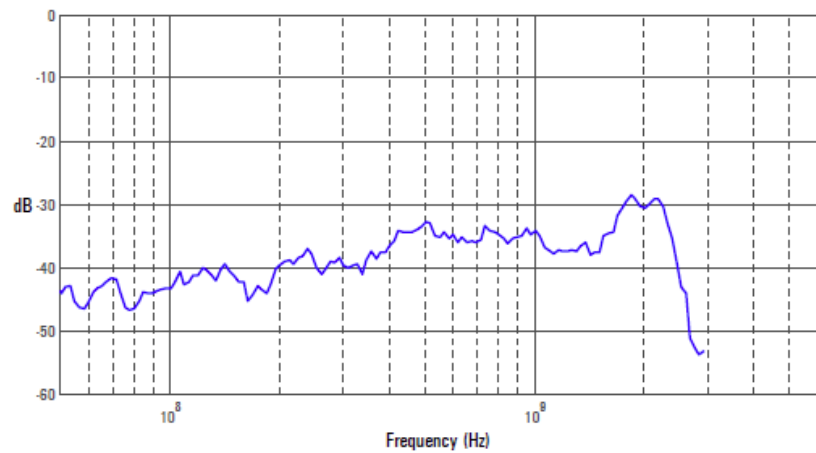


Figure 62 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

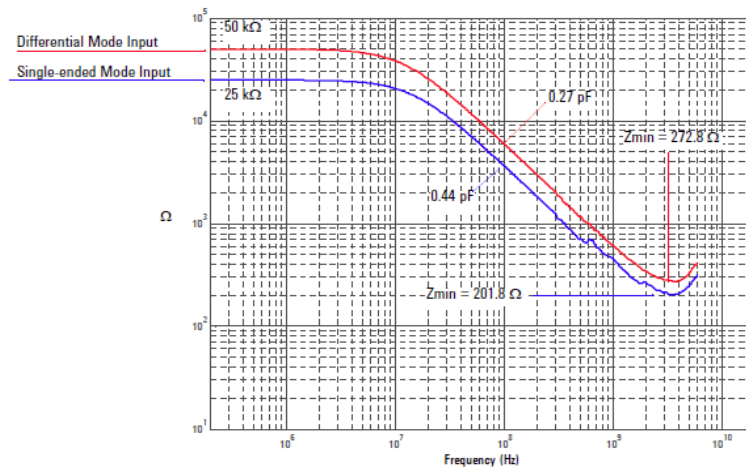


Figure 63 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Medium BW)

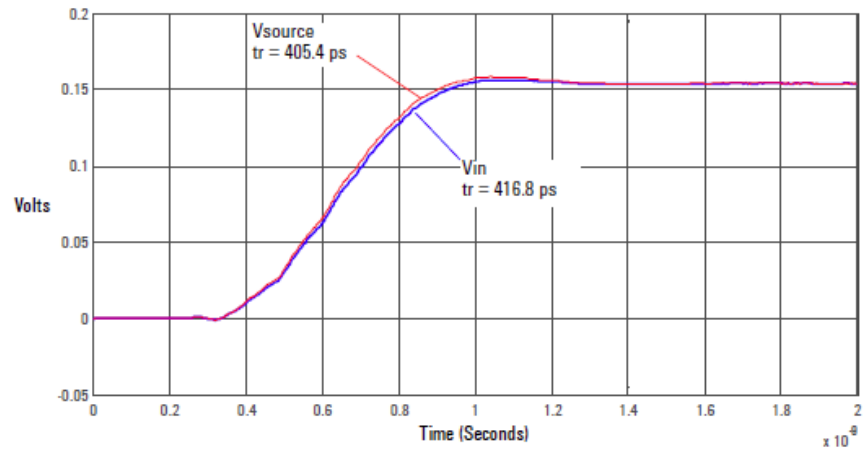


Figure 64 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

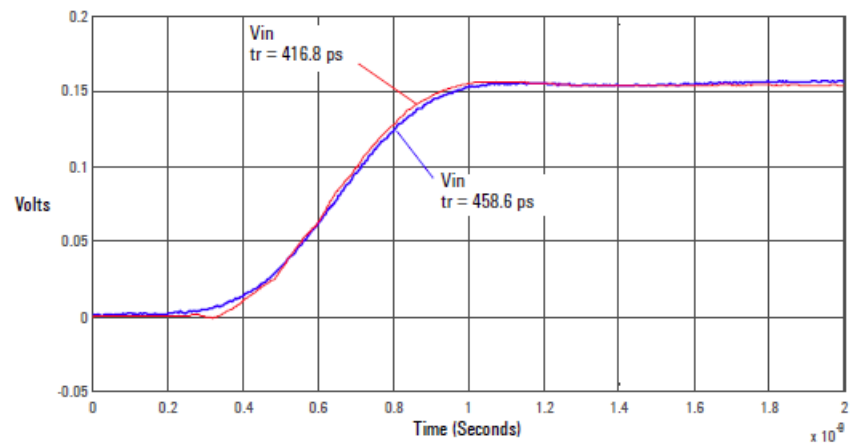


Figure 65 Graph of V_{in} and V_{out} of probe with a 25 ohm 405.4 ps step generator.

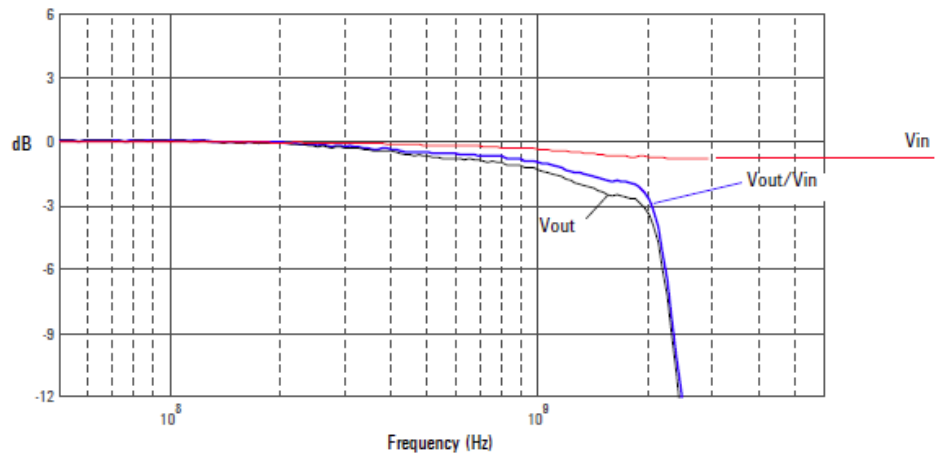


Figure 66 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

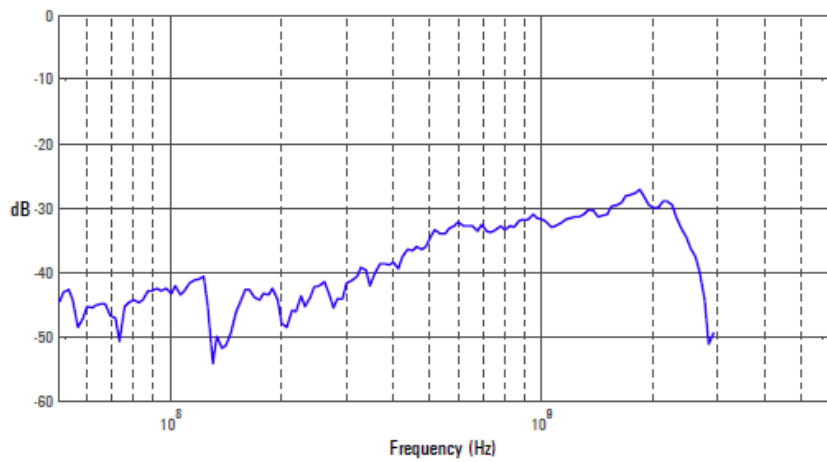


Figure 67 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

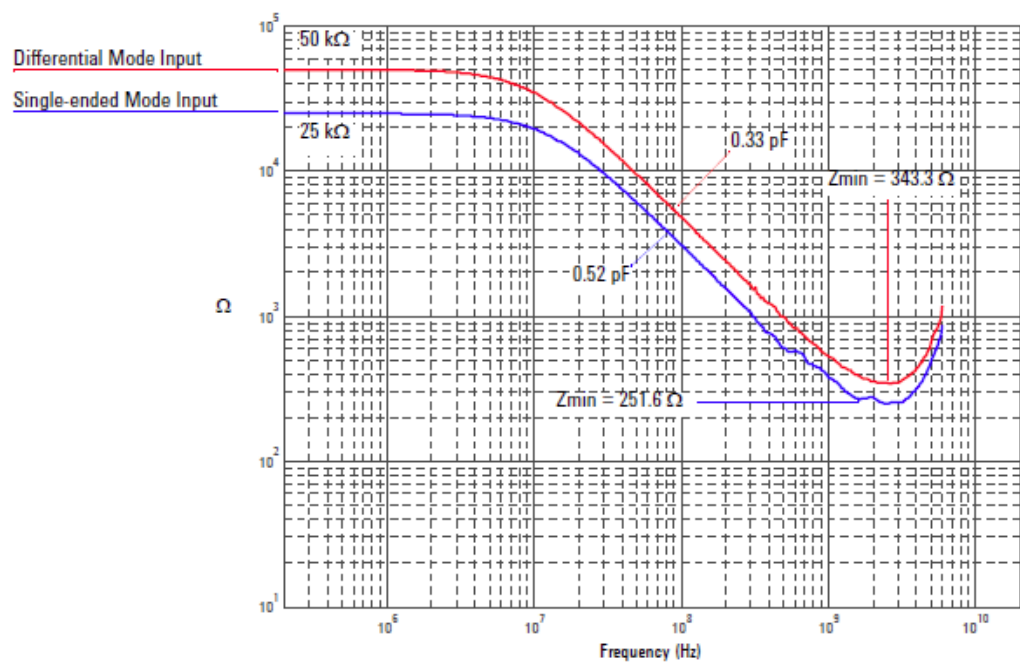


Figure 68 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head (Full BW)

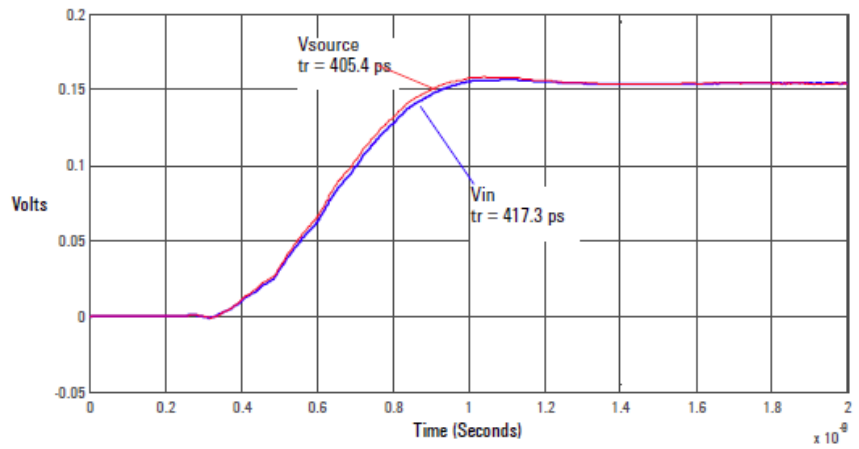


Figure 69 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

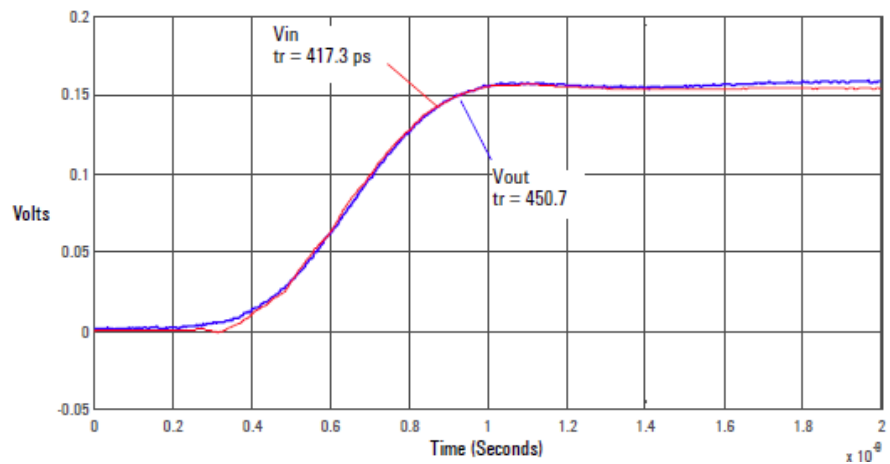


Figure 70 Graph of Vin and Vout of probe with a 25 ohm 405.4 ps step generator.

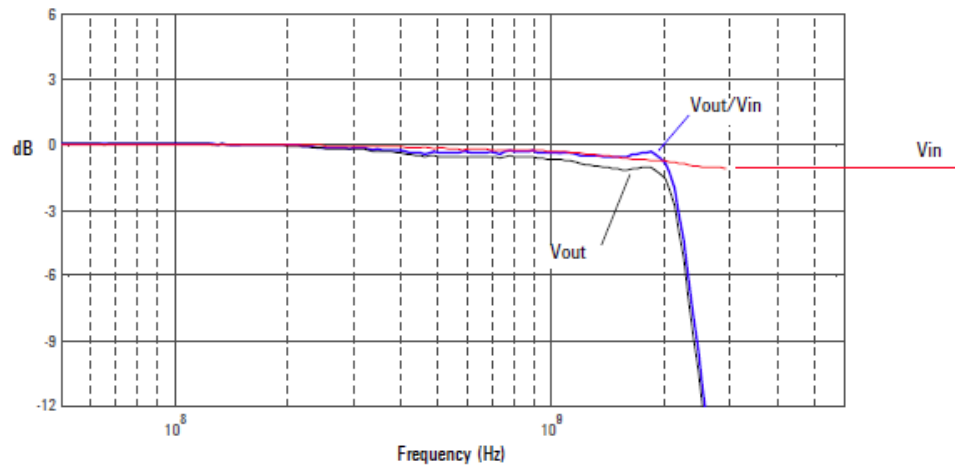


Figure 71 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

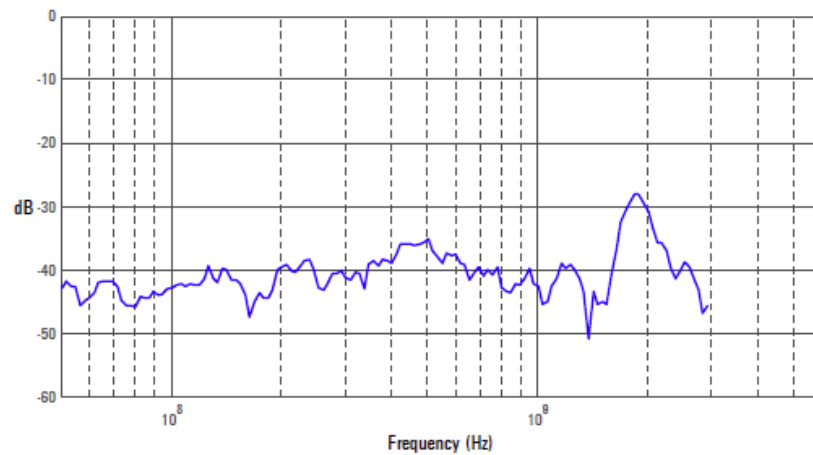


Figure 72 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

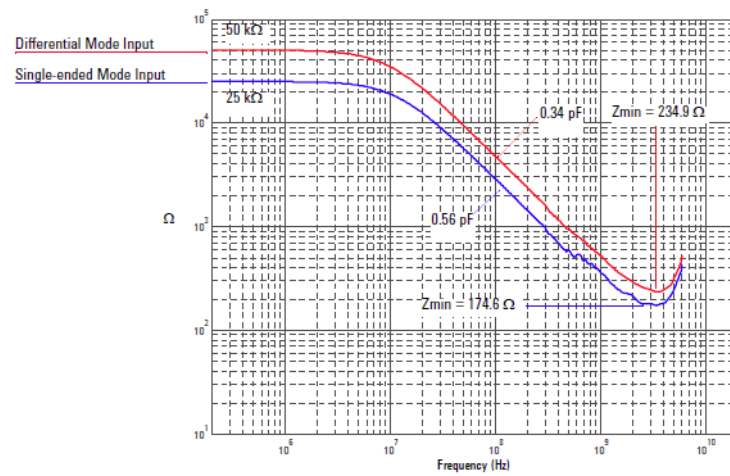


Figure 73 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head with Damped Wire Accessory

NOTE

Due to reflections on the long wire accessories, signals being probed should be limited to ≥ 240 ps rise time measured at the 10% and 90% amplitude levels. This is equivalent to ≤ 4.5 GHz bandwidth.

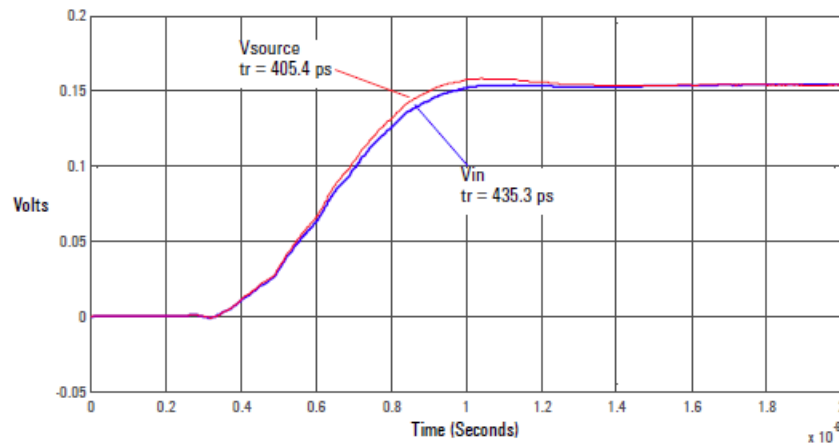


Figure 74 Graph of 25 ohm 240 ps step generator with and without probe connected.

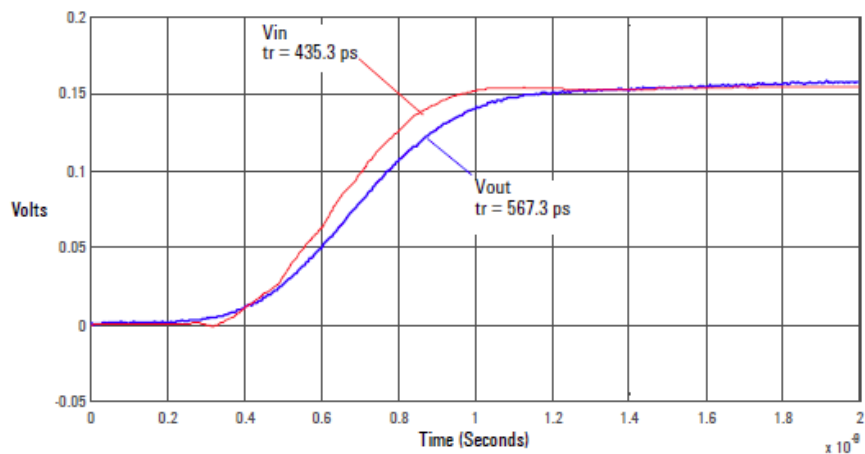


Figure 75 Graph of Vin and Vout of probe with a 25 ohm 240 ps step generator.

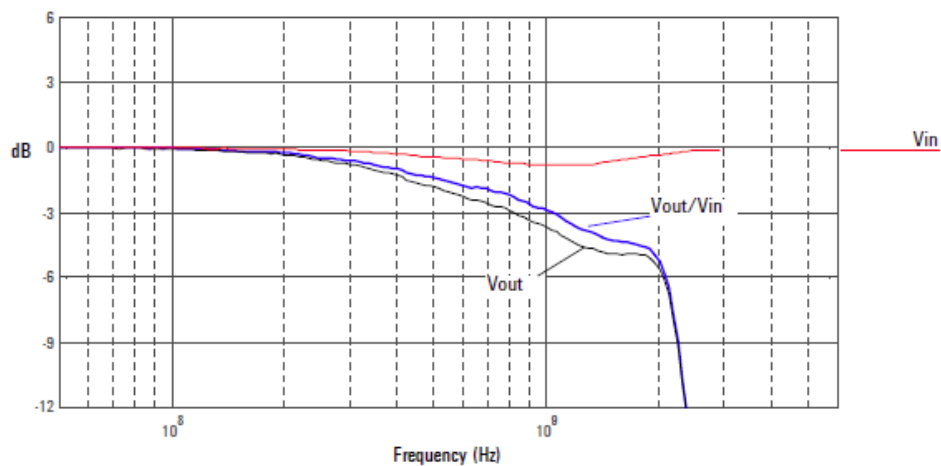


Figure 76 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

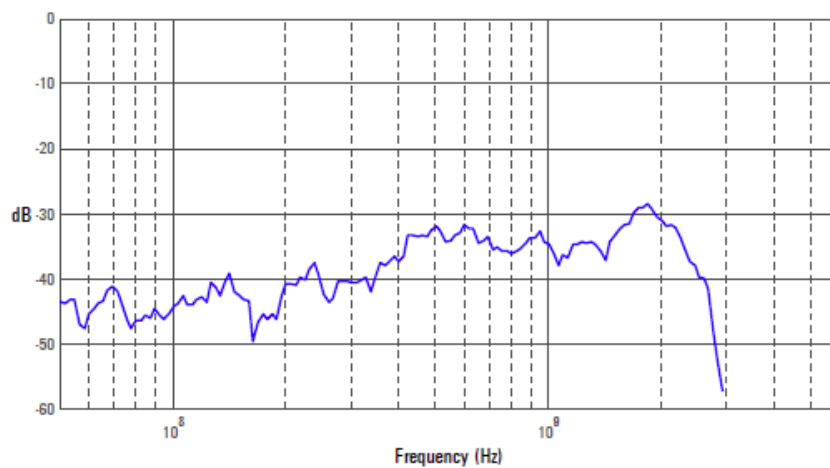


Figure 77 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

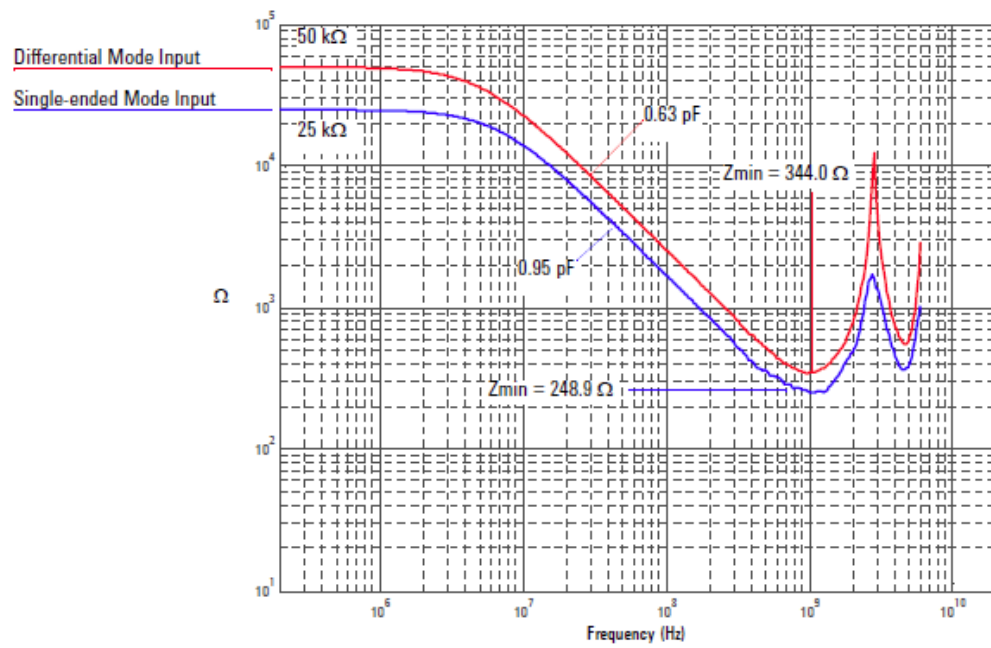


Figure 78 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Full BW)

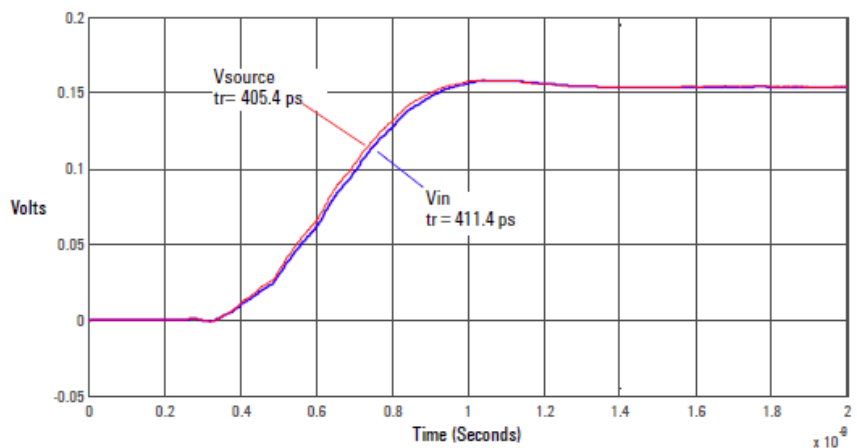


Figure 79 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

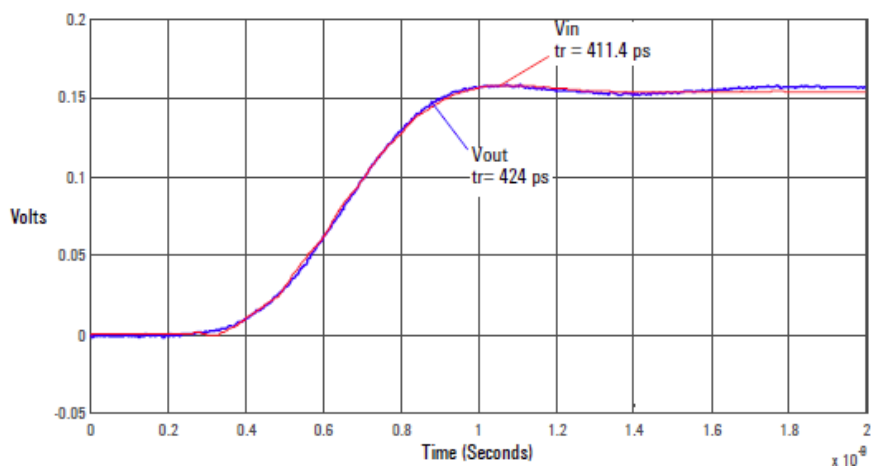


Figure 80 Graph of Vin and Vout of probe with a 25 ohm 405.4 ps step generator.

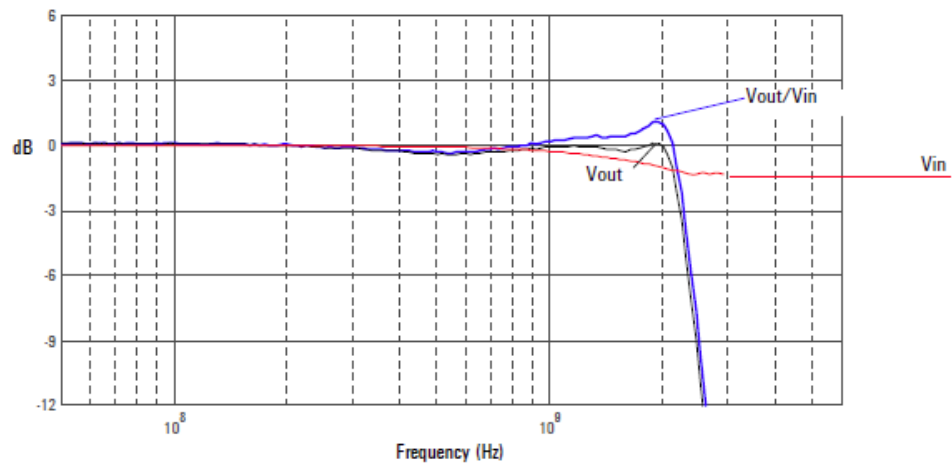


Figure 81 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

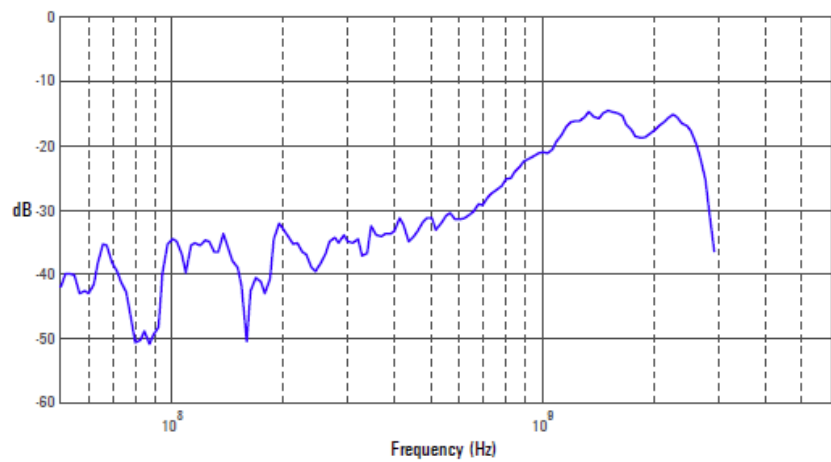


Figure 82 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

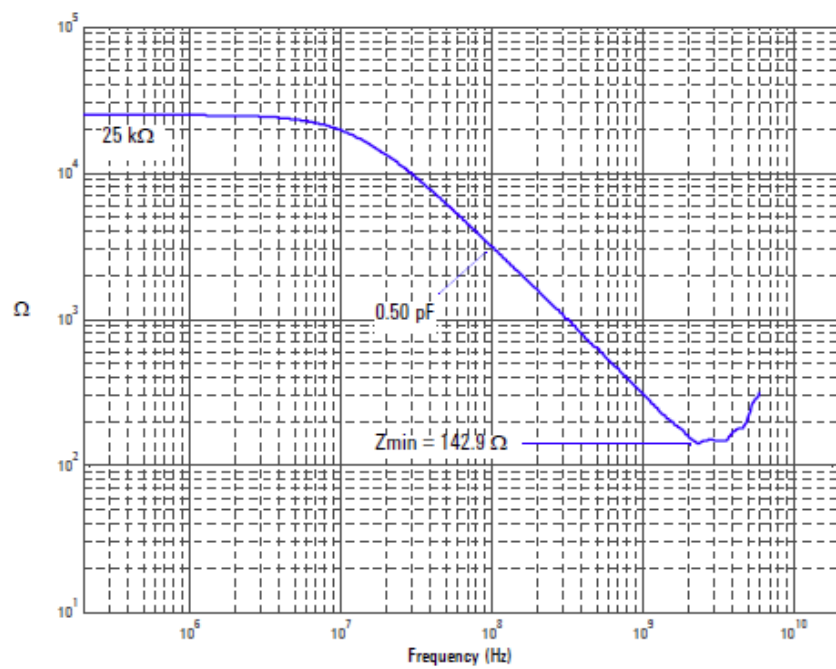


Figure 83 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Medium BW)

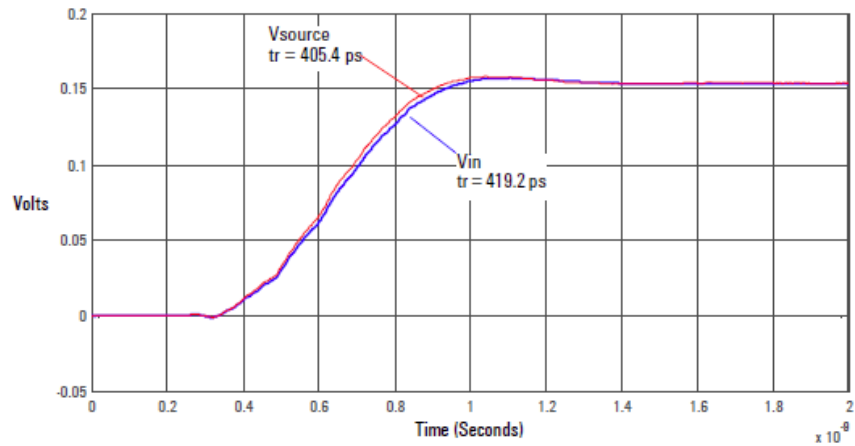


Figure 84 Graph of 25 ohm 405.4 ps step generator with and without probe connected.

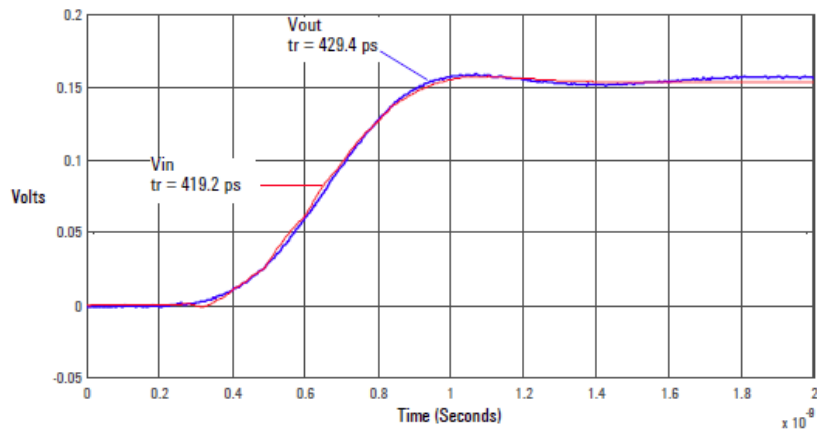


Figure 85 Graph of V_{in} and V_{out} of probe with a 25 ohm 405.4 ps step generator.

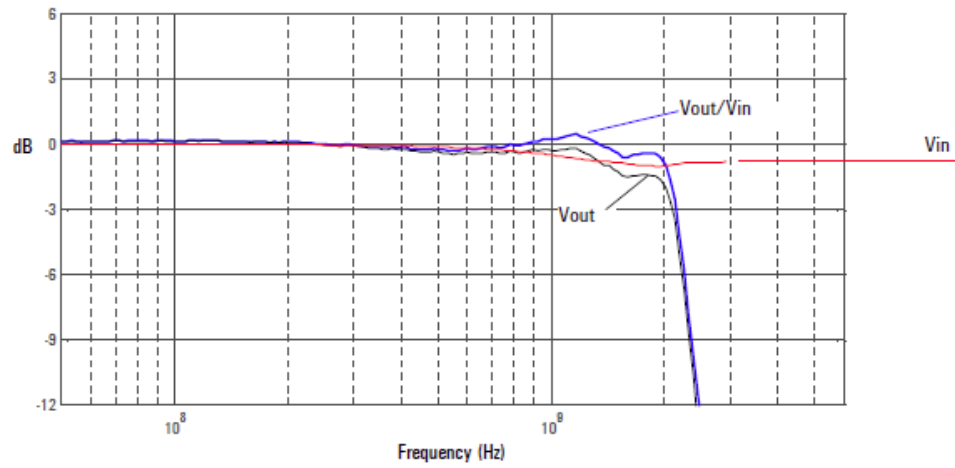


Figure 86 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

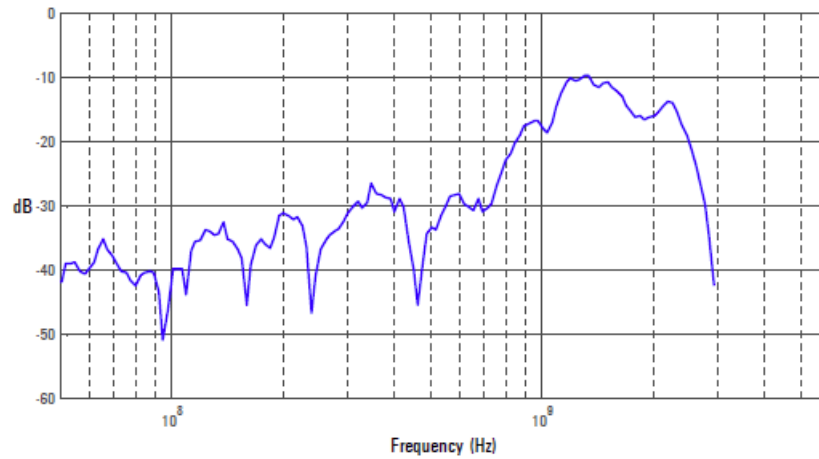


Figure 87 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

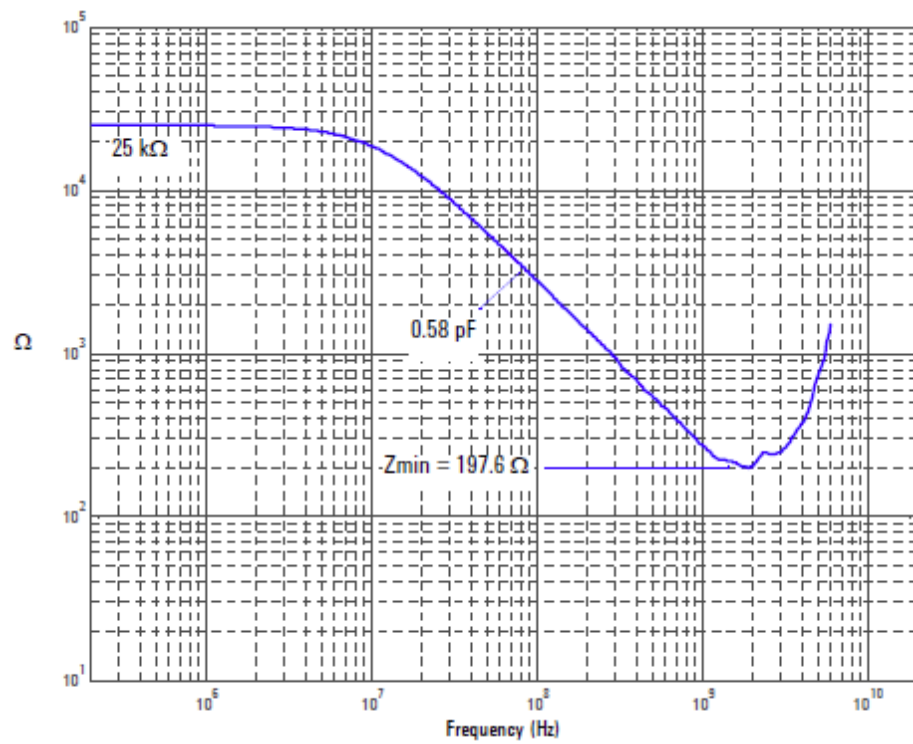
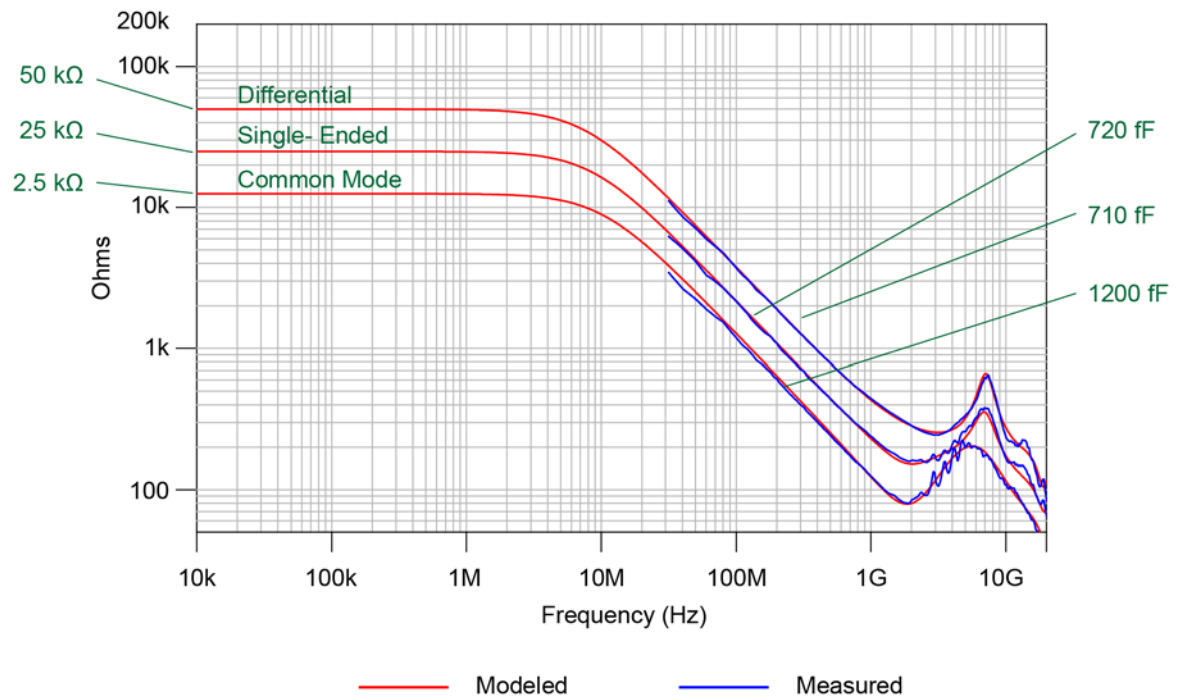


Figure 88 Magnitude plot of probe input impedance versus frequency.

N2851A QuickTip Head with N2849A QuickTip

**Figure 89** Input Impedances (Modeled and Measured)

6 1131A Performance Data Plots

E2675B Differential Browser	110
E2676A Single-Ended Browser	113
E2677B Differential Solder-in Probe Head (Full BW)	116
E2677B Differential Solder-in Probe Head (Medium BW)	119
E2678A/B Differential Socketed Probe Head (Full BW)	122
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	125
E2679A Single-Ended Solder-in Probe Head (Full BW)	128
E2679A Single-Ended Solder-in Probe Head (Medium BW)	131
N2851A QuickTip Head with N2849A QuickTip	134

This chapter provides graphs of the performance characteristics of the 1131A probes using the different probe heads that come with the E2668A single-ended and E2669A differential connectivity kits.

NOTE

All rise times shown are measured from the 10% to the 90% amplitude levels.

E2675B Differential Browser

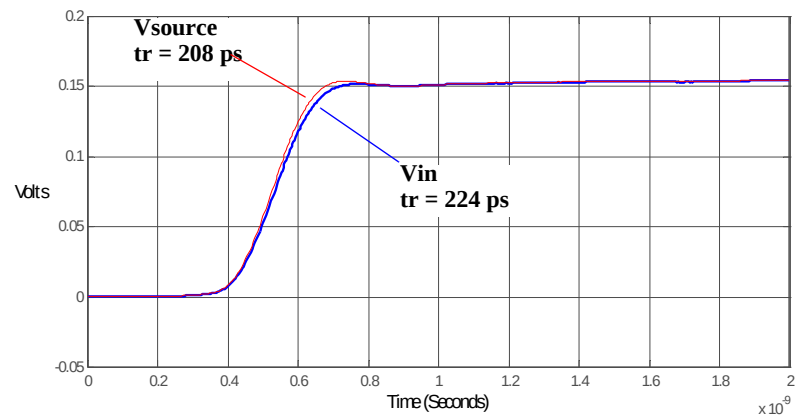


Figure 90 Graph of 25Ω 200 ps step generator with and without probe connected.

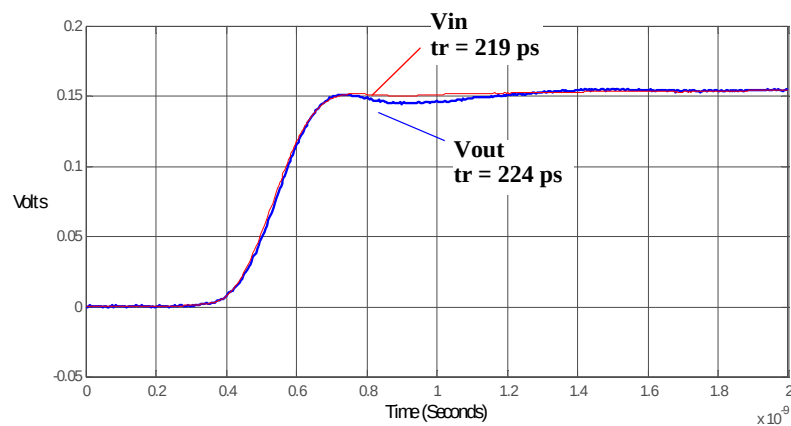


Figure 91 Graph of Vin and Vout of probe with a 25Ω 200 ps step generator.

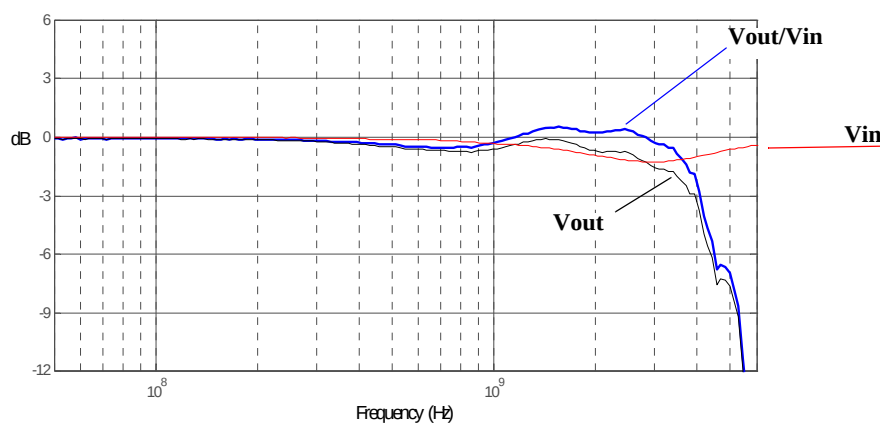


Figure 92 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

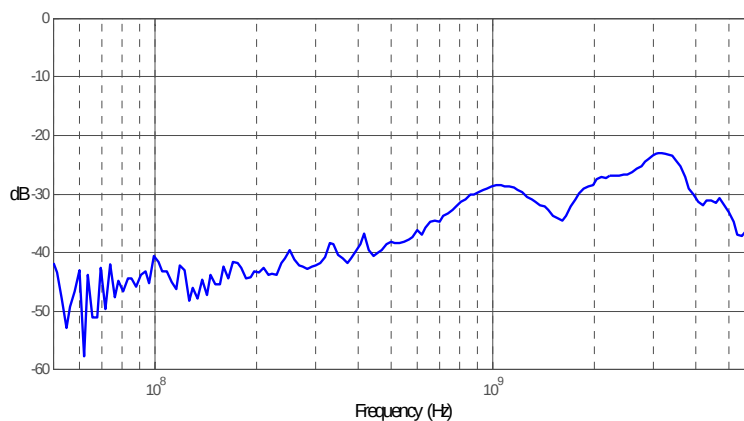


Figure 93 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

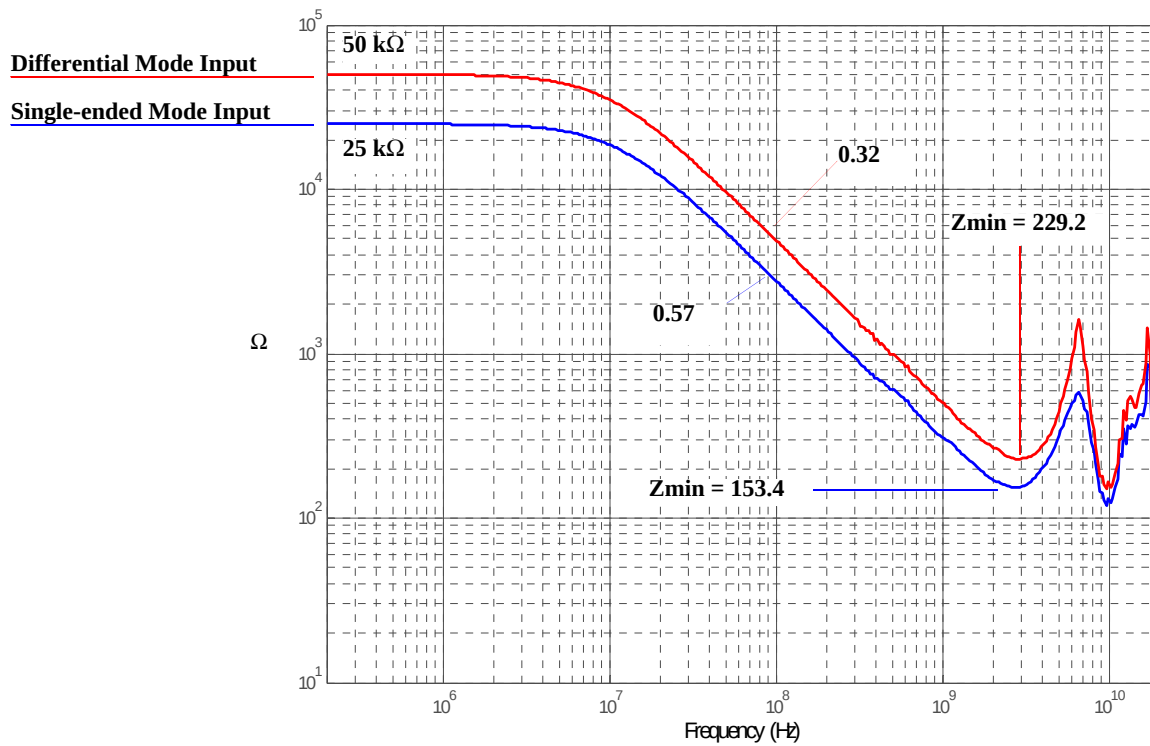


Figure 94 Magnitude plot of probe input impedance versus frequency.

E2676A Single-Ended Browser

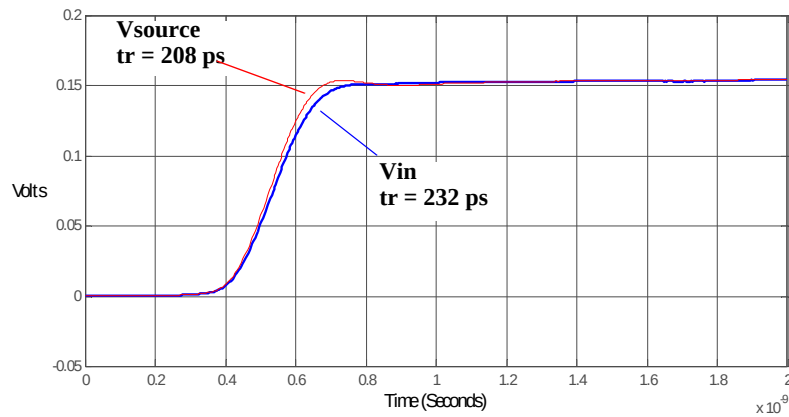


Figure 95 Graph of 25Ω 200 ps step generator with and without probe connected.

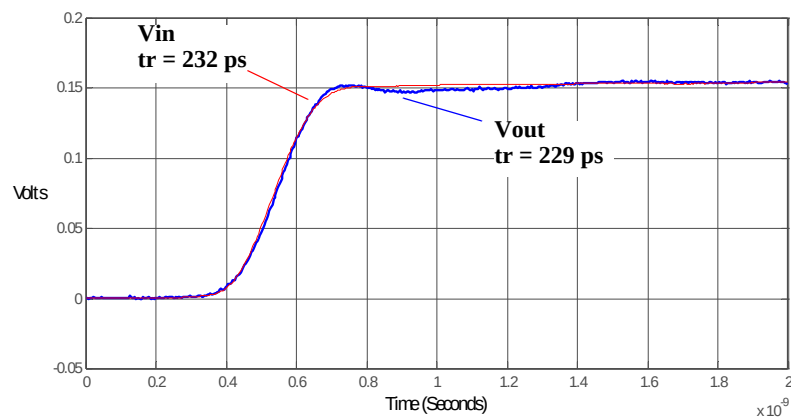


Figure 96 Graph of V_{in} and V_{out} of probe with a 25Ω 200 ps step generator.

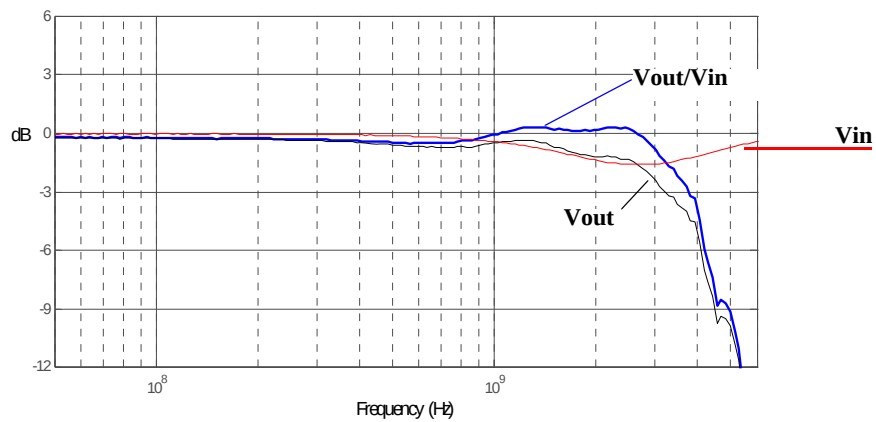


Figure 97 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

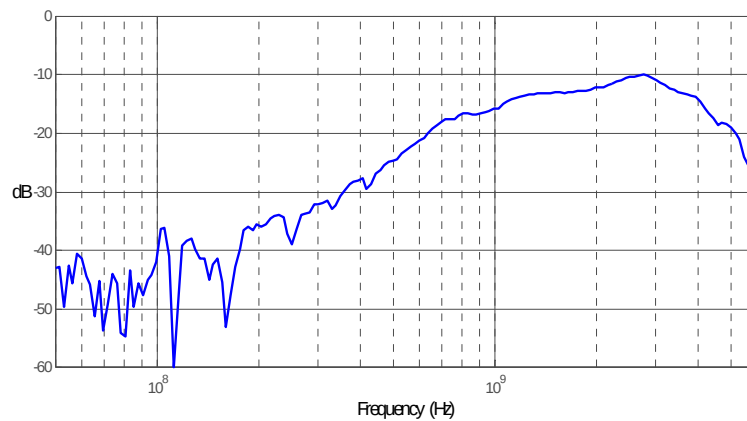


Figure 98 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

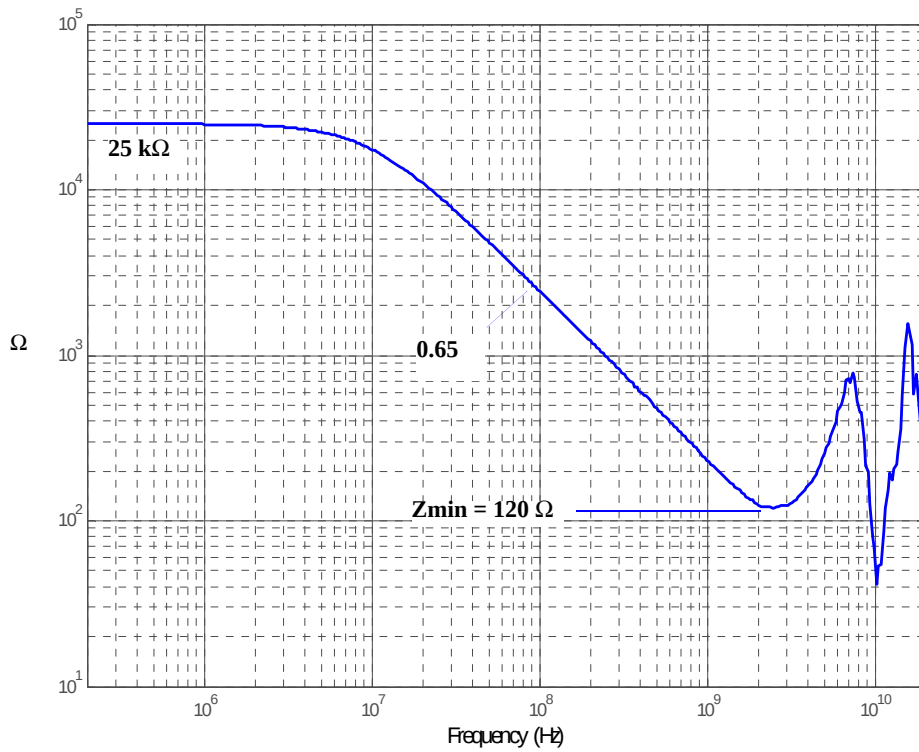


Figure 99 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Full BW)

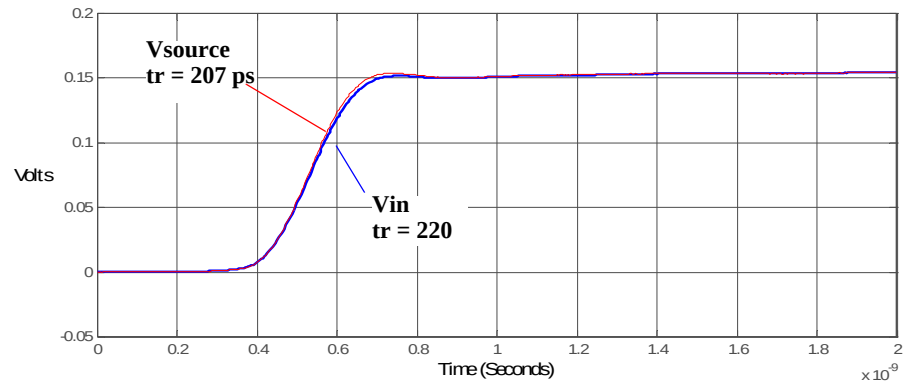


Figure 100 Graph of 25 ohm 200 ps step generator with and without probe connected.

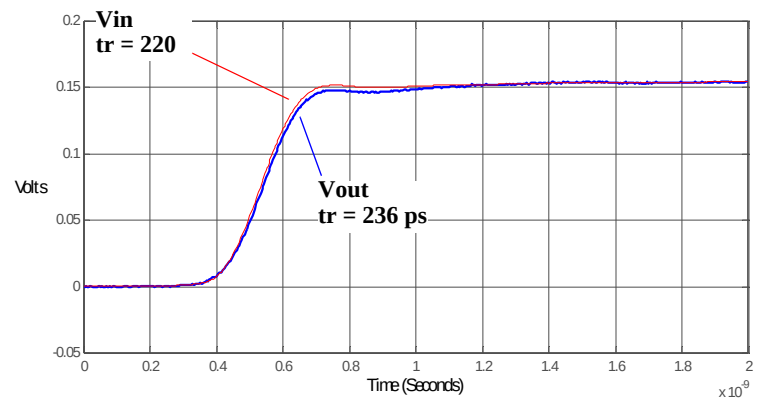


Figure 101 Graph of Vin and Vout of probe with a 25 ohm 200 ps step generator.

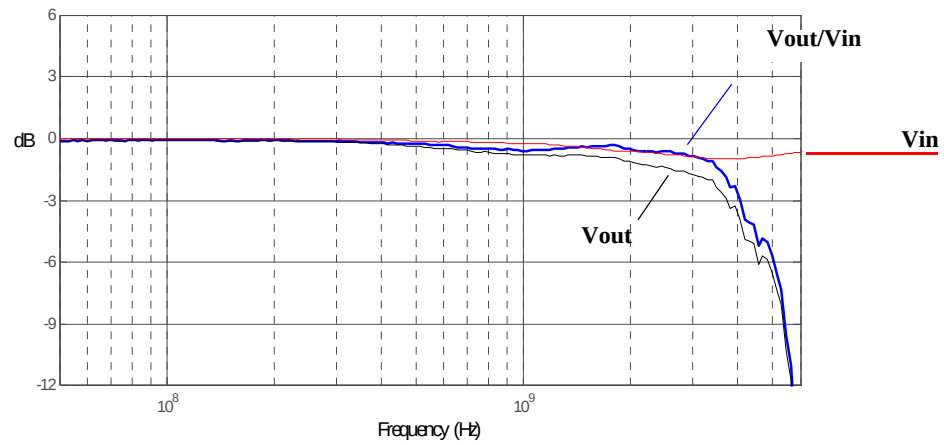


Figure 102 Graph of V_{in} and V_{out} of probe with a 25 ohm source and V_{out}/V_{in} frequency response.

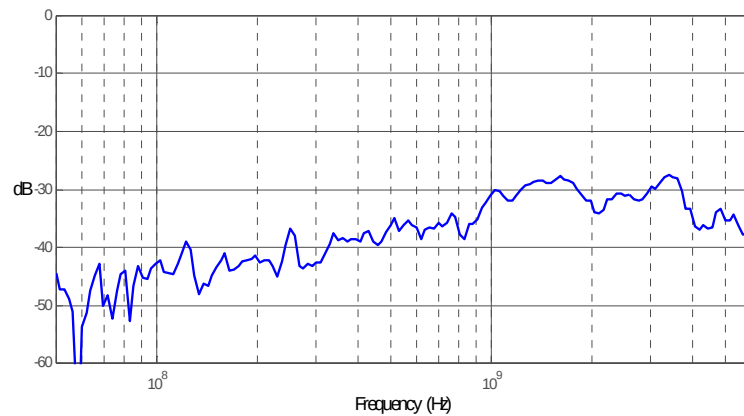


Figure 103 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

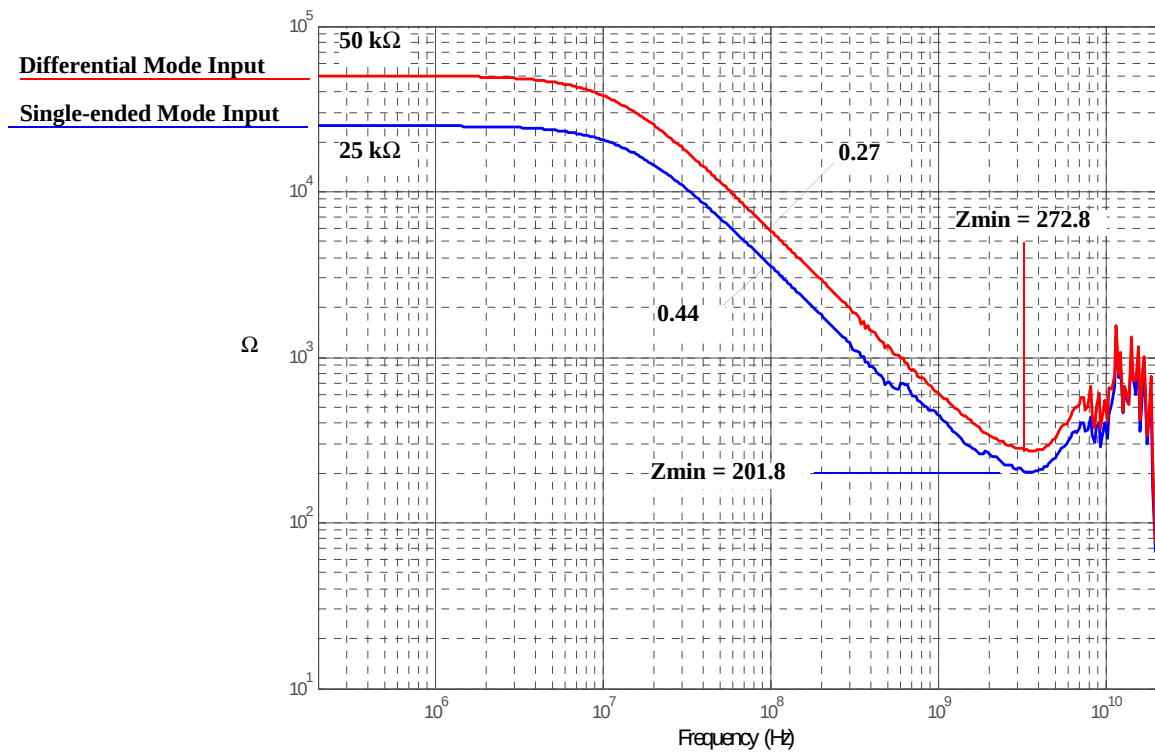


Figure 104 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Medium BW)

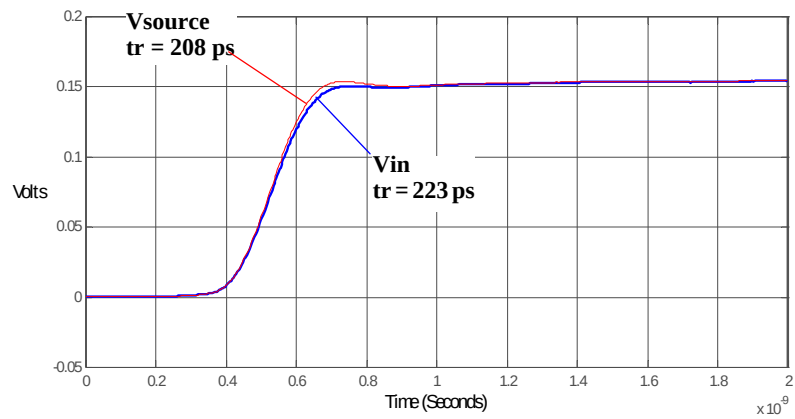


Figure 105 Graph of 25Ω 200 ps step generator with and without probe connected.

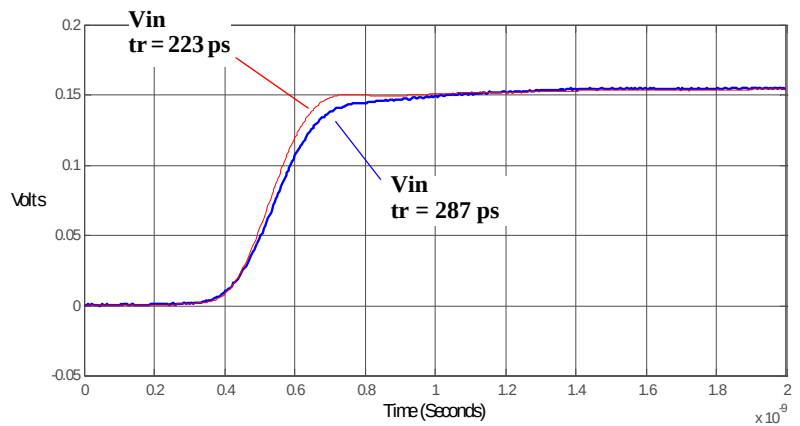


Figure 106 Graph of V_{in} and V_{out} of probe with a 25Ω 200 ps step generator.

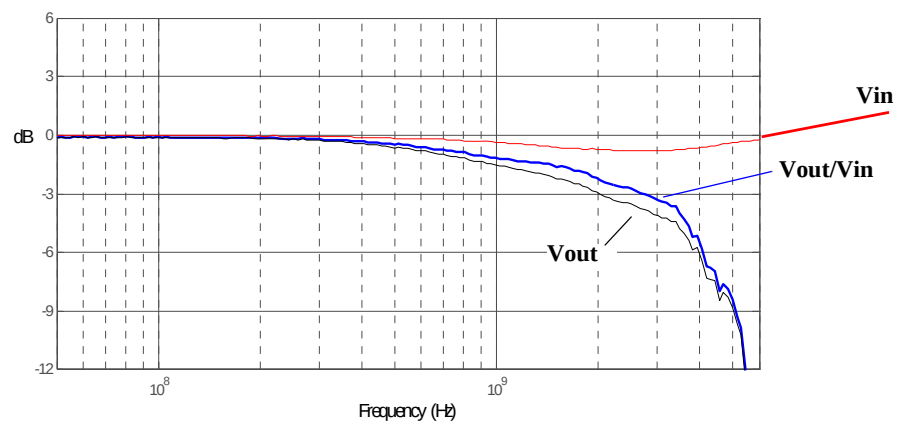


Figure 107 Graph of Vin and Vout of probe with a 25Ω source and Vout/Vin frequency response.

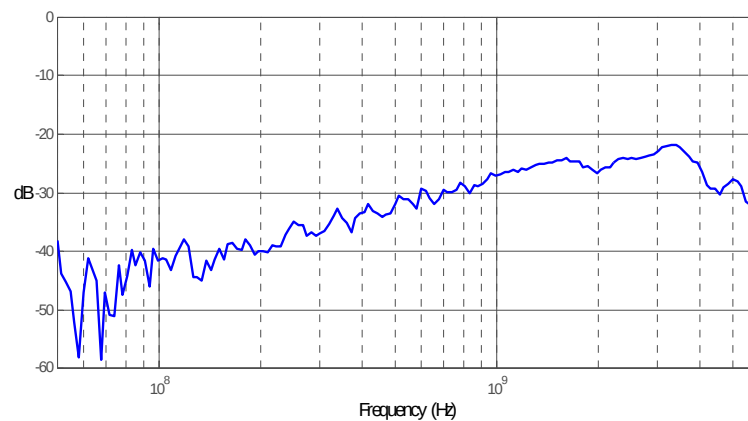


Figure 108 Graph of Vout/Vin frequency response when inputs driven in common (common mode rejection).

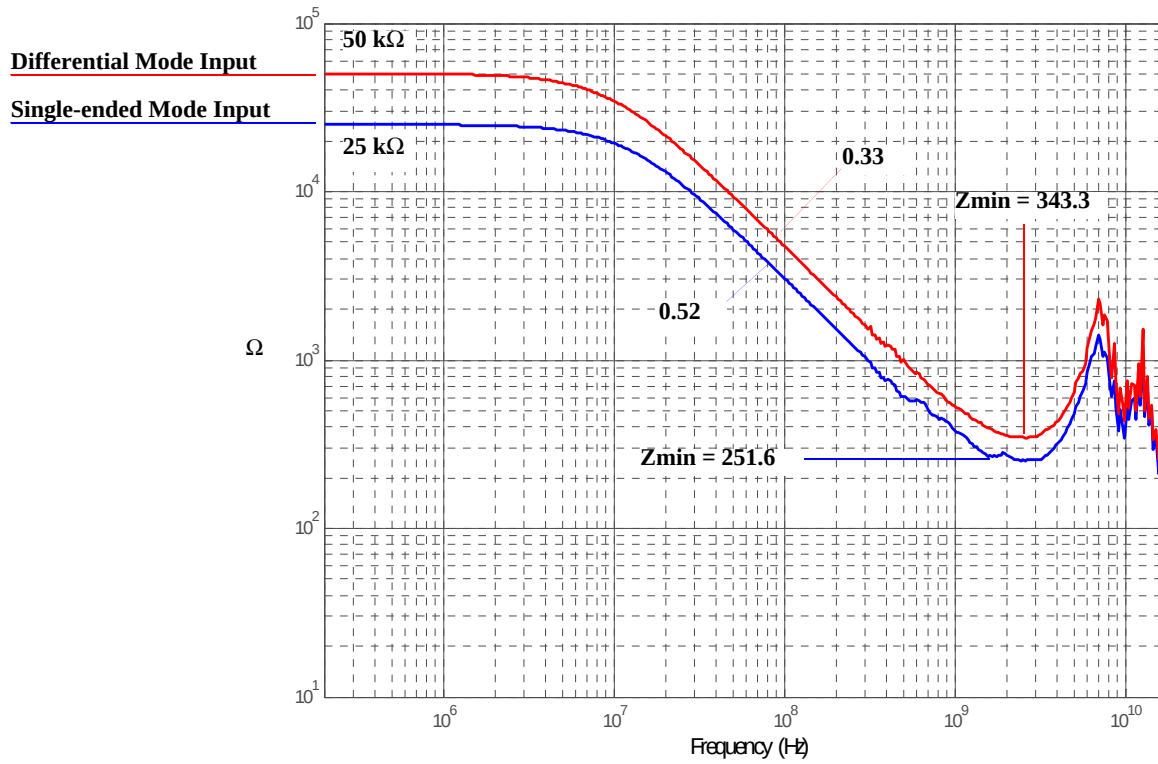


Figure 109 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head (Full BW)

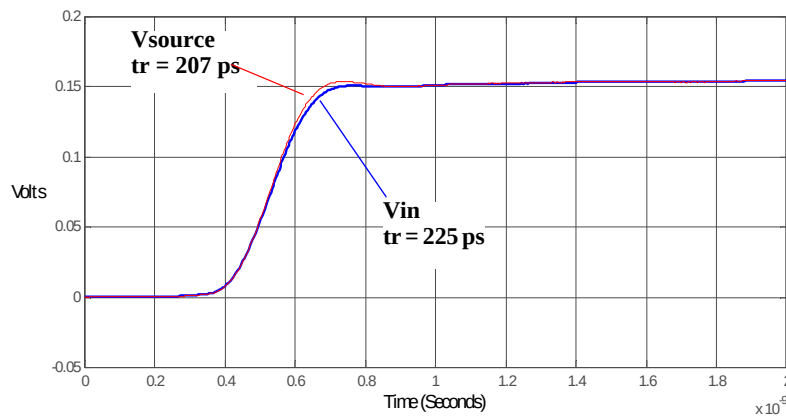


Figure 110 Graph of 25Ω 200 ps step generator with and without probe connected.

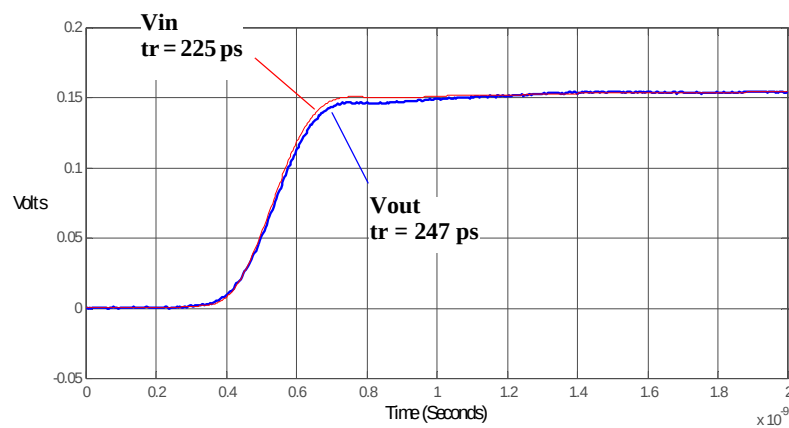


Figure 111 Graph of V_{in} and V_{out} of probe with a 25Ω 200 ps step generator.

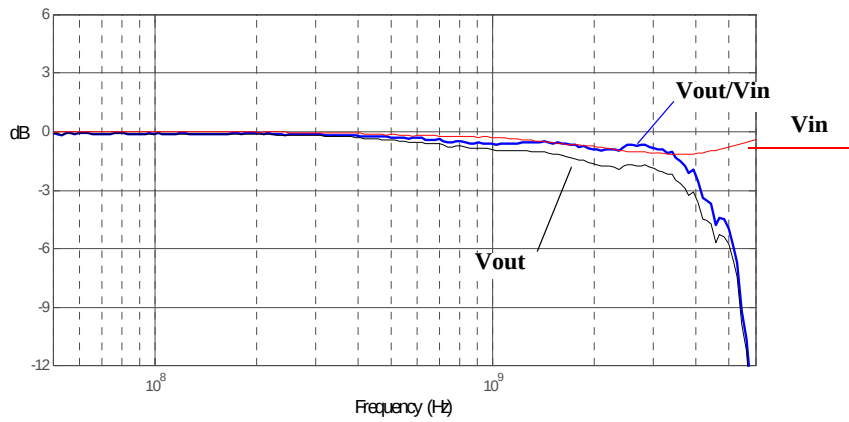


Figure 112 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

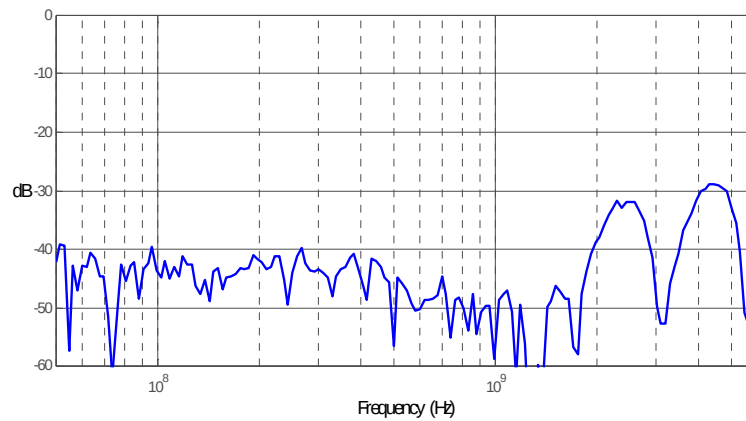


Figure 113 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

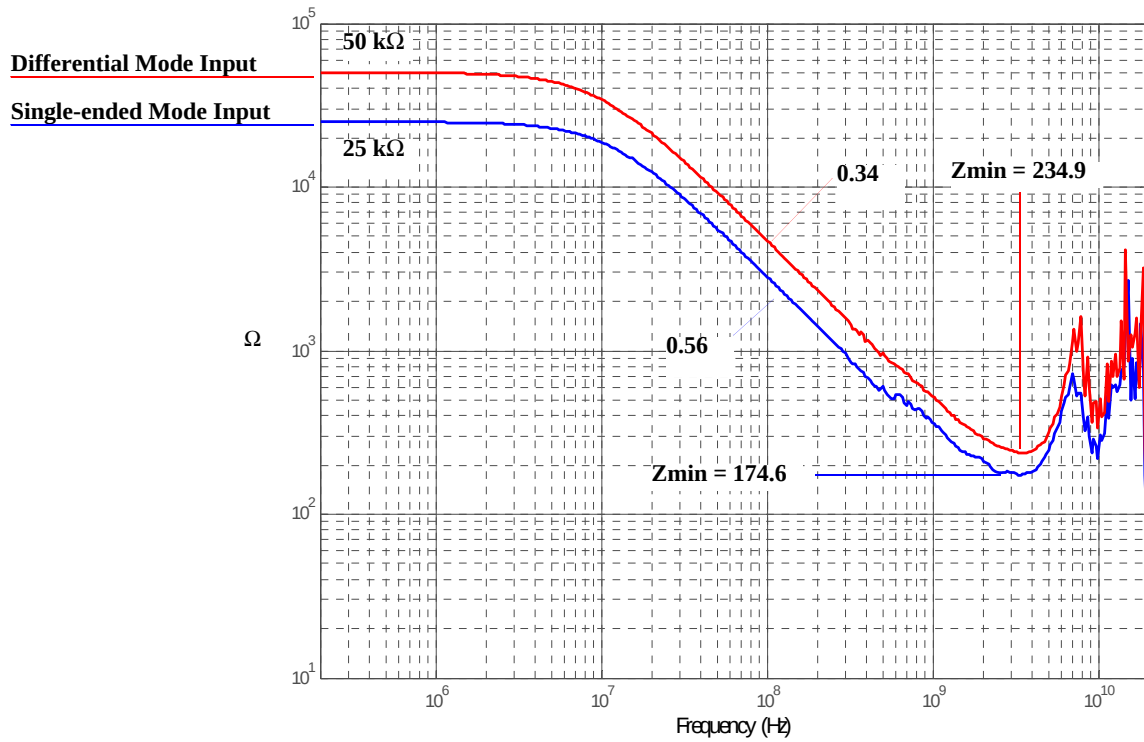


Figure 114 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head with Damped Wire Accessory

NOTE

Due to reflections on the long wire accessories, signals being probed should be limited to ≥ 240 ps rise time measured at the 10% and 90% amplitude levels. This is equivalent to ≤ 1.5 GHz bandwidth.

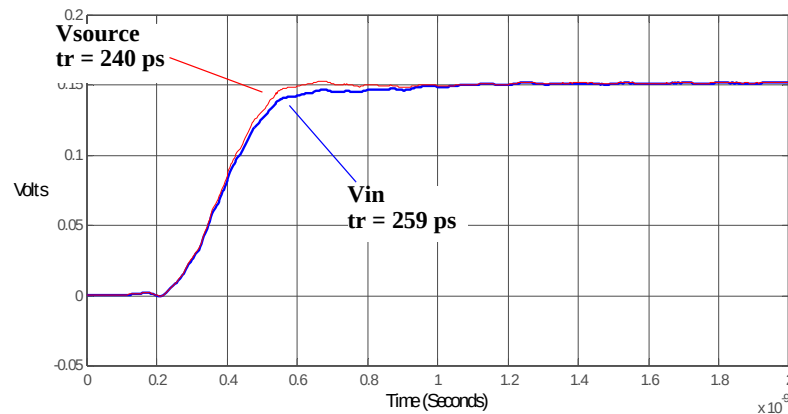


Figure 115 Graph of 25Ω 240 ps step generator with and without probe connected.

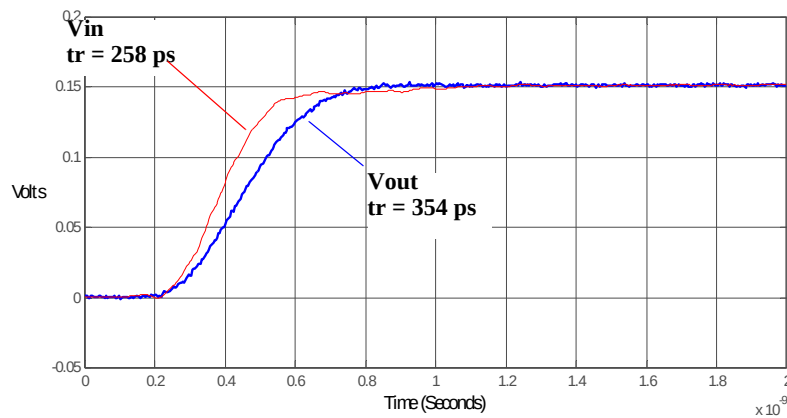


Figure 116 Graph of Vin and Vout of probe with a 25Ω 240 ps step generator.

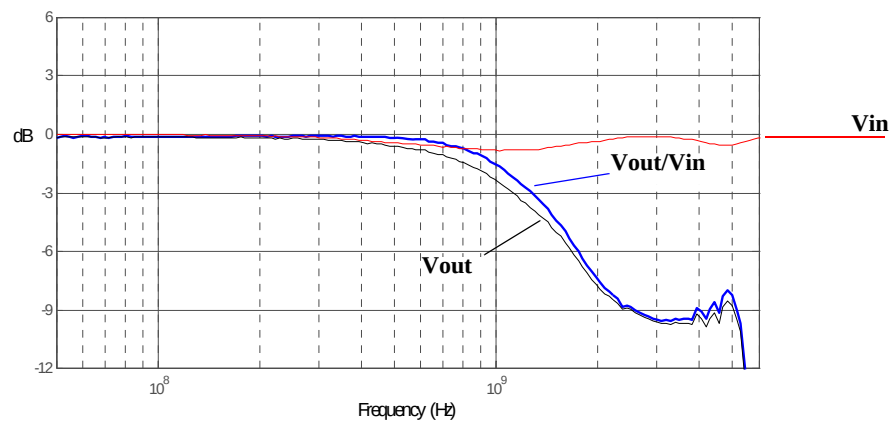


Figure 117 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

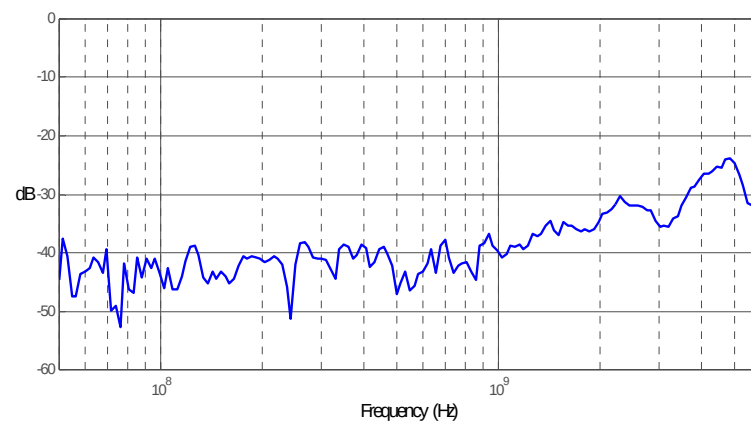


Figure 118 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

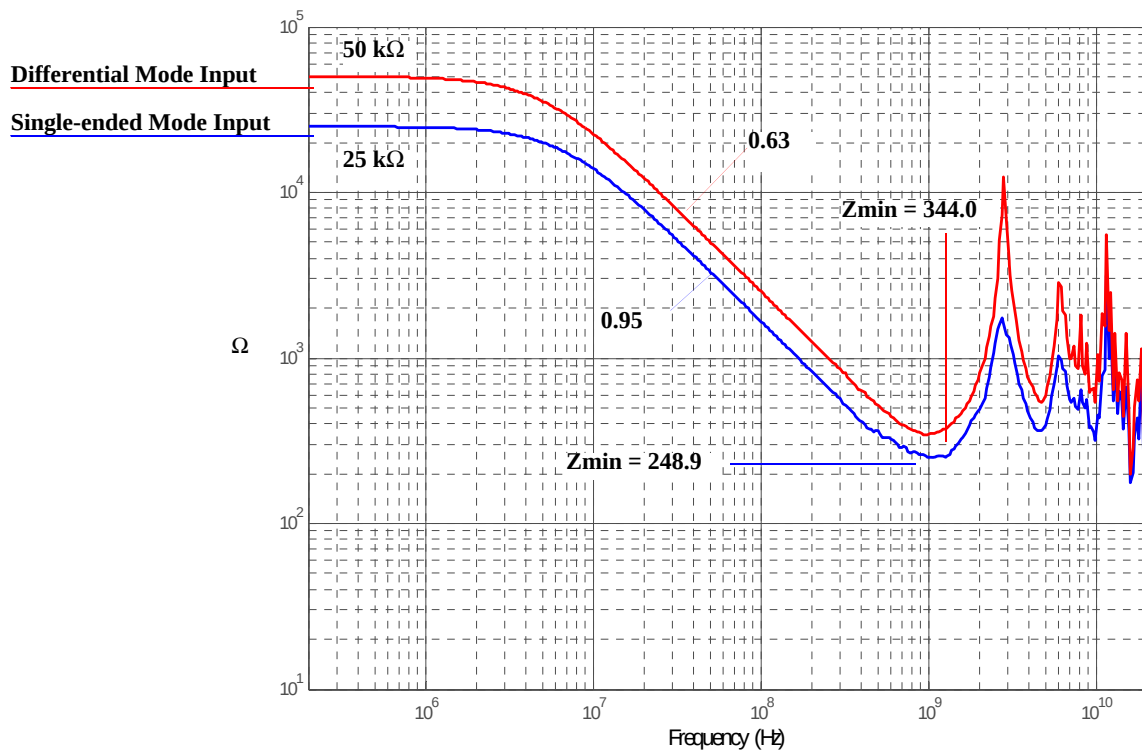


Figure 119 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Full BW)

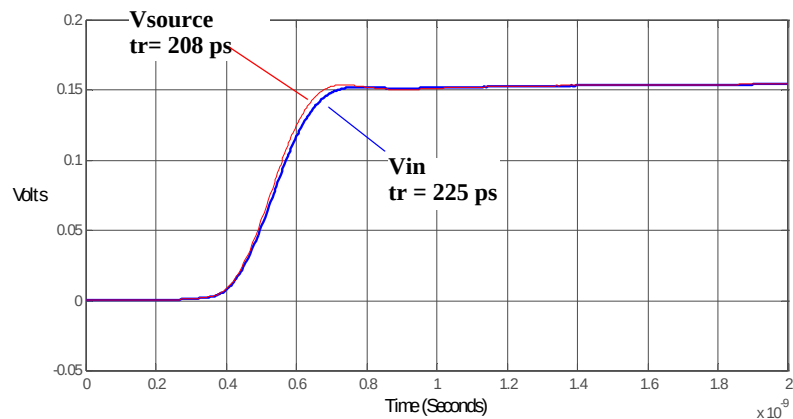


Figure 120 Graph of 25Ω 200 ps step generator with and without probe connected.

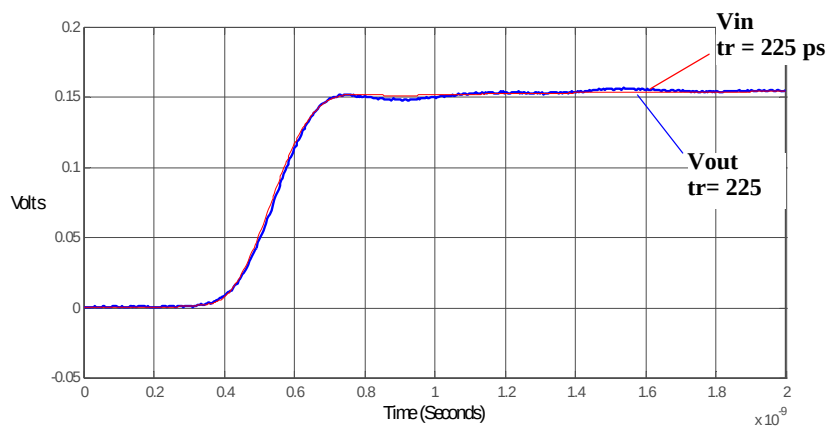


Figure 121 Graph of Vin and Vout of probe with a 25Ω 200 ps step generator.

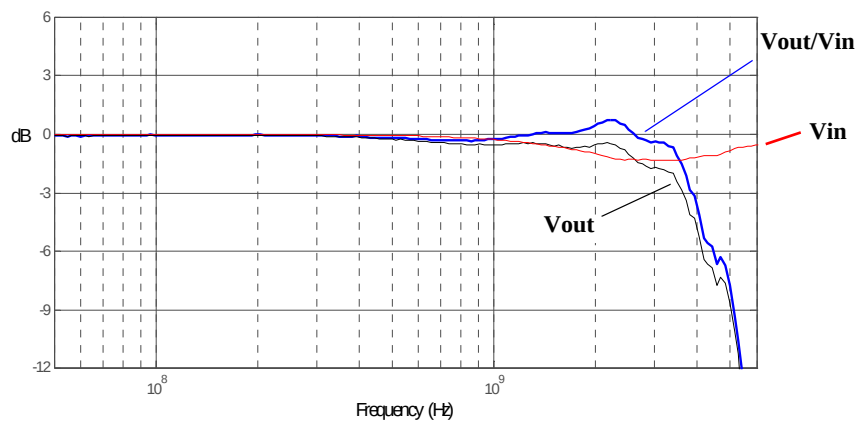


Figure 122 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

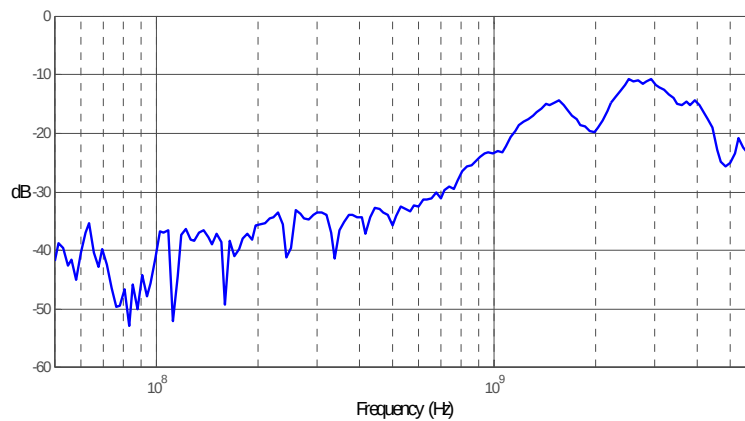


Figure 123 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

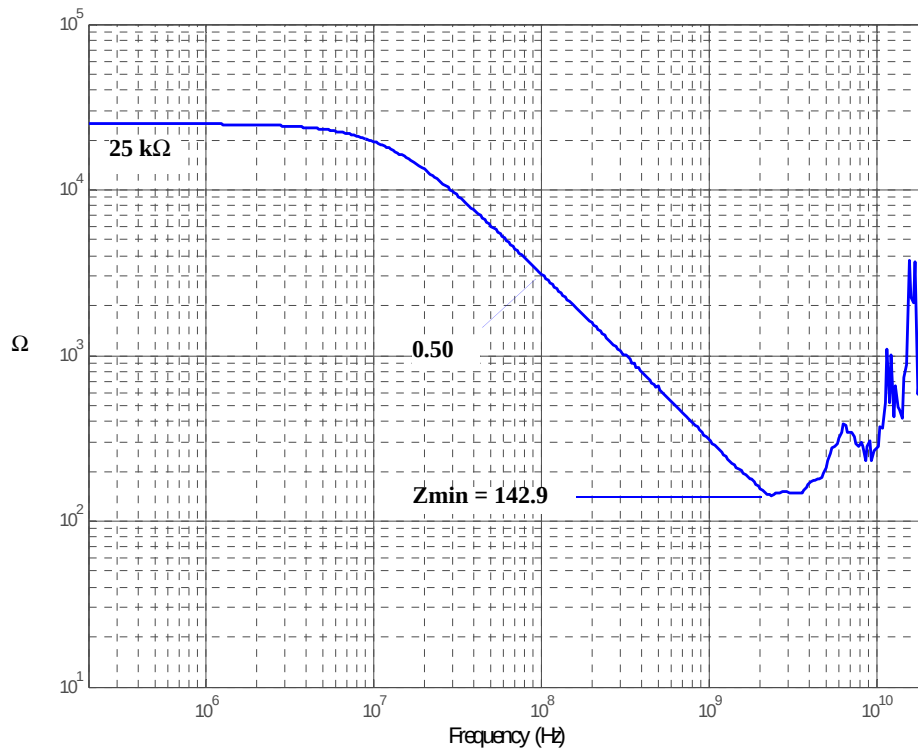


Figure 124 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Medium BW)

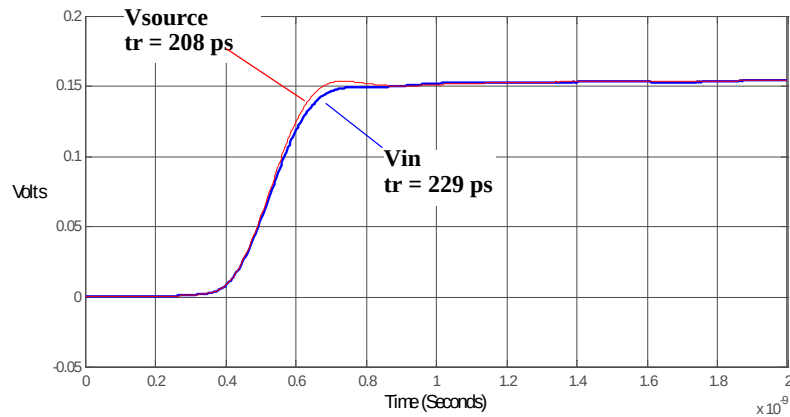


Figure 125 Graph of 25Ω 200 ps step generator with and without probe connected.

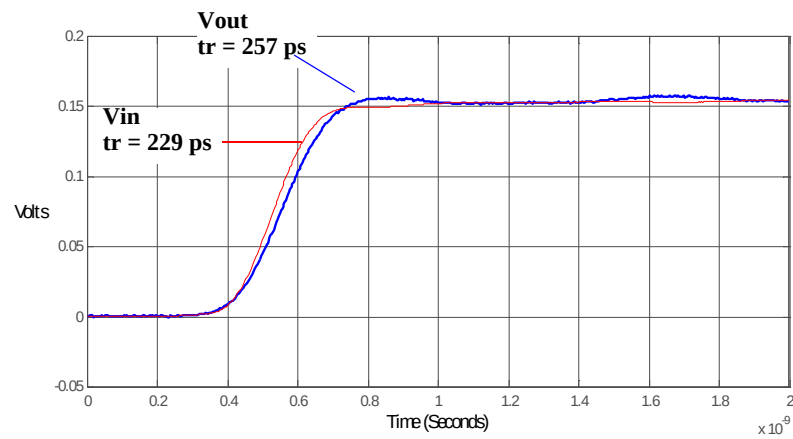


Figure 126 Graph of Vin and Vout of probe with a 25Ω 200 ps step generator.

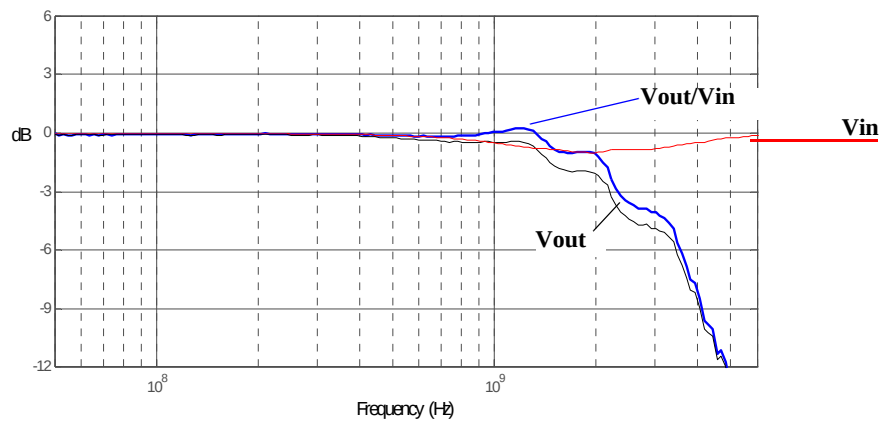


Figure 127 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

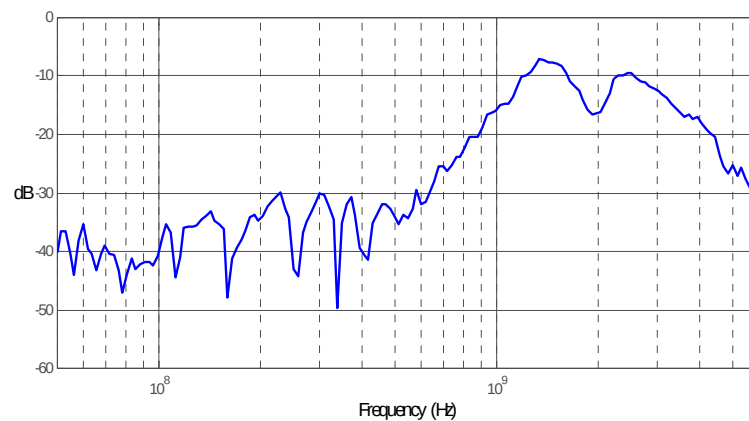


Figure 128 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

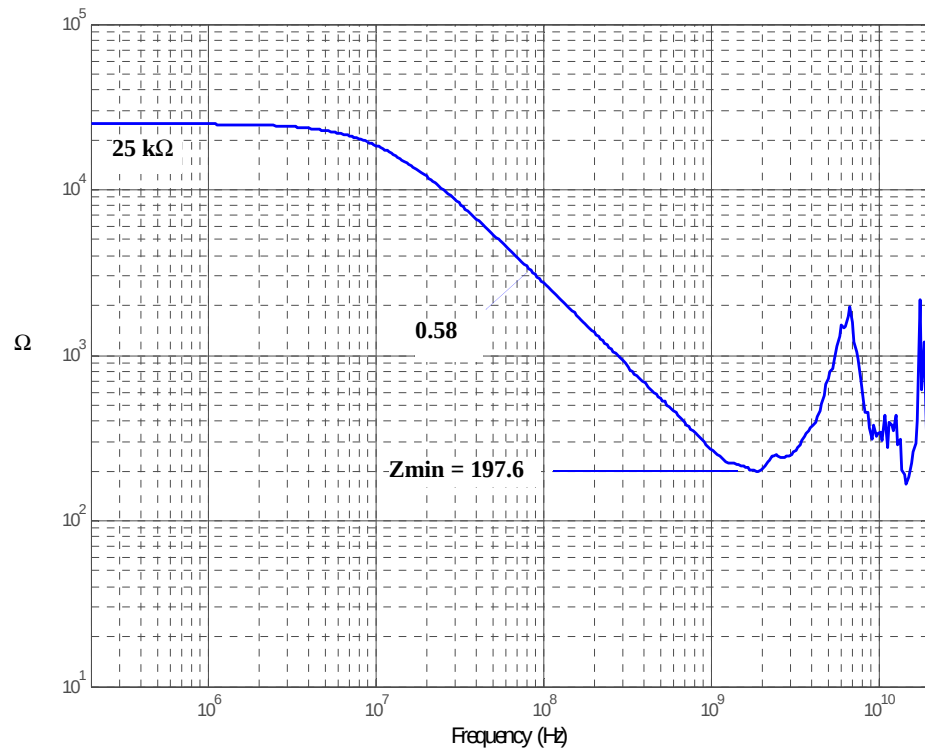
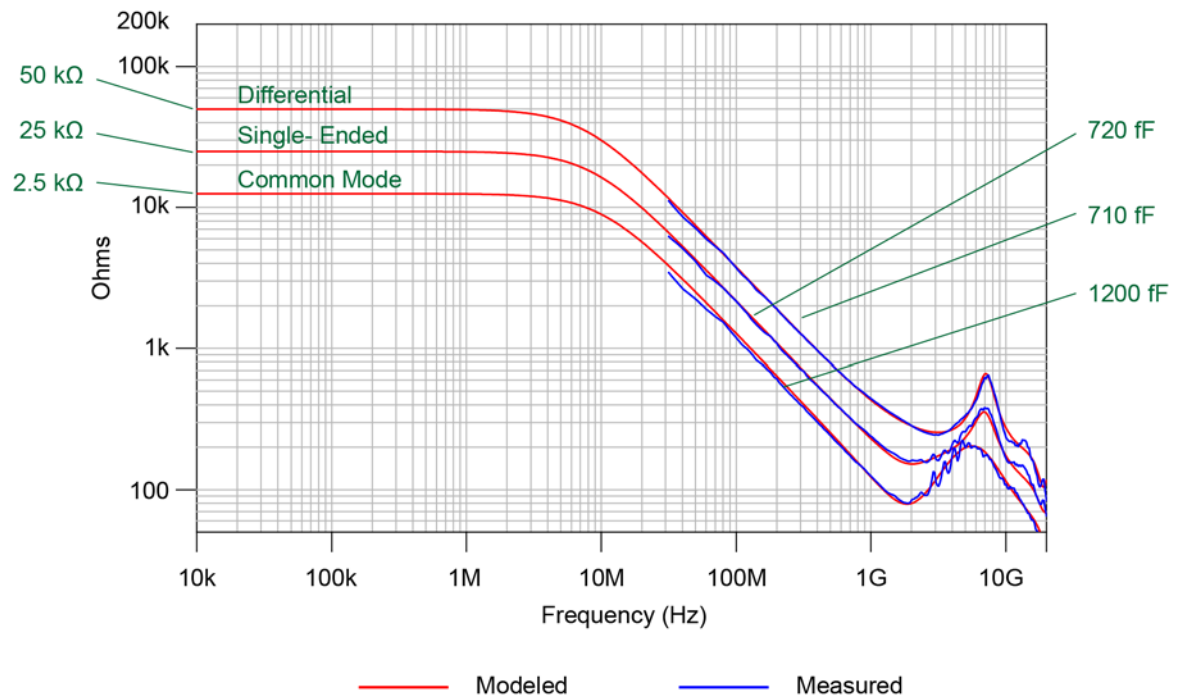


Figure 129 Magnitude plot of probe input impedance versus frequency.

N2851A QuickTip Head with N2849A QuickTip

**Figure 130** Input Impedances (Modeled and Measured)

7 1132A Performance Data Plots

E2675B Differential Browser	136
E2676A Single-Ended Browser	139
E2677B Differential Solder-in Probe Head (Full BW)	142
E2677B Differential Solder-in Probe Head (Medium BW)	145
E2678A/B Differential Socketed Probe Head (Full BW)	148
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	151
E2679A Single-Ended Solder-in Probe Head (Full BW)	154
E2679A Single-Ended Solder-in Probe Head (Medium BW)	157
N2851A QuickTip Head with N2849A QuickTip	160

This chapter provides graphs of the performance characteristics of the 1132A probes using the different probe heads that come with the E2668A single-ended and E2669A differential connectivity kits.

NOTE

All rise times shown are measured from the 10% to the 90% amplitude levels.

E2675B Differential Browser

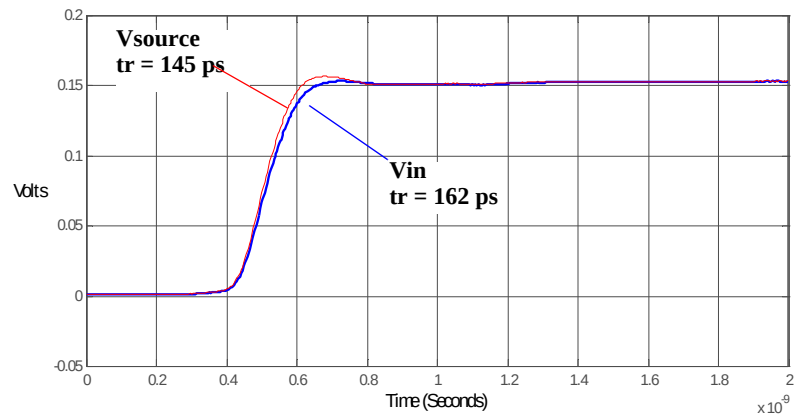


Figure 131 Graph of 25Ω 100 ps step generator with and without probe connected.

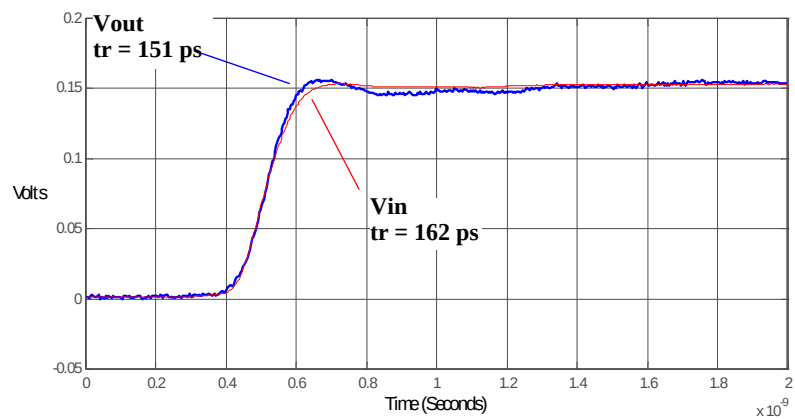


Figure 132 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

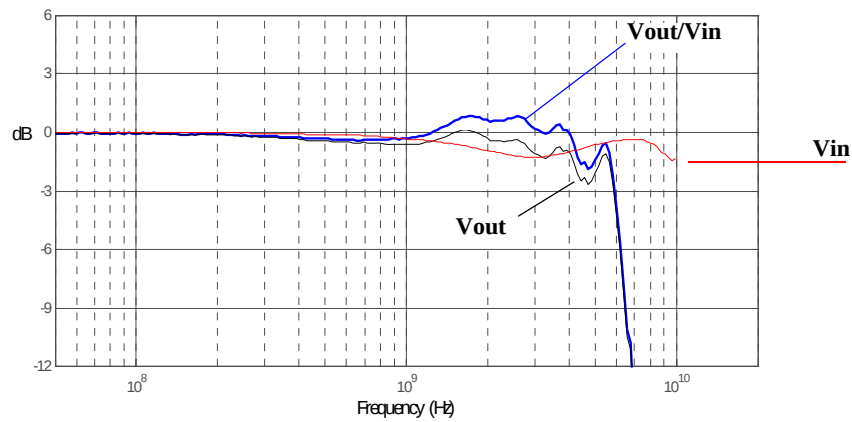


Figure 133 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

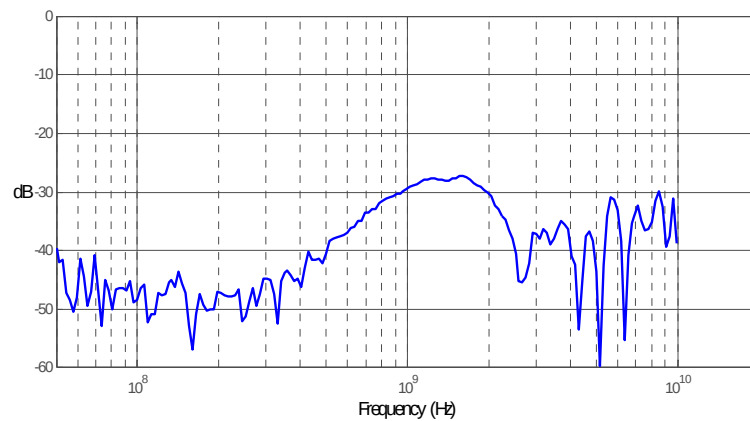


Figure 134 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

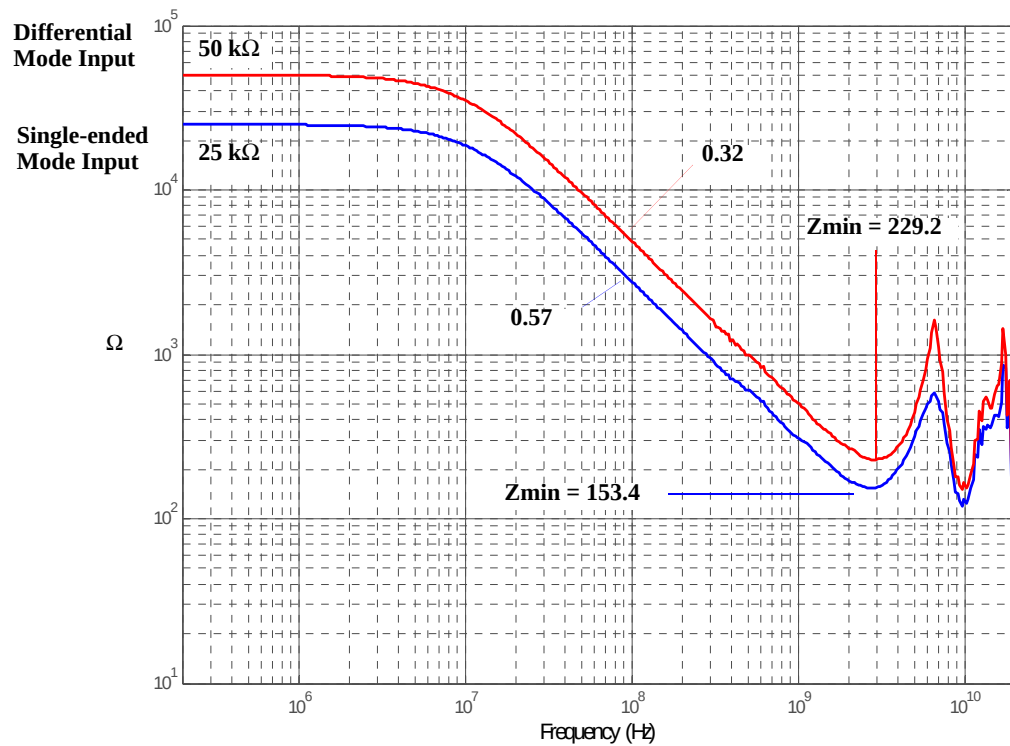


Figure 135 Magnitude plot of probe input impedance versus frequency.

E2676A Single-Ended Browser

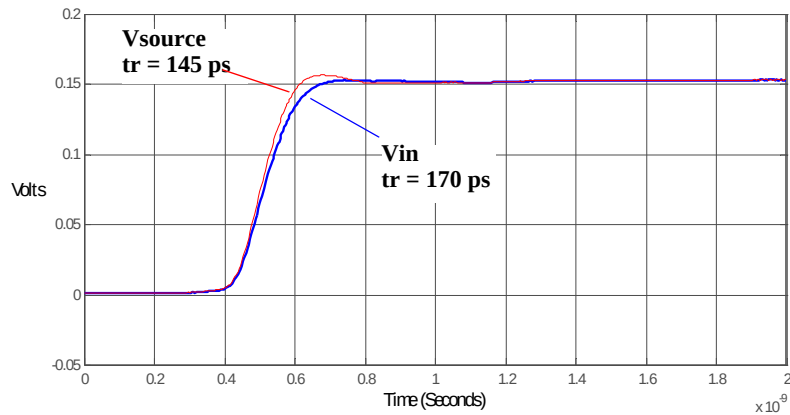


Figure 136 Graph of 25Ω 100 ps step generator with and without probe connected.

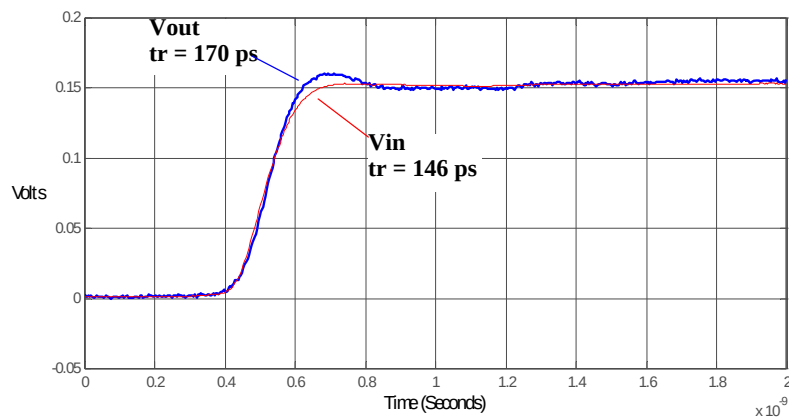


Figure 137 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

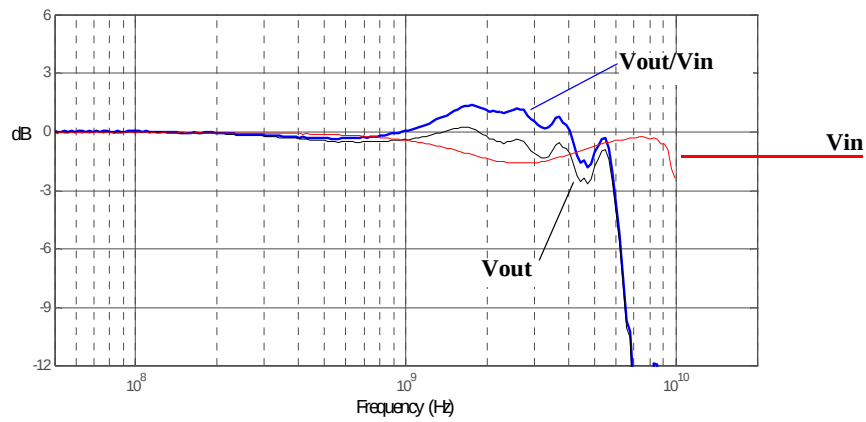


Figure 138 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

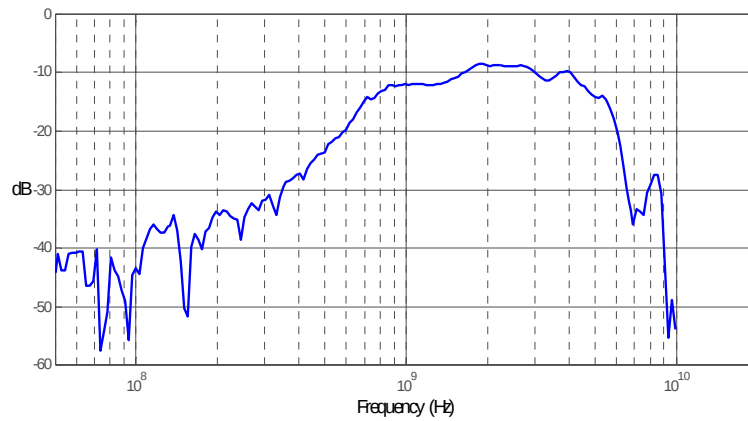


Figure 139 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

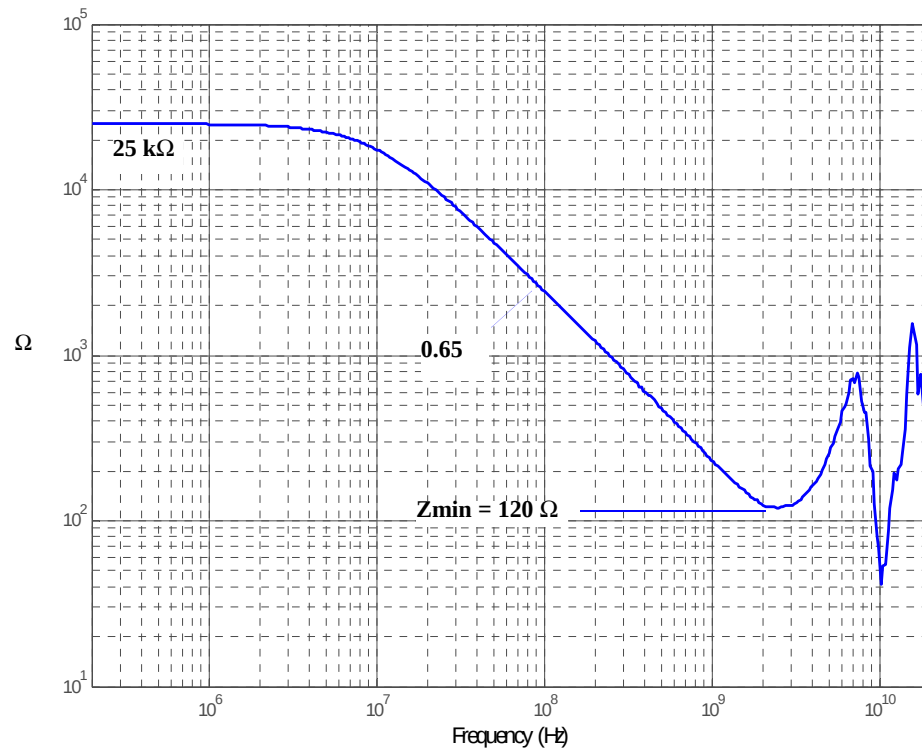


Figure 140 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Full BW)

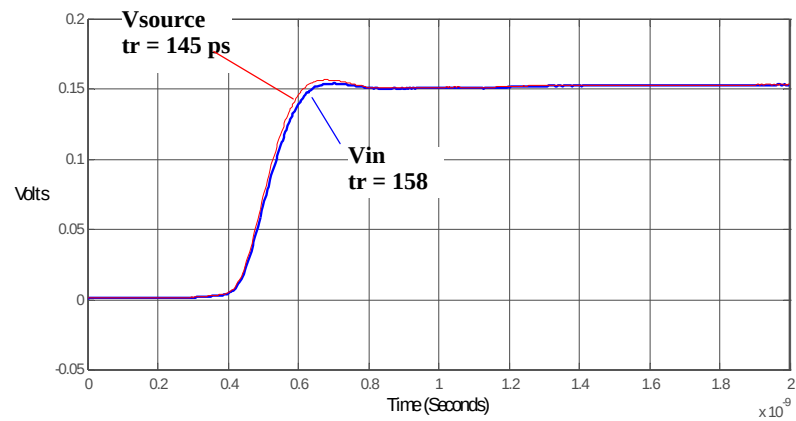


Figure 141 Graph of 25Ω 100 ps step generator with and without probe connected.

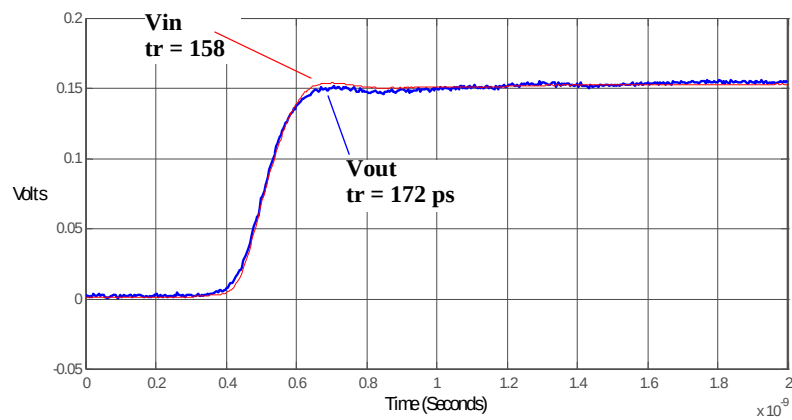


Figure 142 Graph of V_{in} and V_{out} of probe with a 25Ω 100 ps step generator.

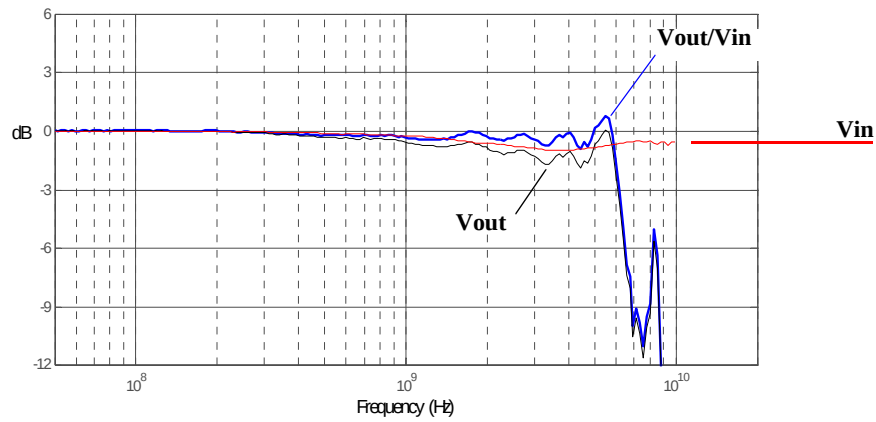


Figure 143 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

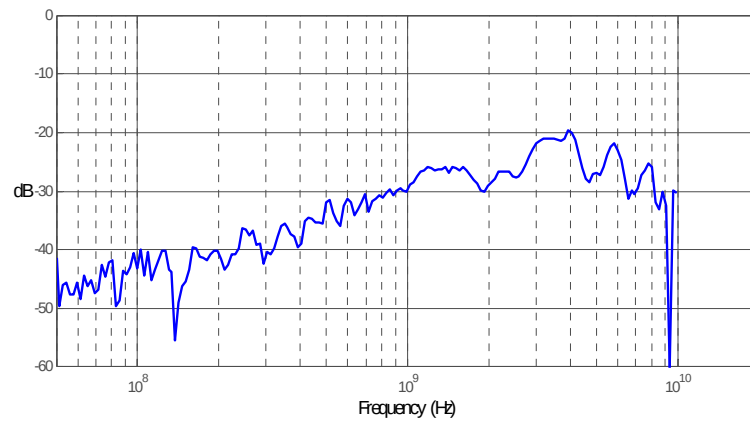


Figure 144 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

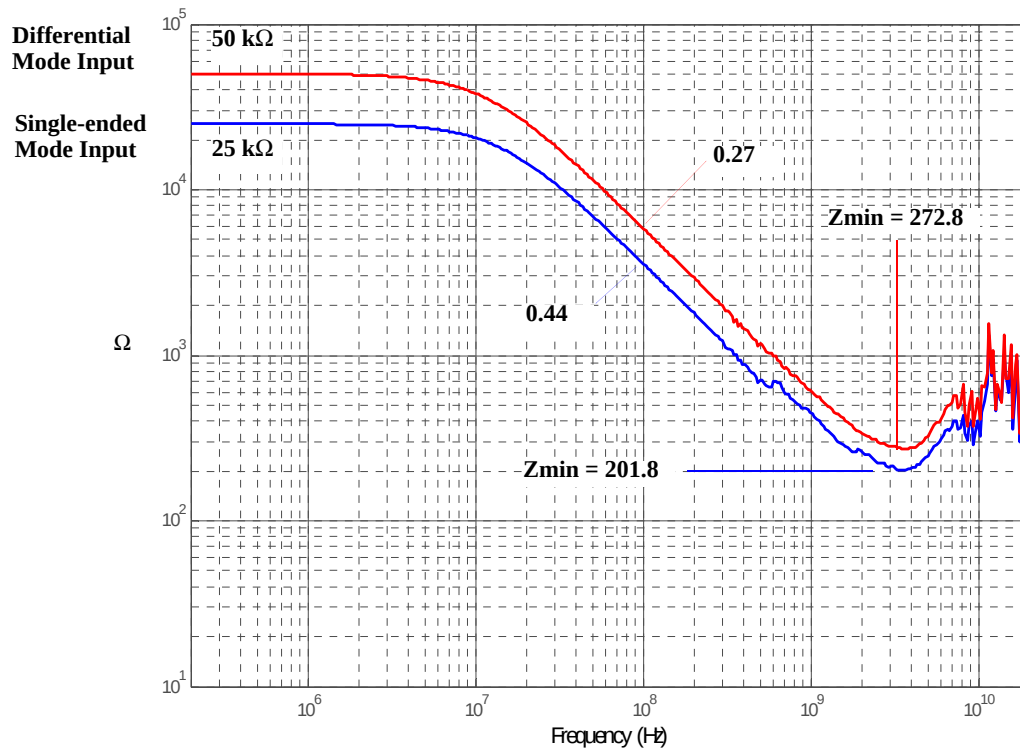


Figure 145 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Medium BW)

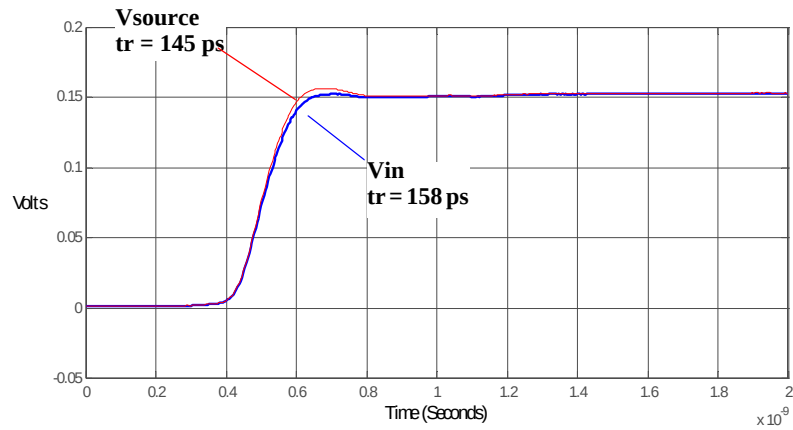


Figure 146 Graph of 25Ω 100 ps step generator with and without probe connected.

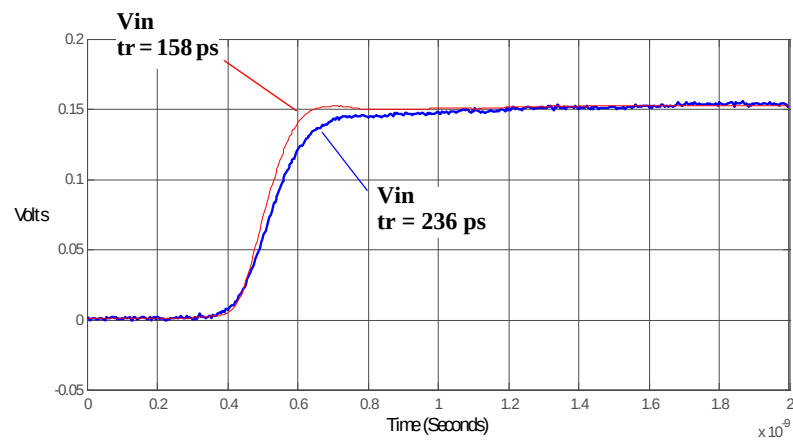


Figure 147 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

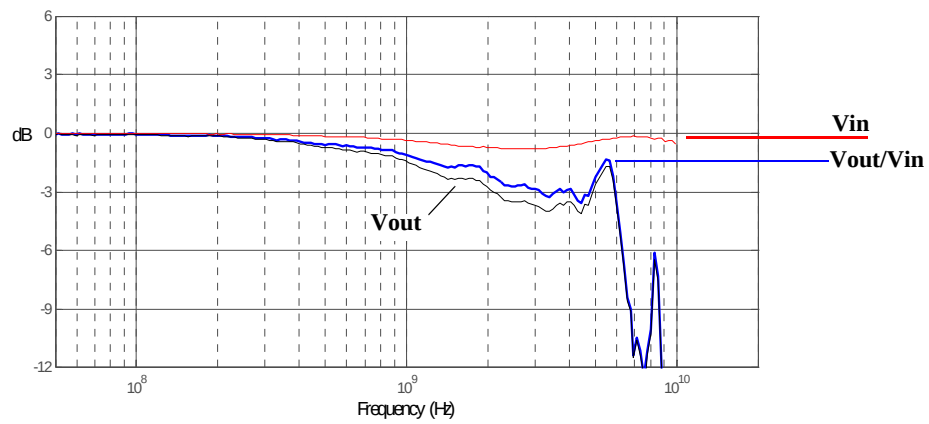


Figure 148 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

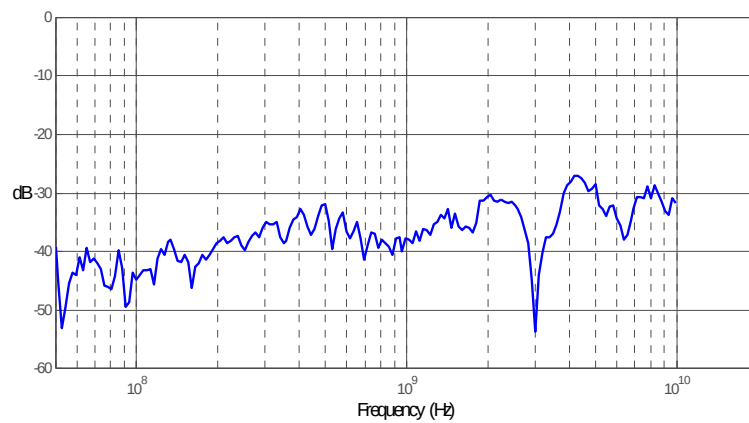


Figure 149 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

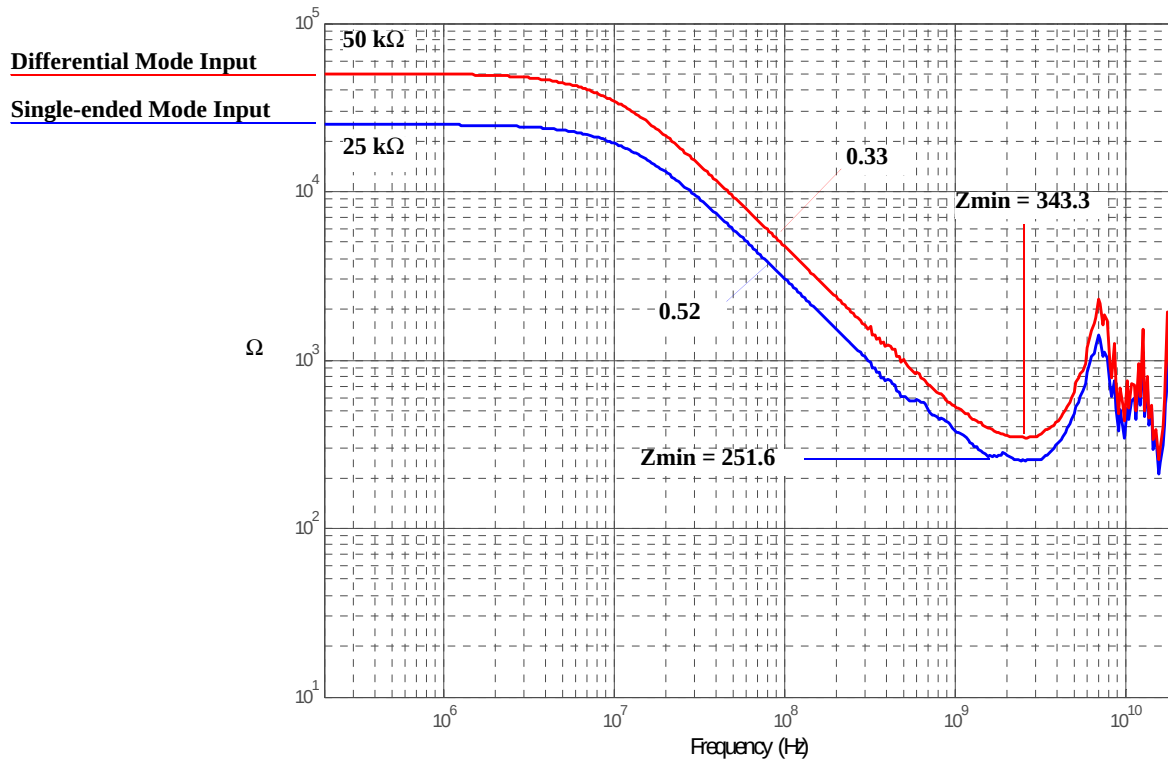


Figure 150 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head (Full BW)

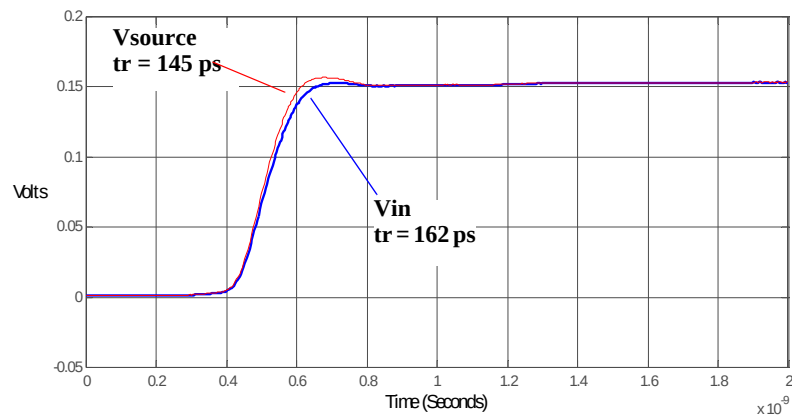


Figure 151 Graph of 25Ω 100 ps step generator with and without probe connected.

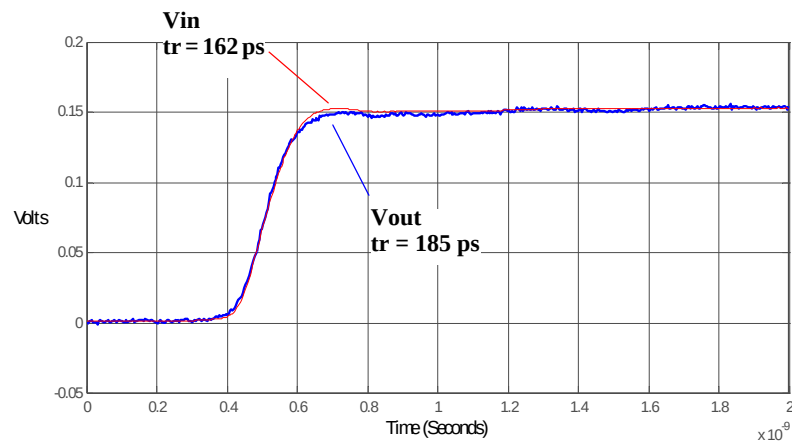


Figure 152 Graph of V_{in} and V_{out} of probe with a 25Ω 100 ps step generator.

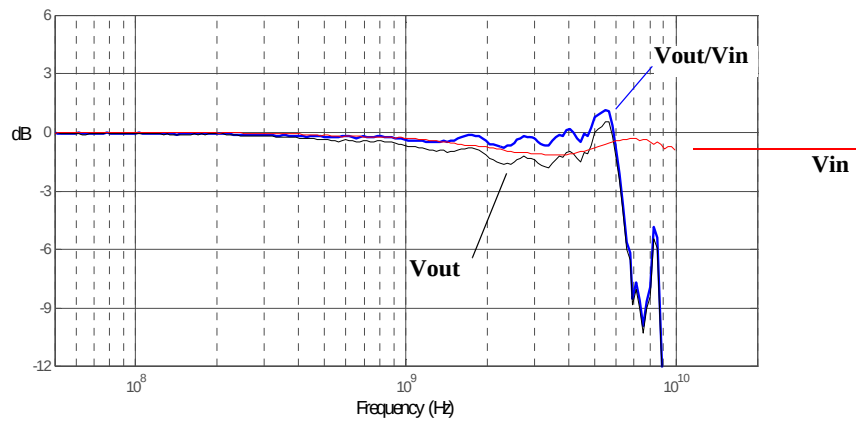


Figure 153 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

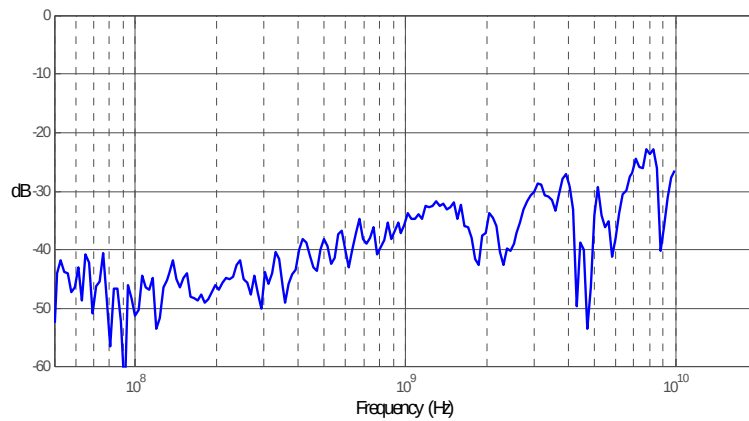


Figure 154 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

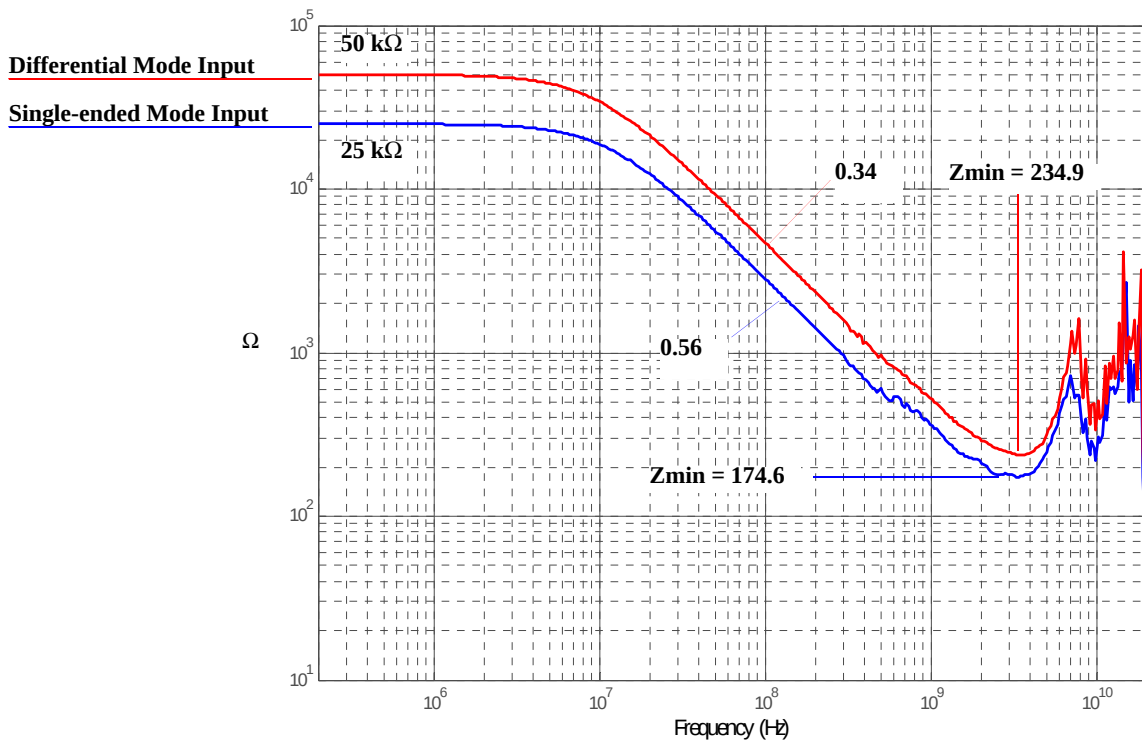


Figure 155 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head with Damped Wire Accessory

NOTE

Due to reflections on the long wire accessories, signals being probed should be limited to approximately ≥ 240 ps rise time measured at the 10% and 90% amplitude levels. This is equivalent to approximately ≤ 1.5 GHz bandwidth.

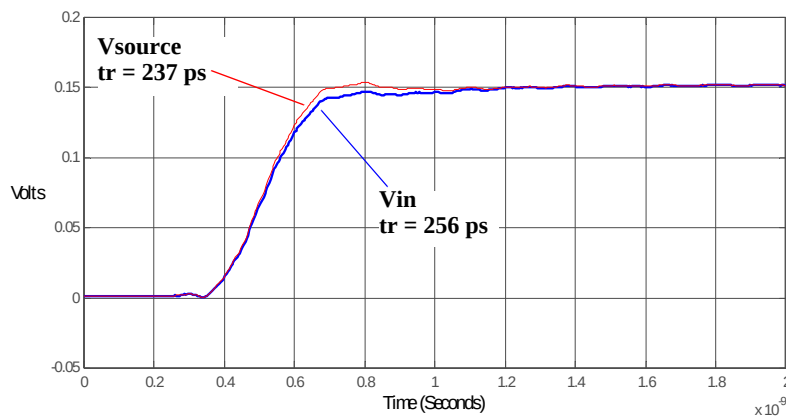


Figure 156 Graph of 25Ω 240 ps step generator with and without probe connected.

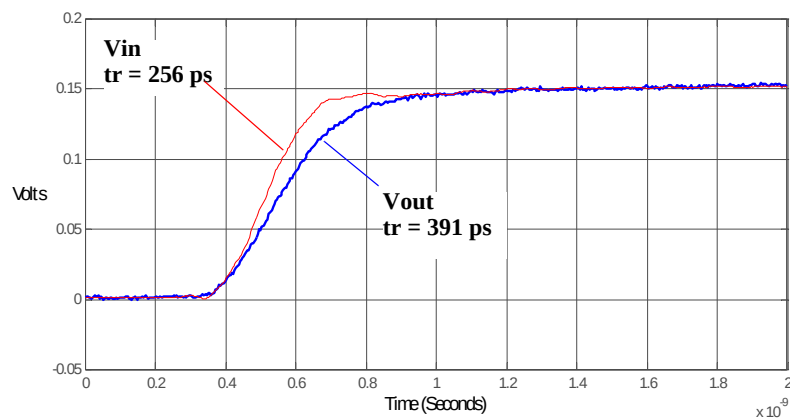


Figure 157 Graph of Vin and Vout of probe with a 25Ω 240 ps step generator.

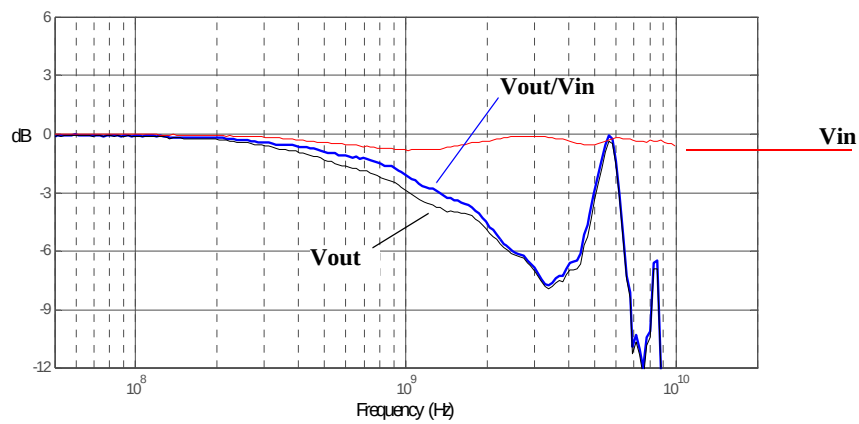


Figure 158 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

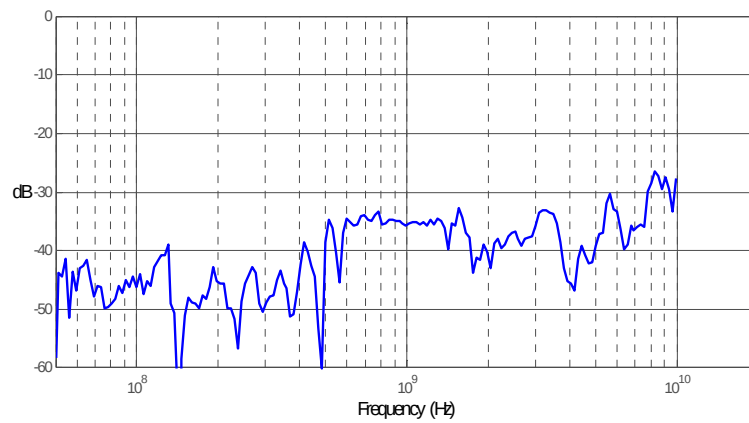


Figure 159 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

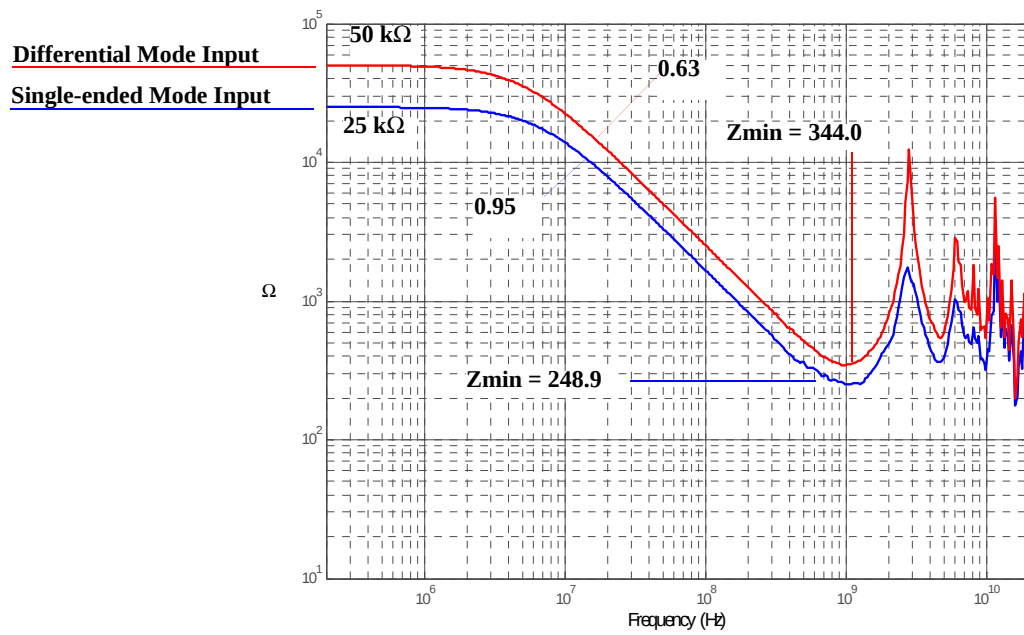


Figure 160 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Full BW)

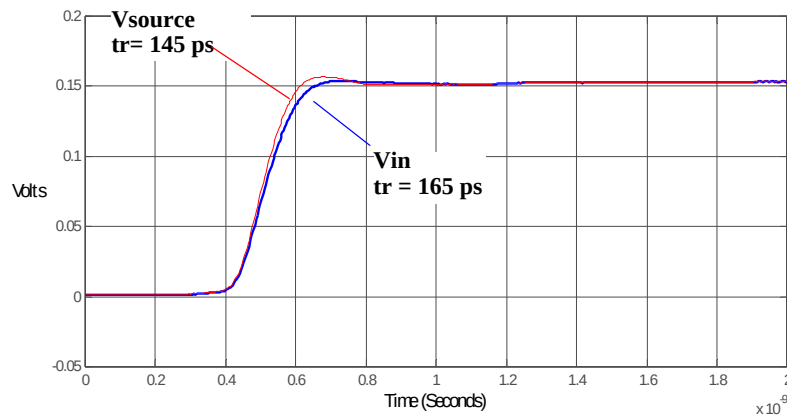


Figure 161 Graph of 25Ω 100 ps step generator with and without probe connected.

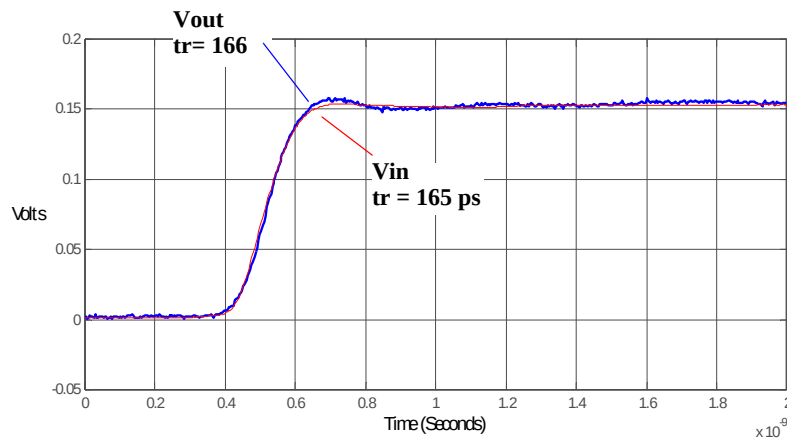


Figure 162 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

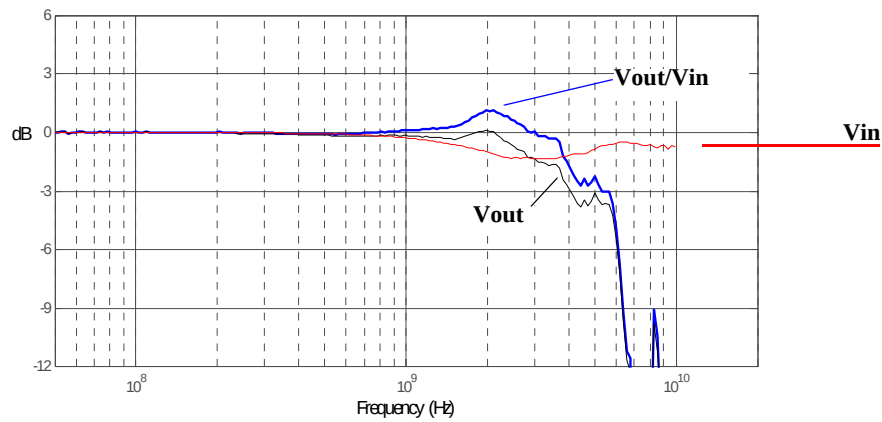


Figure 163 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

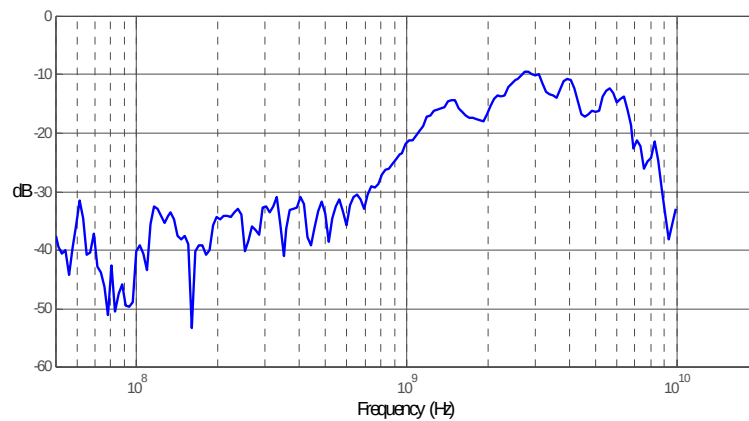


Figure 164 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

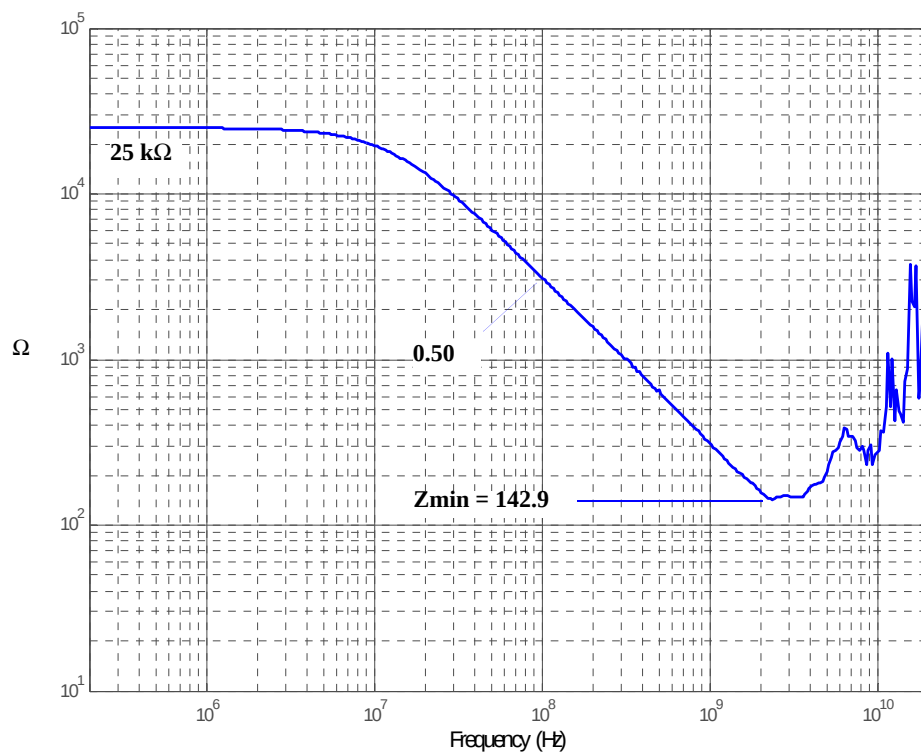


Figure 165 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Medium BW)

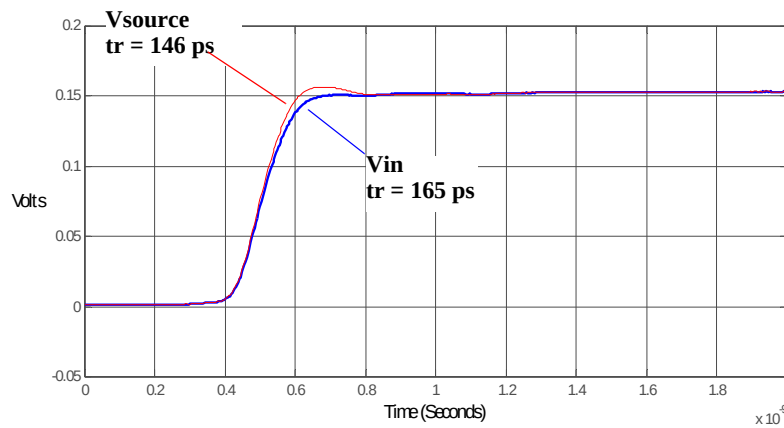


Figure 166 Graph of 25Ω 100 ps step generator with and without probe connected.

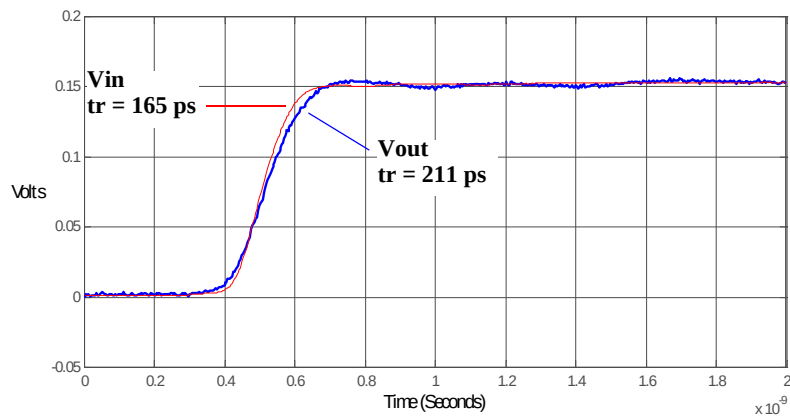


Figure 167 Graph of V_{in} and V_{out} of probe with a 25Ω 100 ps step generator.

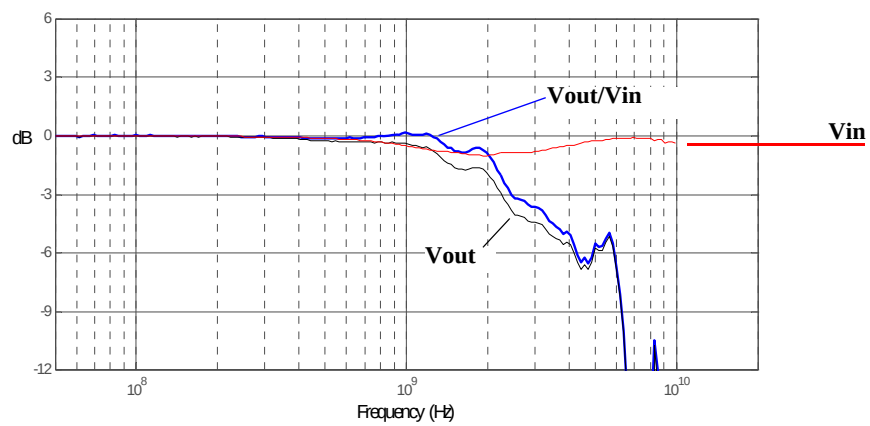


Figure 168 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

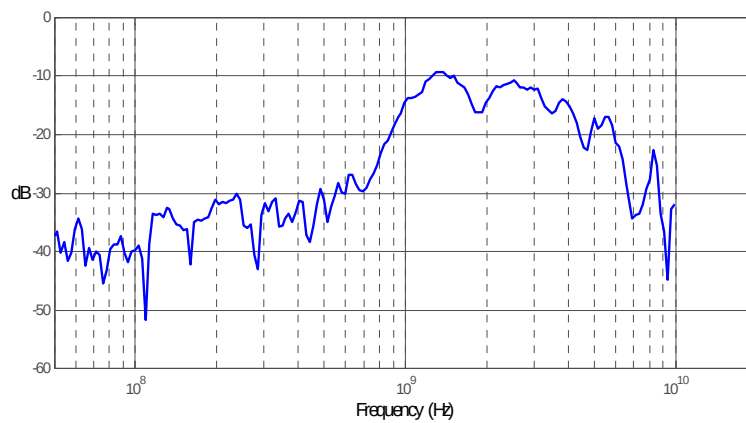


Figure 169 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

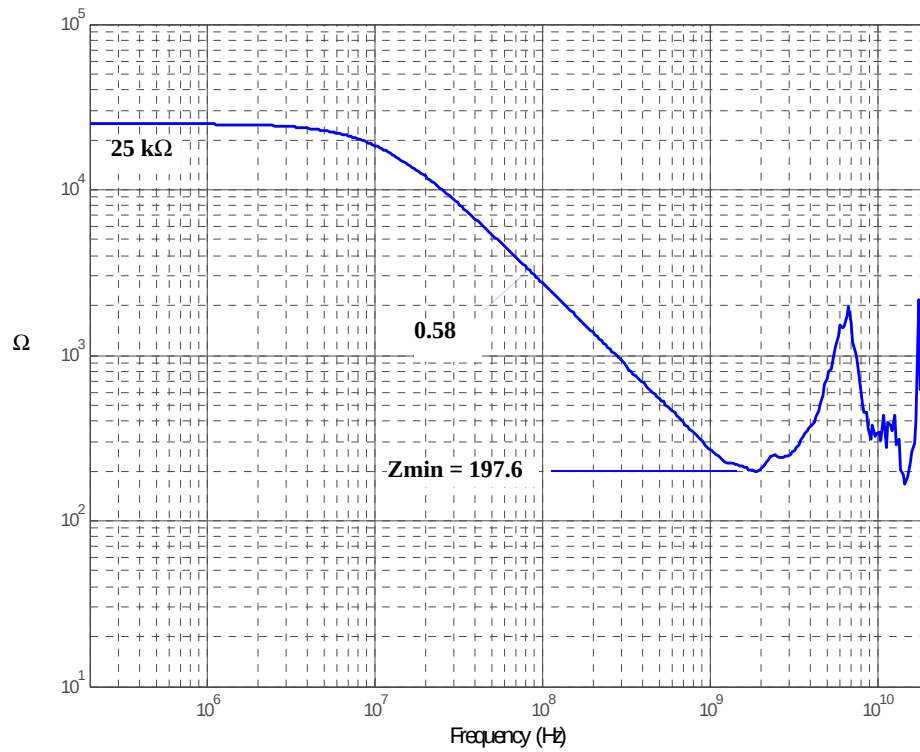


Figure 170 Magnitude plot of probe input impedance versus frequency.

N2851A QuickTip Head with N2849A QuickTip

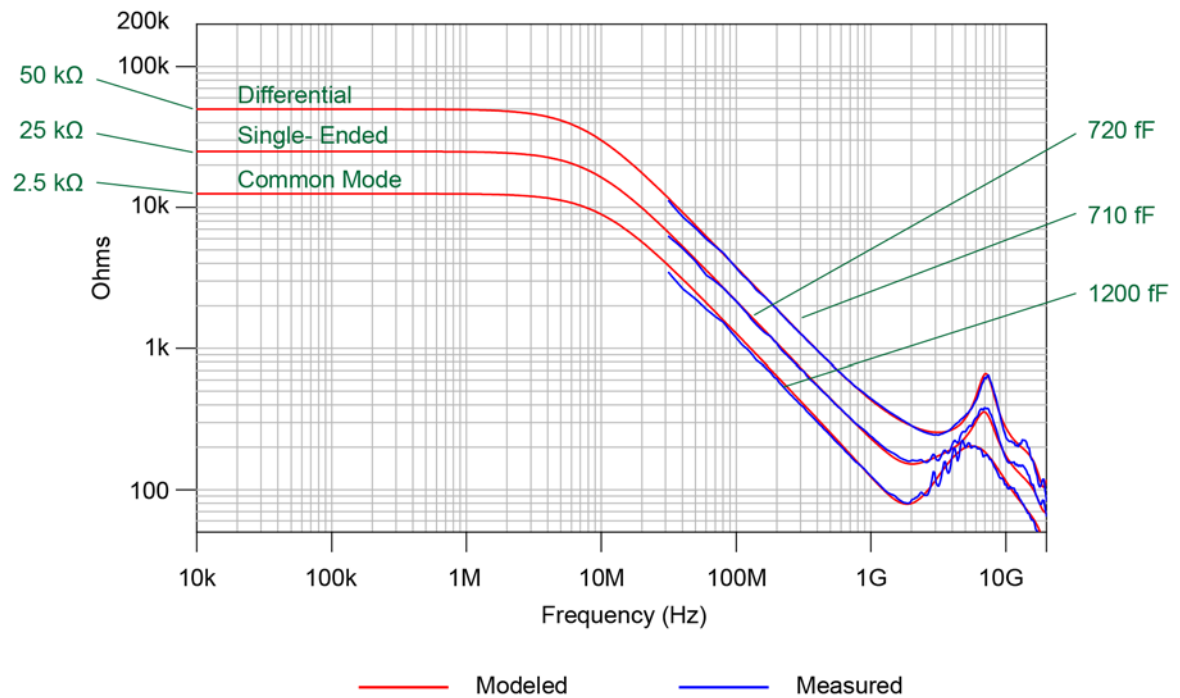


Figure 171 Input Impedances (Modeled and Measured)

8 1134A Performance Data Plots

E2675B Differential Browser	162
E2676A Single-Ended Browser	165
E2677B Differential Solder-in Probe Head (Full BW)	168
E2677B Differential Solder-in Probe Head (Medium BW)	171
E2678A/B Differential Socketed Probe Head (Full BW)	174
E2678A/B Differential Socketed Probe Head with Damped Wire Accessory	177
E2679A Single-Ended Solder-in Probe Head (Full BW)	180
E2679A Single-Ended Solder-in Probe Head (Medium BW)	183
N5380B SMA Probe Head	186
N2851A QuickTip Head with N2849A QuickTip	188

This chapter provides graphs of the performance characteristics of the 1134A probes using the different probe heads that come with the E2668A single-ended and E2669A differential connectivity kits.

NOTE

All rise times shown are measured from the 10% to the 90% amplitude levels.

E2675B Differential Browser

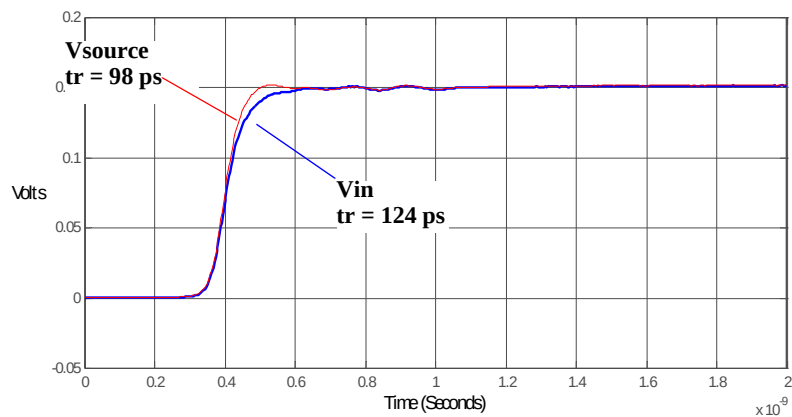


Figure 172 Graph of 25Ω 100 ps step generator with and without probe connected.

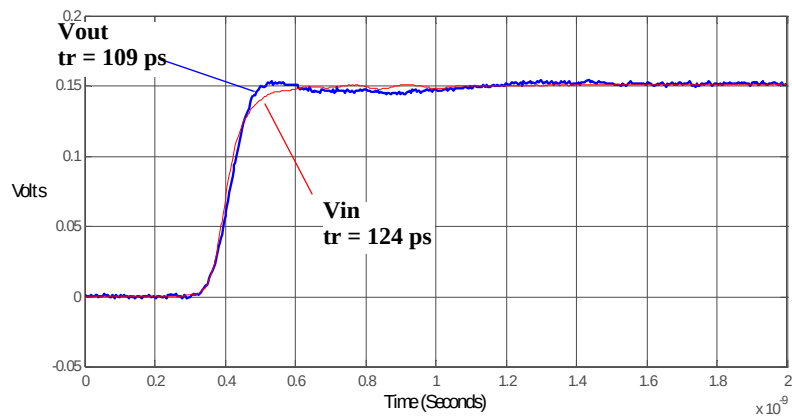


Figure 173 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

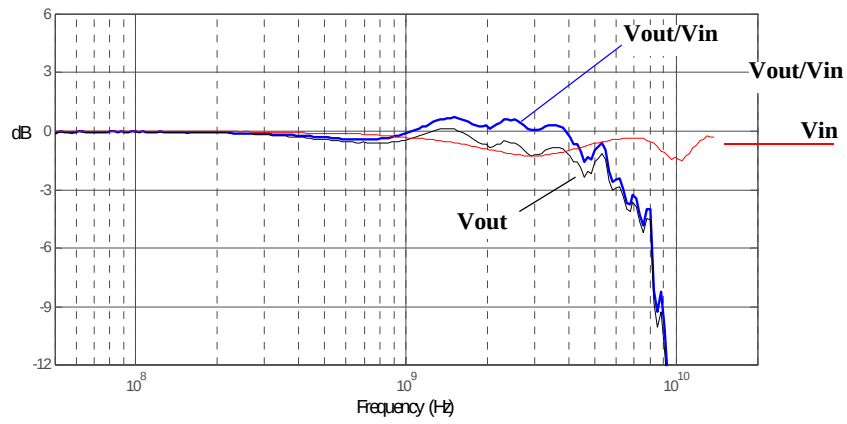


Figure 174 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

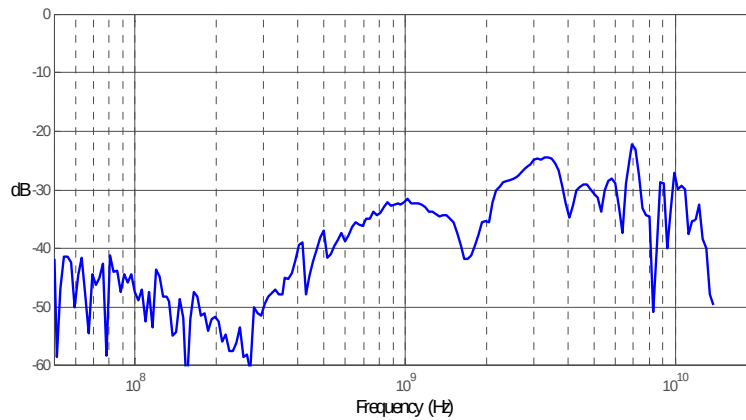


Figure 175 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

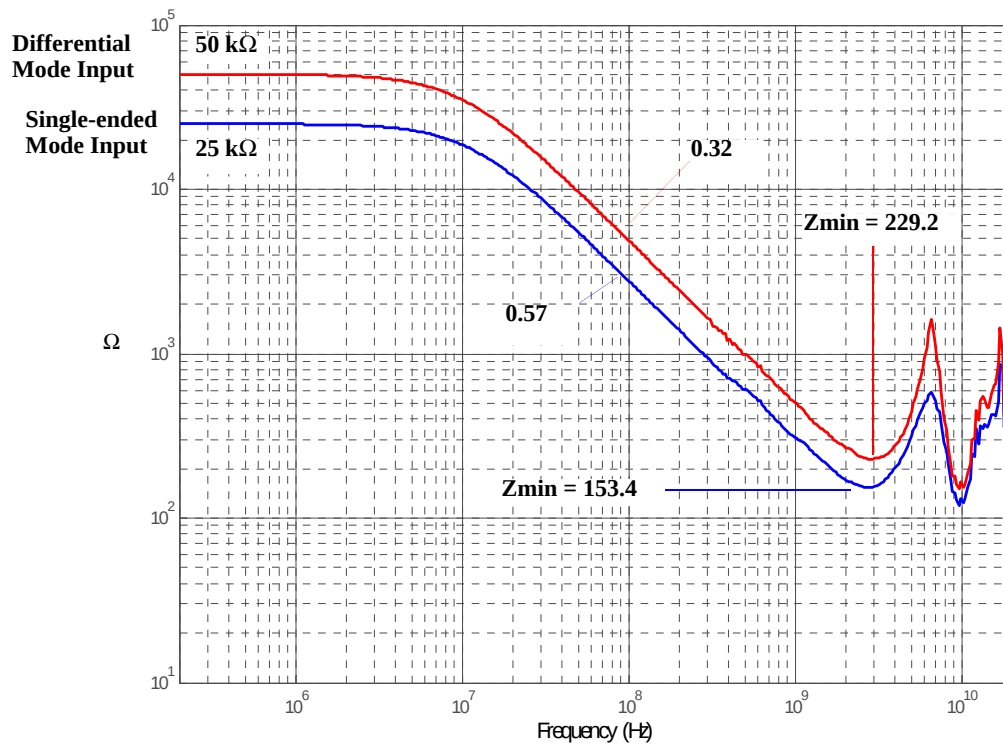


Figure 176 Magnitude plot of probe input impedance versus frequency.

E2676A Single-Ended Browser

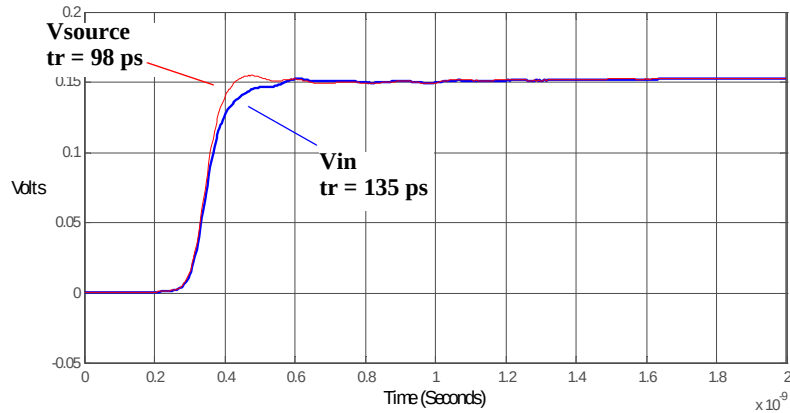


Figure 177 Graph of 25Ω 100 ps step generator with and without probe connected.

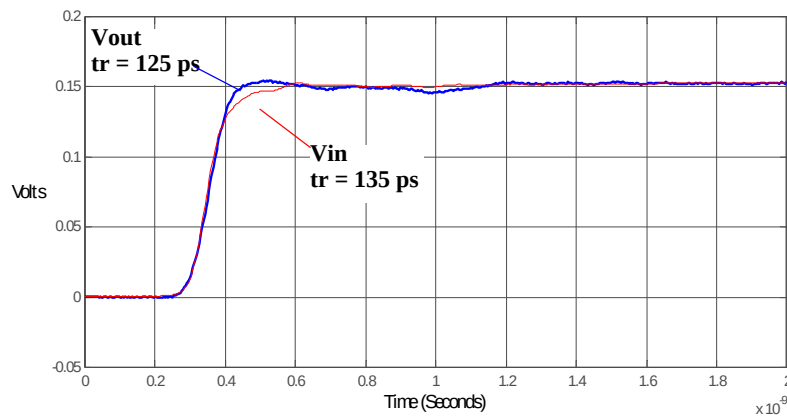


Figure 178 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

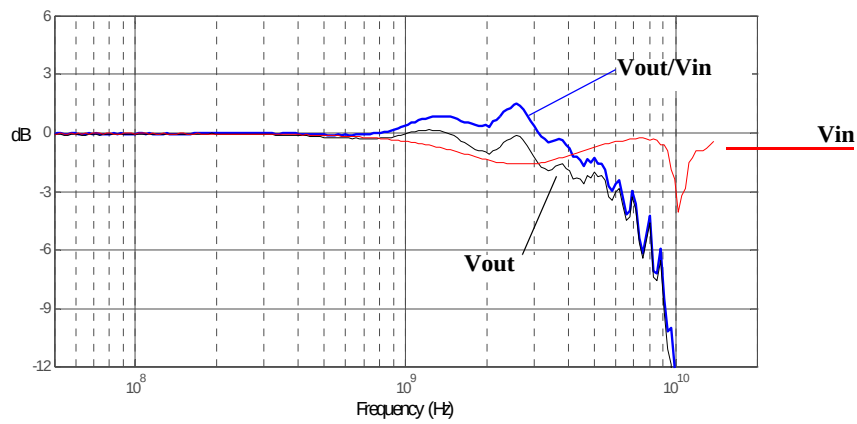


Figure 179 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

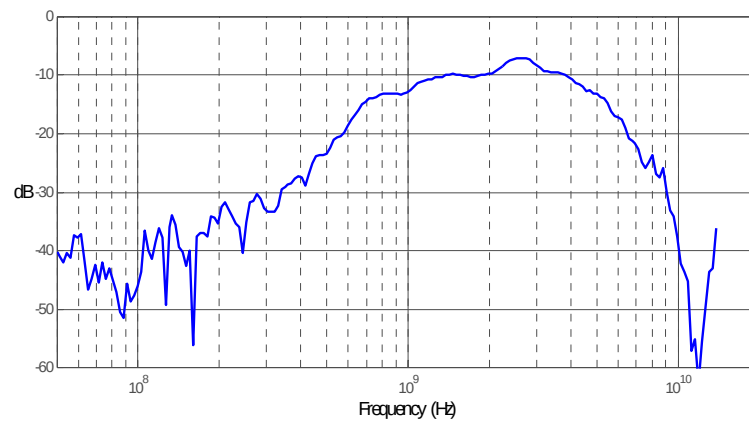


Figure 180 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

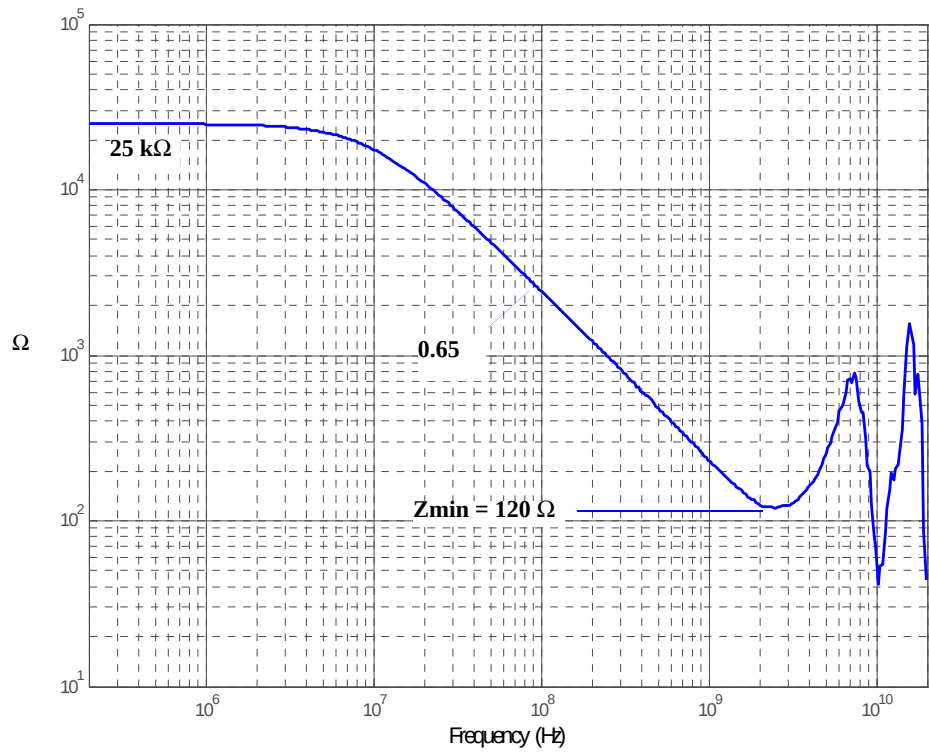


Figure 181 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Full BW)

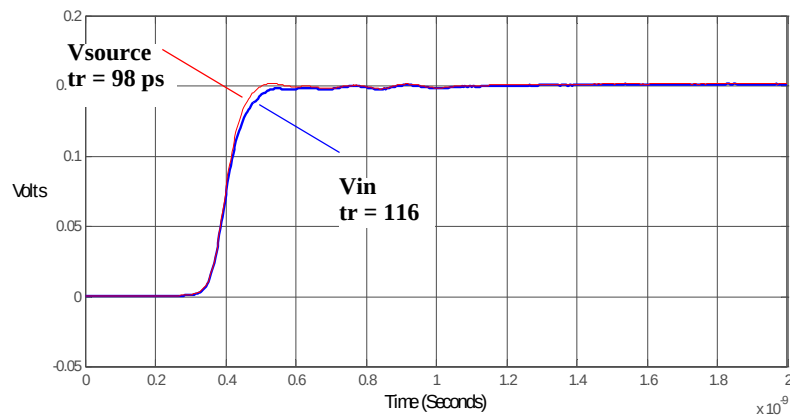


Figure 182 Graph of 25Ω 100 ps step generator with and without probe connected

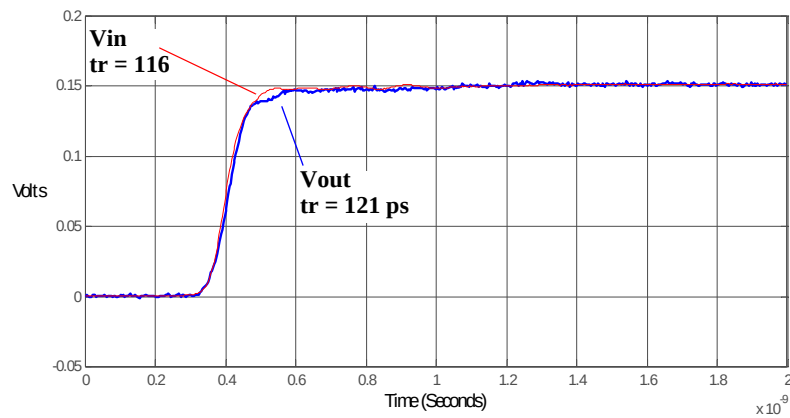


Figure 183 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

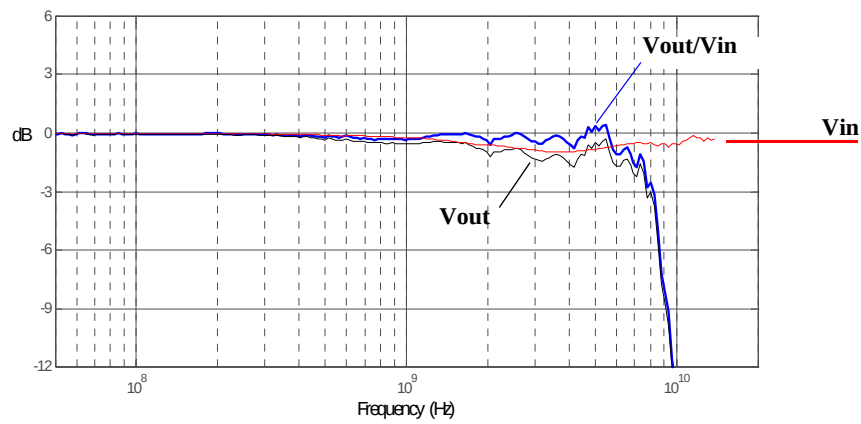


Figure 184 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

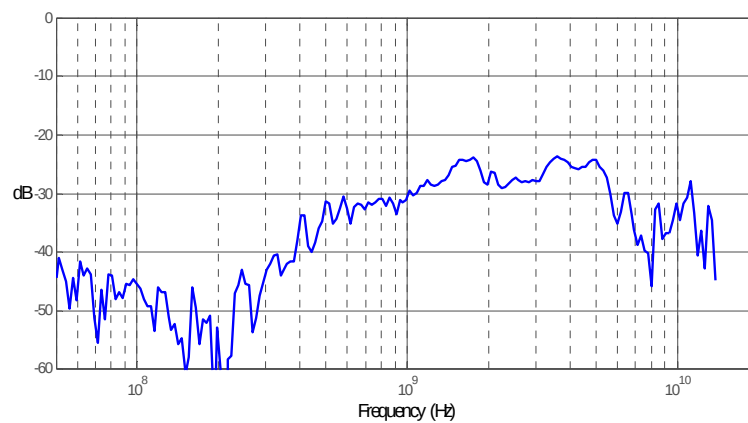


Figure 185 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

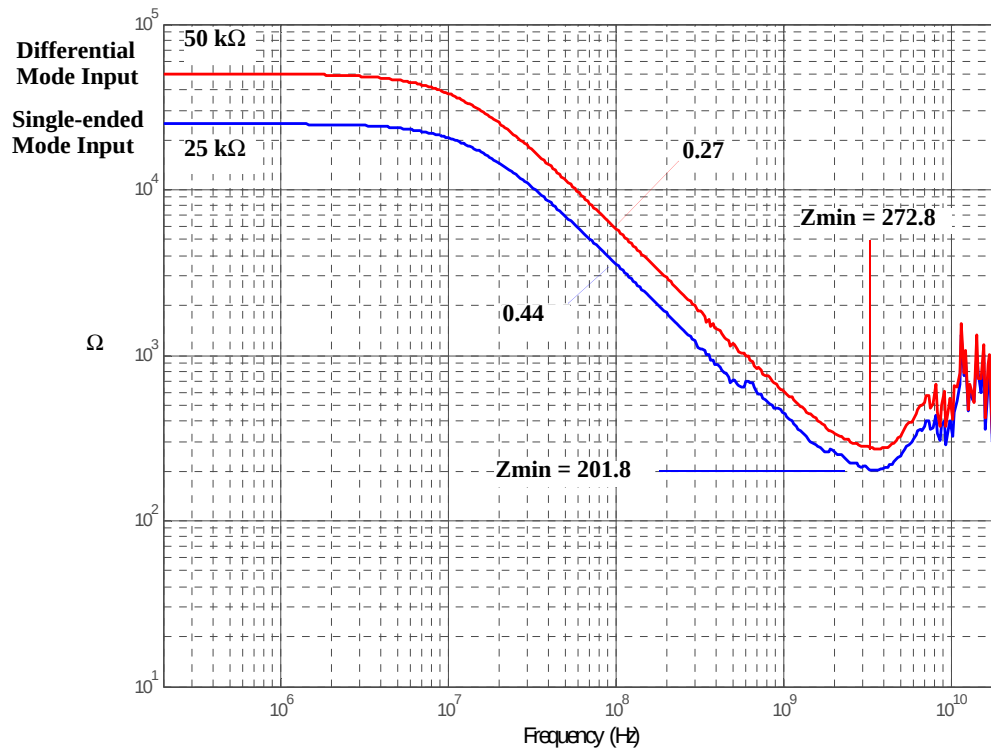


Figure 186 Magnitude plot of probe input impedance versus frequency.

E2677B Differential Solder-in Probe Head (Medium BW)

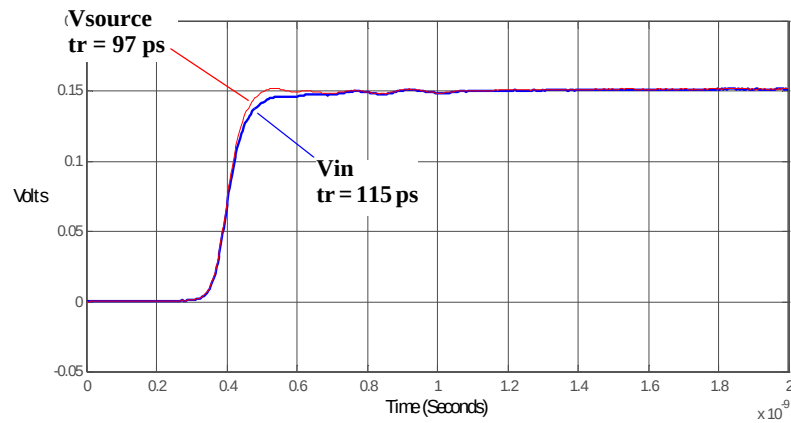


Figure 187 Graph of 25Ω 100 ps step generator with and without probe connected.

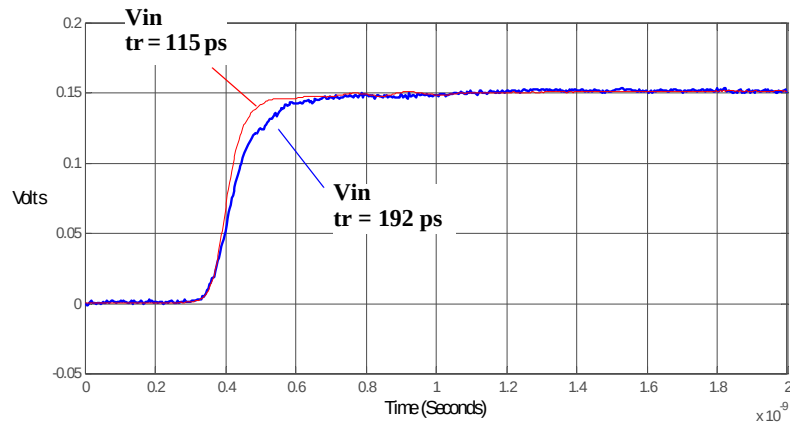


Figure 188 Graph of V_{in} and V_{out} of probe with a 25Ω 100 ps step generator.

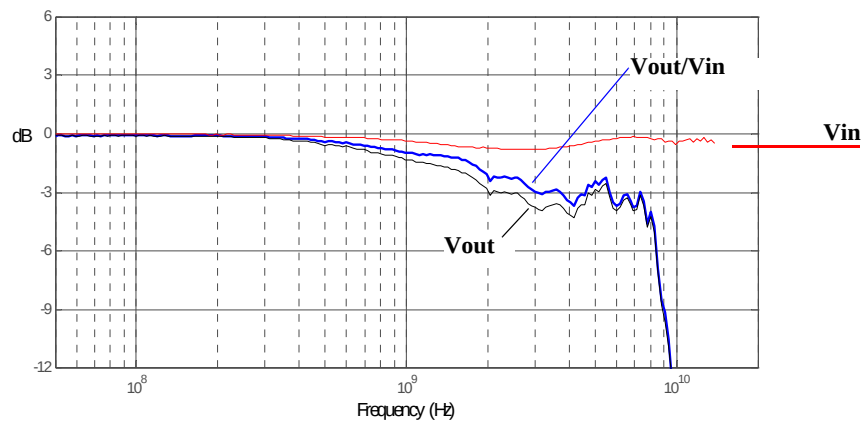


Figure 189 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

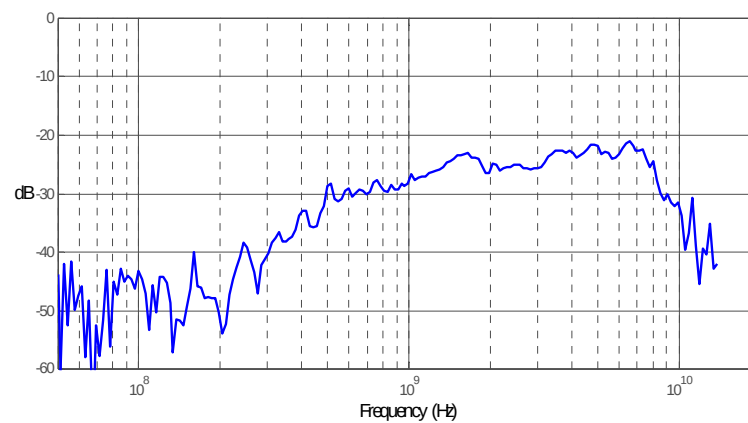


Figure 190 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

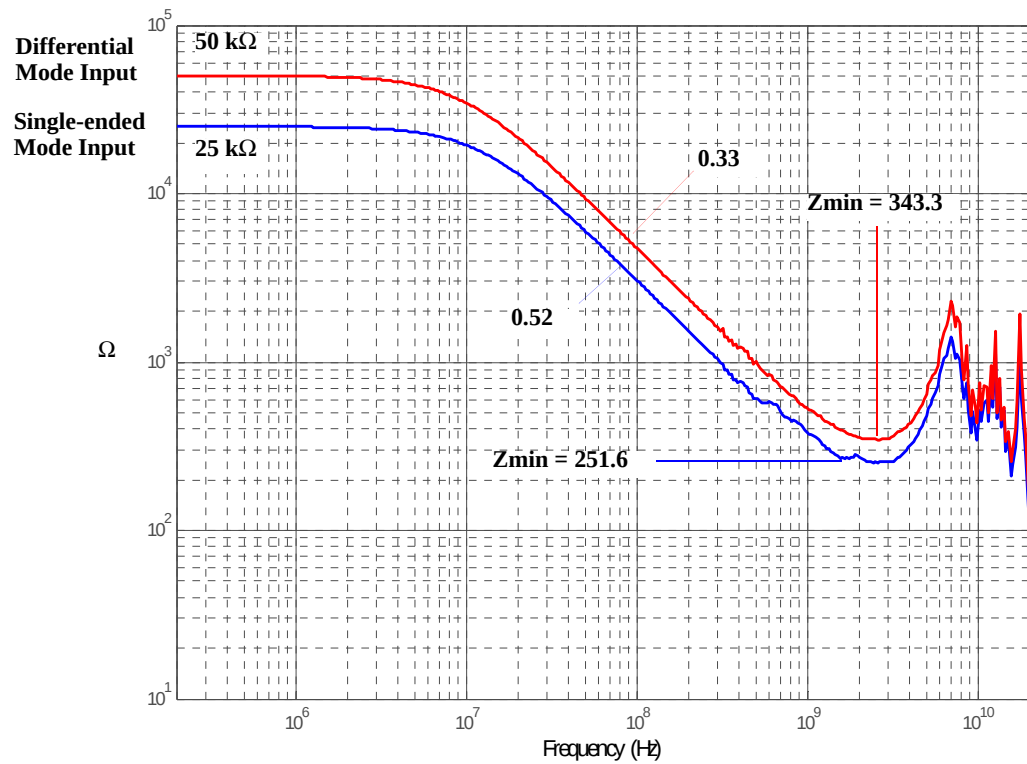


Figure 191 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head (Full BW)

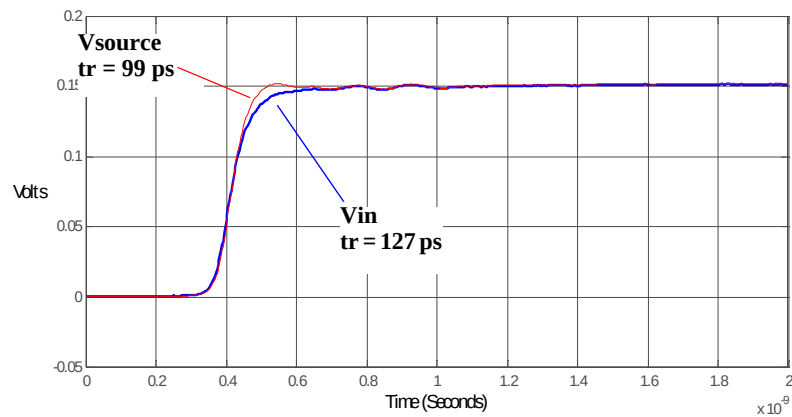


Figure 192 Graph of 25Ω 100 ps step generator with and without probe connected.

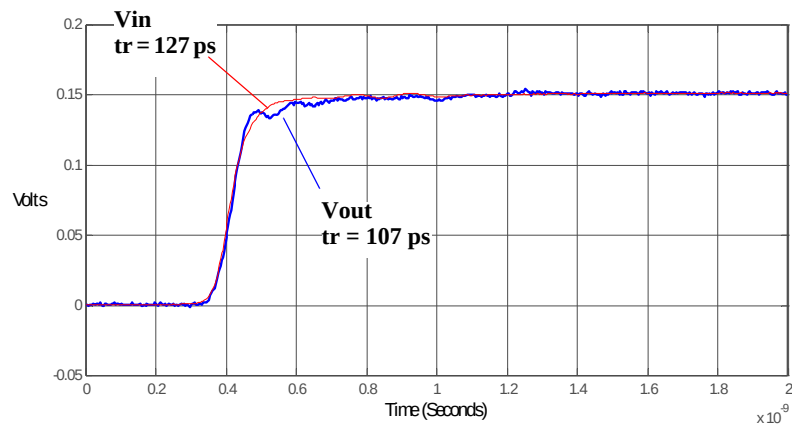


Figure 193 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

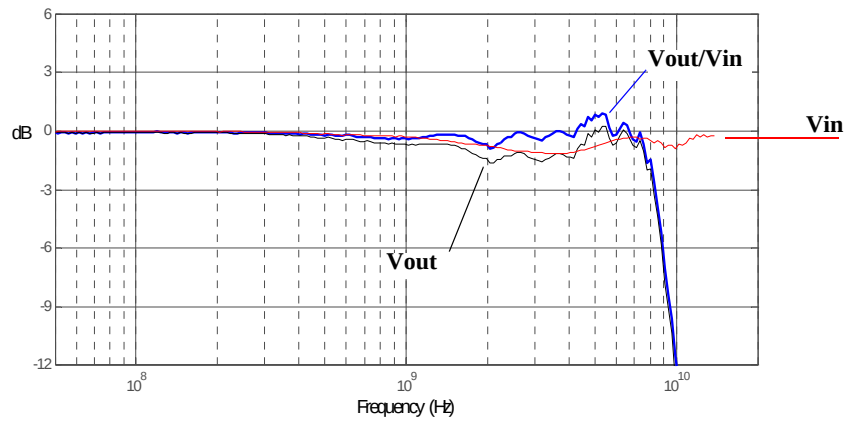


Figure 194 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

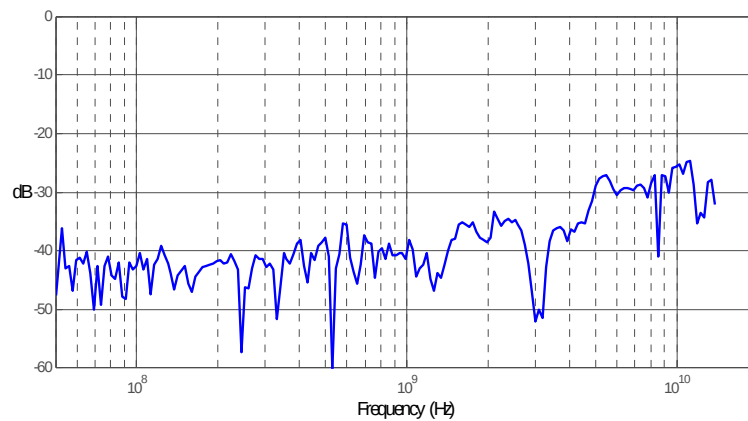


Figure 195 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

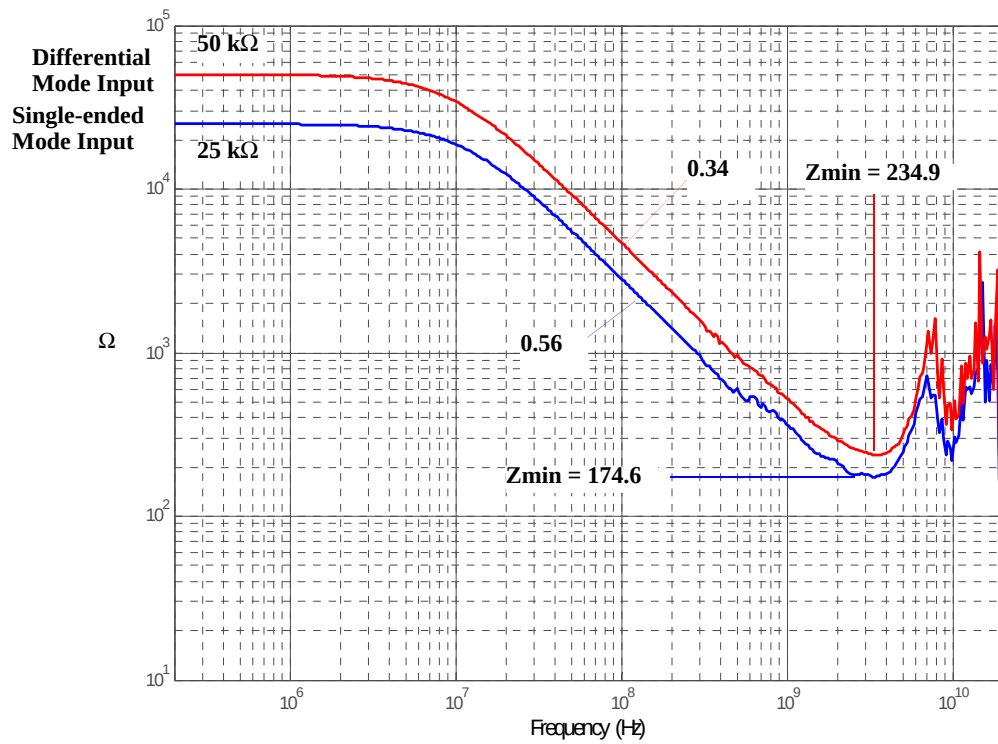


Figure 196 Magnitude plot of probe input impedance versus frequency.

E2678A/B Differential Socketed Probe Head with Damped Wire Accessory

NOTE

Due to reflections on the long wire accessories, signals being probed should be limited to approximately ≥ 240 ps rise time measured at the 10% and 90% amplitude levels. This is equivalent to approximately ≤ 1.5 GHz bandwidth.

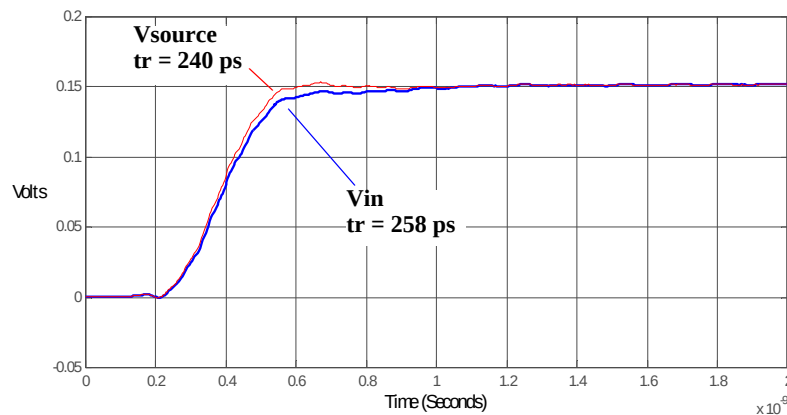


Figure 197 Graph of 25Ω 240 ps step generator with and without probe connected.

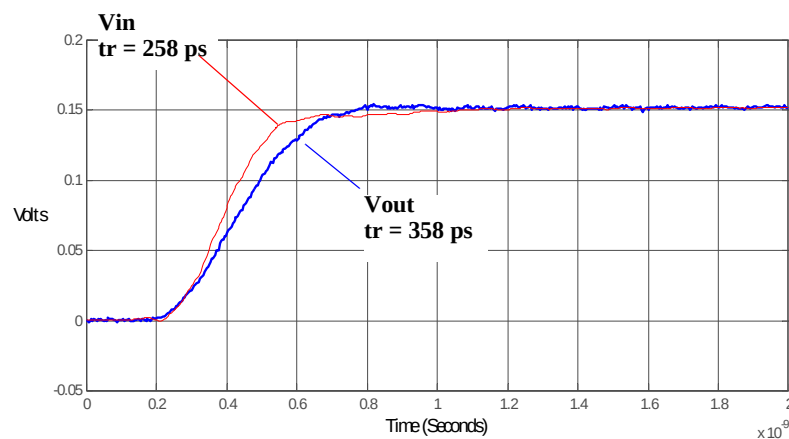


Figure 198 Graph of Vin and Vout of probe with a 25Ω 240 ps step generator.

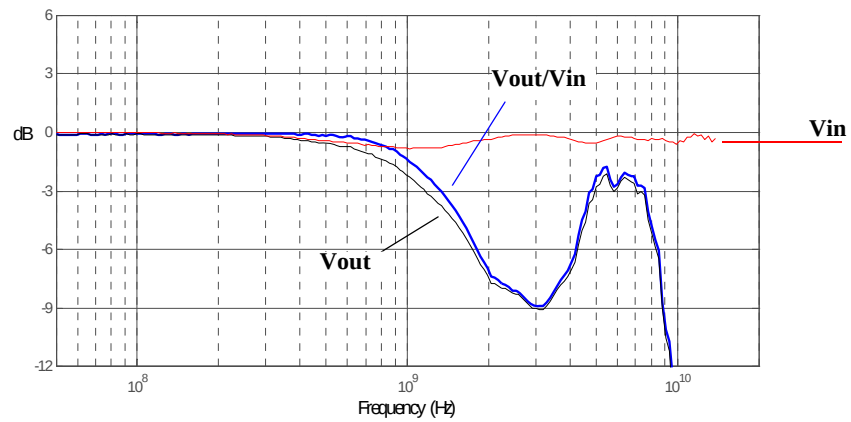


Figure 199 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

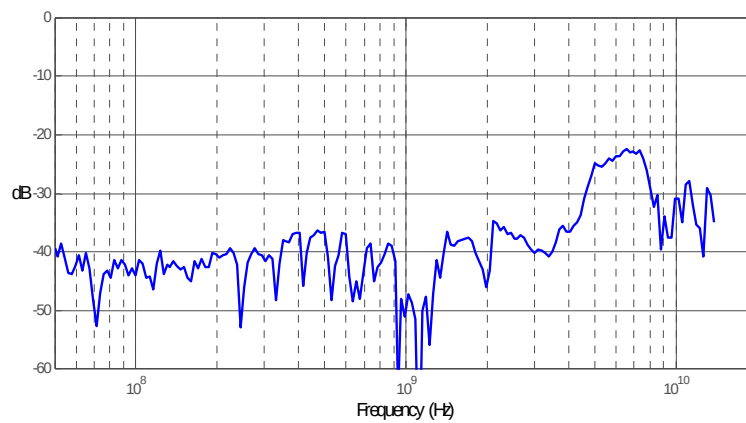


Figure 200 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

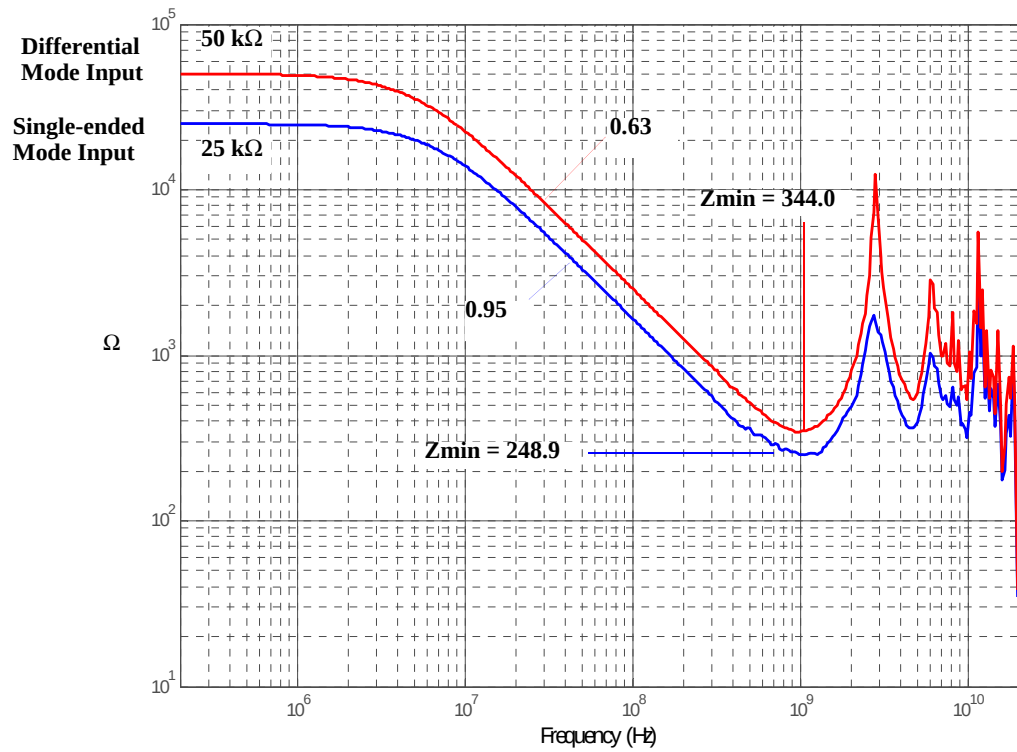


Figure 201 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Full BW)

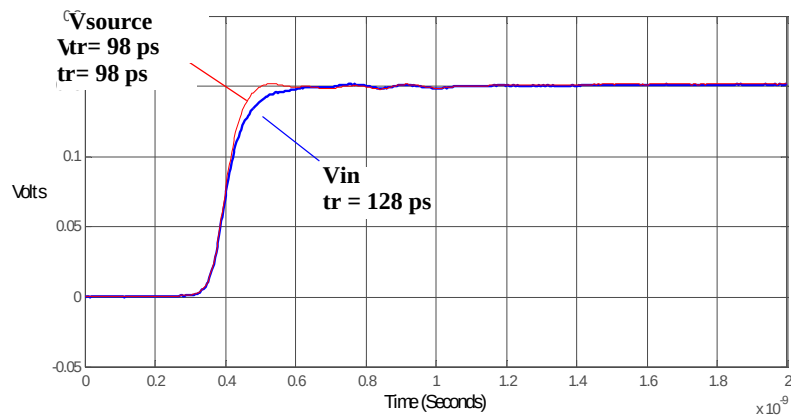


Figure 202 Graph of 25Ω 100 ps step generator with and without probe connected.

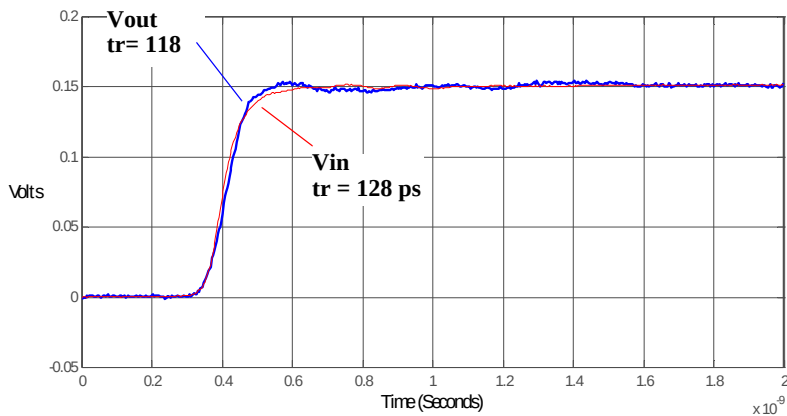


Figure 203 Graph of V_{in} and V_{out} of probe with a 25Ω 100 ps step generator.

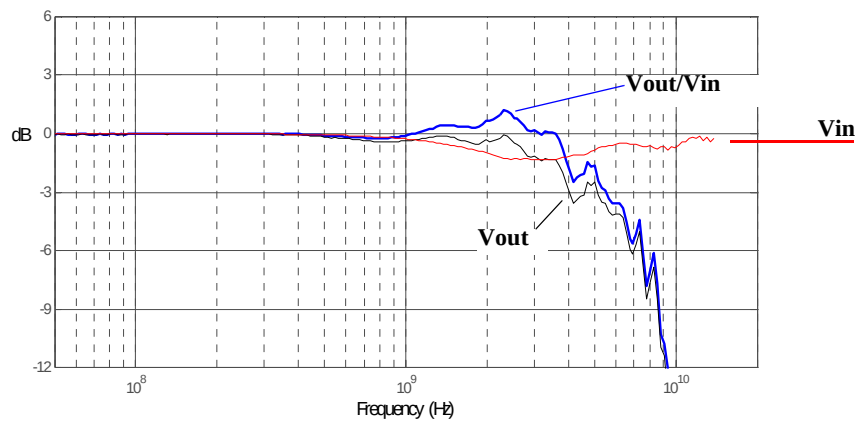


Figure 204 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

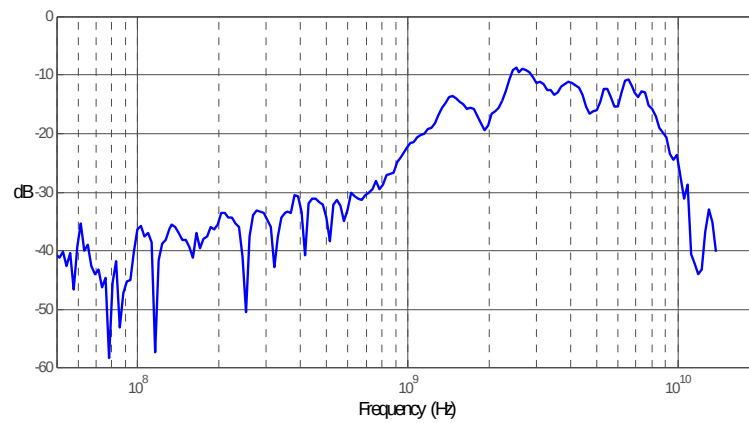


Figure 205 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

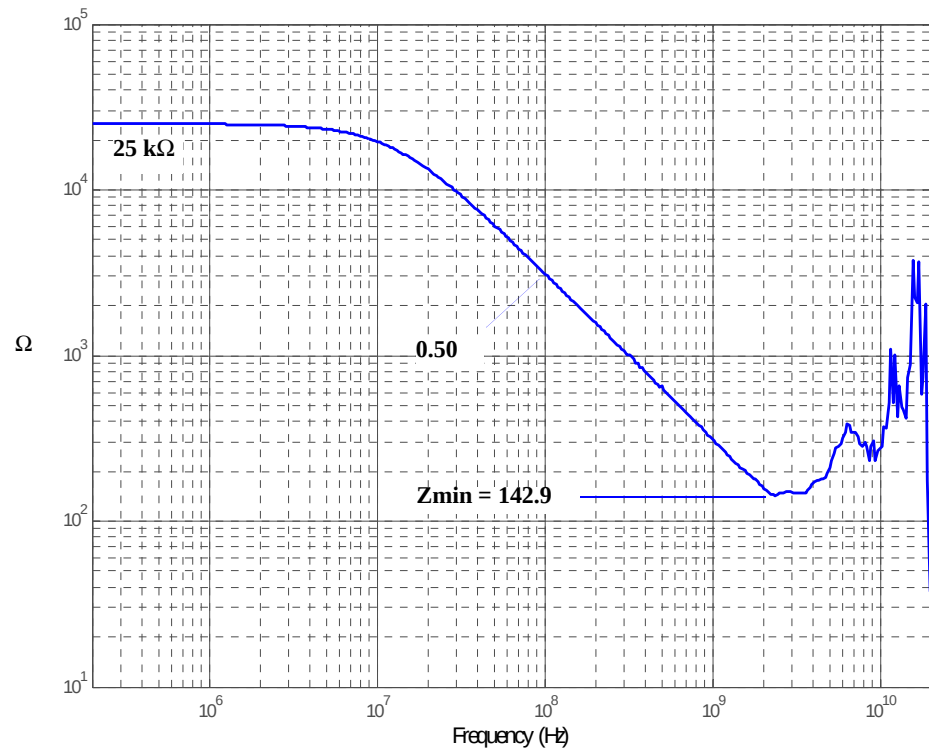


Figure 206 Magnitude plot of probe input impedance versus frequency.

E2679A Single-Ended Solder-in Probe Head (Medium BW)

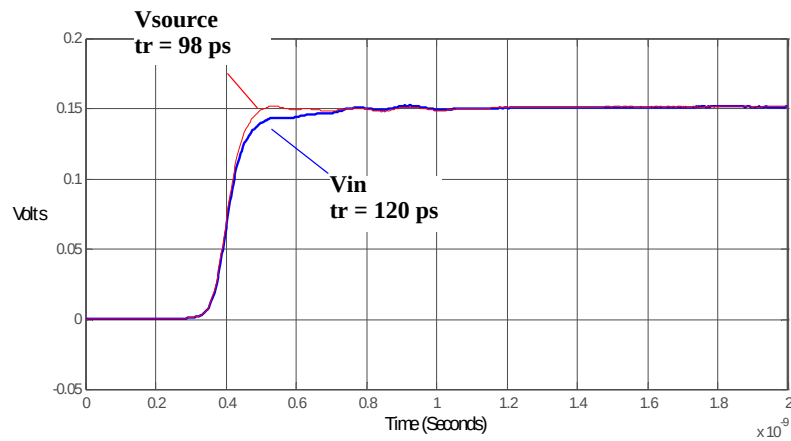


Figure 207 Graph of 25Ω 100 ps step generator with and without probe connected.

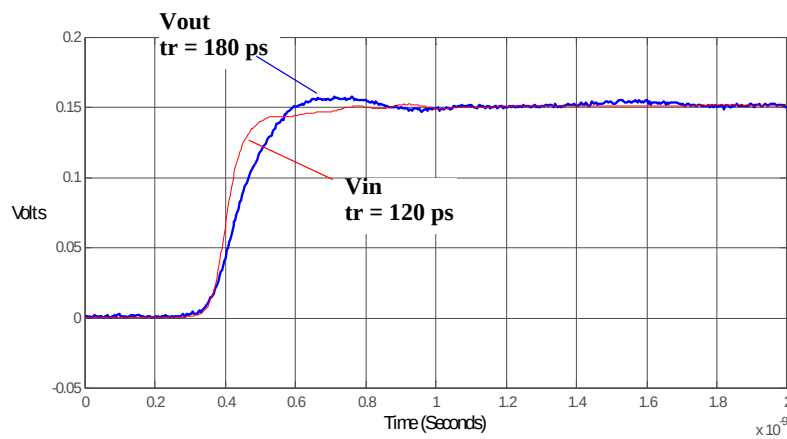


Figure 208 Graph of Vin and Vout of probe with a 25Ω 100 ps step generator.

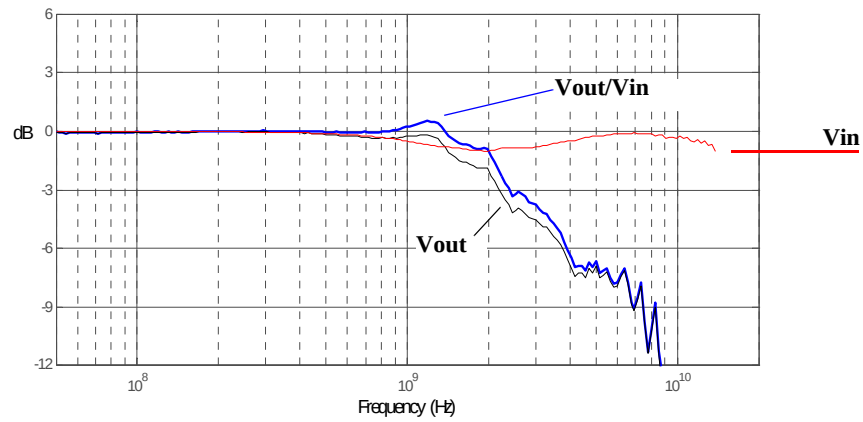


Figure 209 Graph of V_{in} and V_{out} of probe with a 25Ω source and V_{out}/V_{in} frequency response.

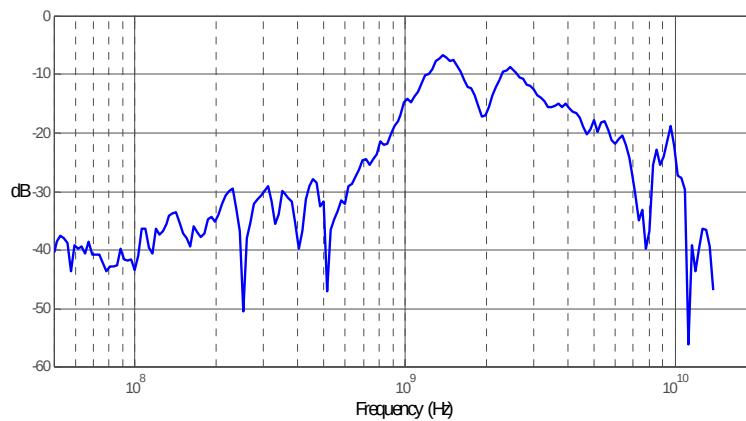


Figure 210 Graph of V_{out}/V_{in} frequency response when inputs driven in common (common mode rejection).

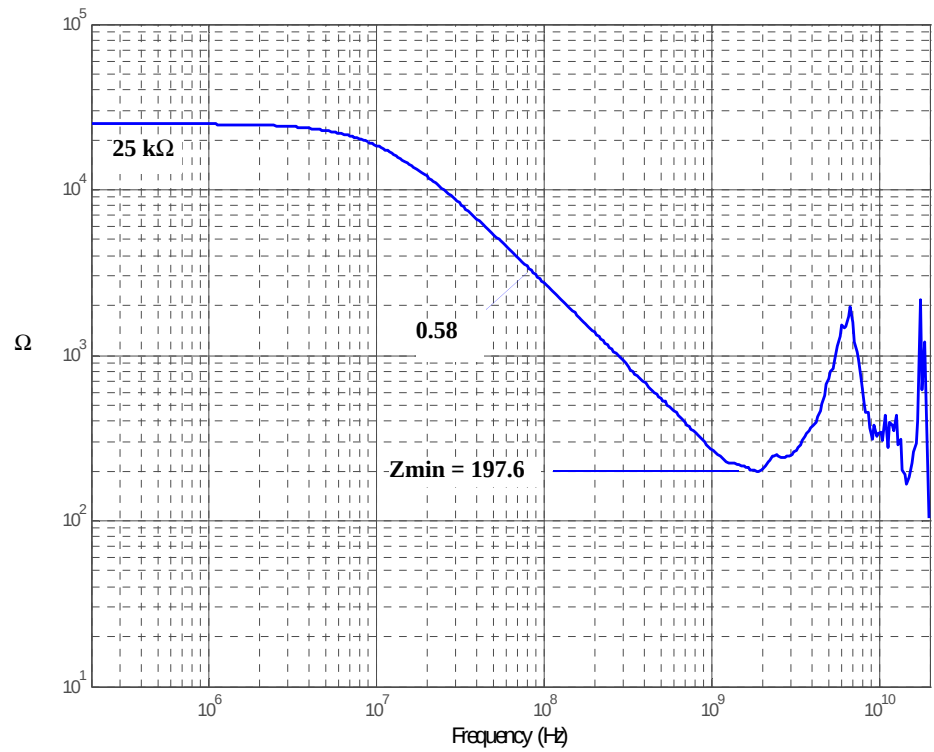


Figure 211 Magnitude plot of probe input impedance versus frequency.

N5380B SMA Probe Head

The following performance characteristic plots are for the 1134A probe using N5380B probe head. For a graph of the return loss, refer to the Performance Plots chapter in the 1168/9A User's Guide.

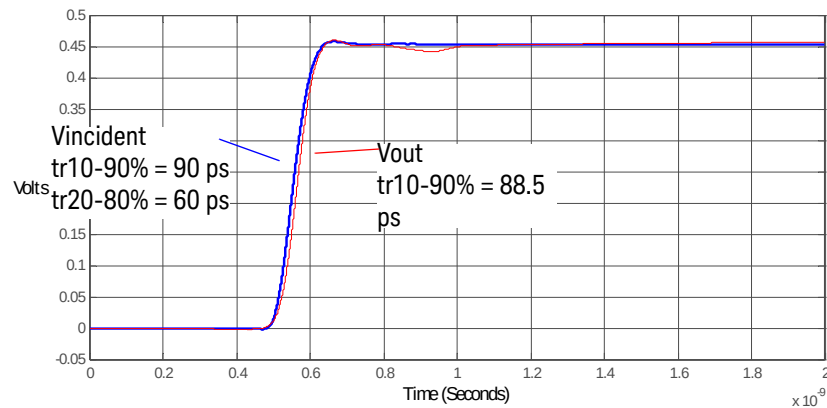


Figure 212 Vincident and Vout of probe with a 90 ps step

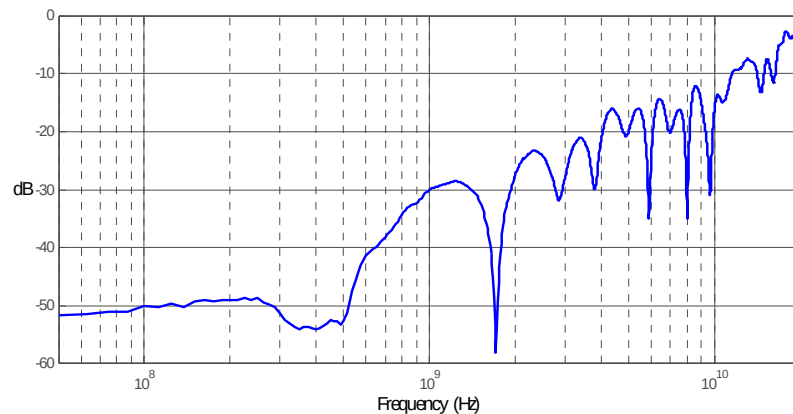


Figure 213 Magnitude plot of differential return loss

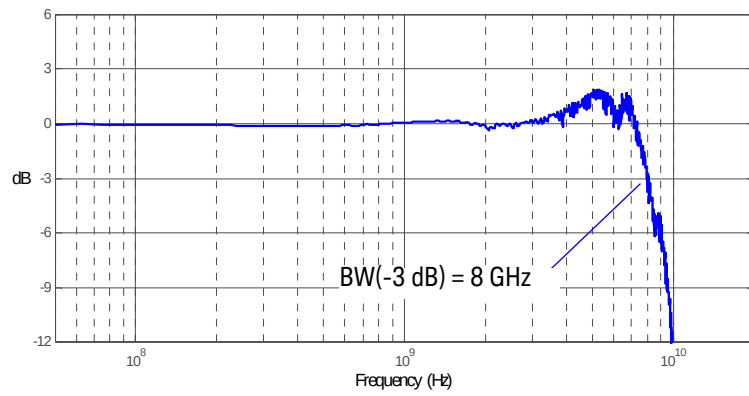
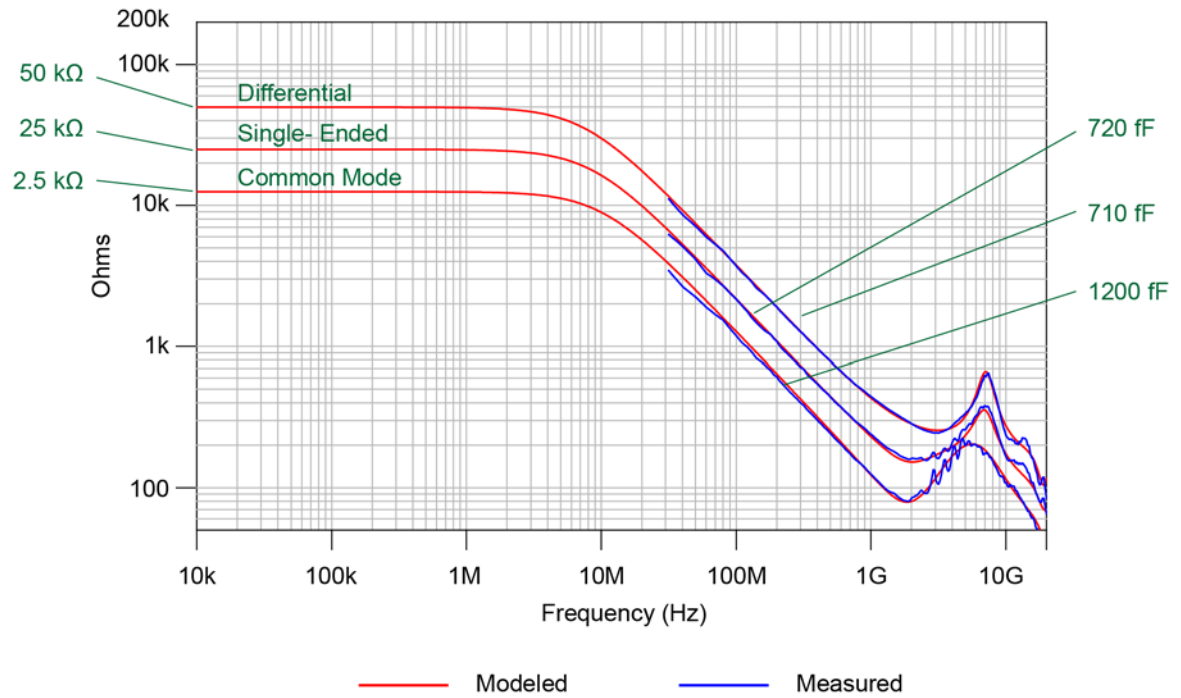


Figure 214 Magnitude response of differential insertion loss +16.03 dB

N2851A QuickTip Head with N2849A QuickTip

**Figure 215** Input Impedances (Modeled and Measured)

9 Performance Verification

Using the 8720ES VNA successfully **190**

Procedure **191**

Performance Test Record **198**

This chapter describes how to verify the bandwidth performance of the probe.

CAUTION

Electrostatic discharge (ESD) can quickly and imperceptibly damage or destroy high performance probes, resulting in costly repairs. Always wear a wrist strap when handling probe components and ensure that cables are discharged before being connected.

NOTE

Allow the probe to warm up for at least 20 minutes.

Table 27 Required Test Equipment

Test Equipment	Critical Specification	Model Number
Vector Network Analyzer (VNA)	7 GHz sweep range full 2 port cal Option 1D5	Keysight 8720ES
		
Calibration Standards	No Substitute	Keysight 85052D
External Power Supply	No Substitute	Keysight 1143A
		
AutoProbe Interface Adapter	No Substitute	Keysight N1022A/B
		
Outside thread 3.5 mm (male) to 3.5 mm (female) adapter	No Substitute	Keysight 5062-1247
Cable (2)	3.5 mil; SMA; High Quality	Keysight 8120-4948
Cable	1.5 mil Probe Power Extension No Substitute	Keysight 01143-61602
PV Fixture	E2655B/C, No Substitute	Keysight E2655B/C
		

Using the 8720ES VNA successfully

Remember these simple guidelines when working with the 8720ES VNA during this procedure.

- Sometimes it may take a few seconds for the waveforms to settle completely. Allow time for waveforms to settle before continuing.
- Make sure all connections are tight and secure. If needed, use a vise to hold the cables and test board stable while making measurements.
- Be careful not to cross thread or force any connectors. This could be a very costly error to correct.

Procedure

Initial Setup

- 1 Turn on the 8720ES VNA and let warm up for 20 minutes.
- 2 Press the green **[Preset]** key on the 8720ES VNA.
- 3 On the VNA, press the **[Power]** key and set the power to 0 dBm.
- 4 On the VNA, press the **[AVG]** key and then select the **Averaging Factor** screen key. Set averaging to 4.
- 5 On the VNA, press the **[Sweep Setup]** key and then press the **sweep type menu** screen key. Select the **log freq** screen key.
- 6 Connect the probe under test to the Auto Probe Adapter and power the probe using the 1143A power supply. Install the outside thread adapter to the Auto Probe Adapter.

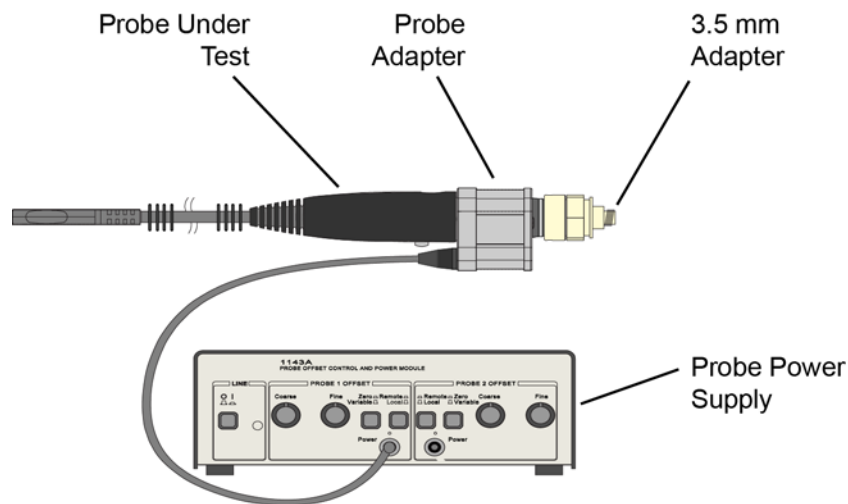


Figure 216 Probe Connected to Power Supply

Calibrating a Reference Plane

To get a reliable measurement from the VNA you must calibrate a reference plane so that the VNA knows where the probe under test is located along the transmission line.

- 7 On the VNA, press the **[Cal]** key.
- 8 Press the **cal menu** screen key.
- 9 Press the **full 2 port** screen key.
- 10 Connect one of the high quality SMA cables from the VNA's **Port 1** to the pincher side of PV Fixture as shown in **Figure 217**. The figure also identifies the calibration reference plane.

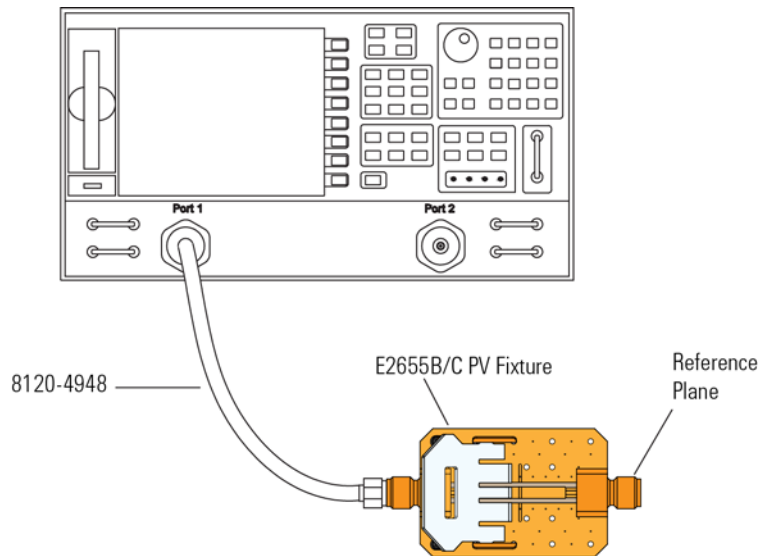


Figure 217 PV Fixture Connected to VNA

- 11 Perform a calibration at the reference plane:
 - a Press the **reflection** screen key.
 - b Connect the open end of 85052D Calibration Standard to the non-pincher side of the PV/DS test board.
 - c Select the **open** screen key under the **Forward** group.
 - d Wait until the VNA beeps indicating that it has completed the task.
 - e Connect short end of Calibration Standard to the non-pincher side of the PV/DS test board.
 - f Select **short** screen key under the **Forward** group.
 - g Wait until the VNA beeps indicating that it has completed the task.
 - h Connect load end of Calibration Standard to the non-pincher side of the PV/DS test board.
 - i Select the **loads** screen key under the **Forward** group.
 - j Press **broadband** screen key selection.
 - k Wait until the VNA beeps indicating that it has completed the task.
 - l Press the **done loads** screen key.
 - m You have just calibrated one side of the reference plane.
- 12 Connect the other high quality SMA cable to the VNA's **PORT 2** connector.

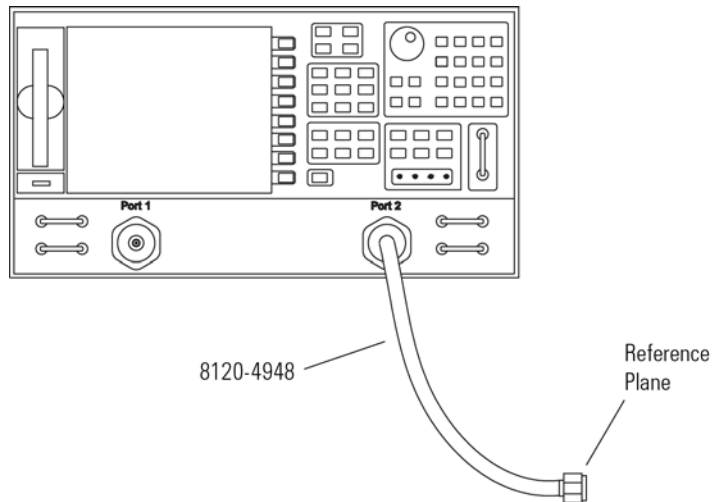


Figure 218 SMA Cable Connected to Port 2

- 13 Get the opposite sex of the Calibration Standards for the next step.
- 14 Perform Calibration for the **PORT 2** side of the Reference plane.
 - a Press the **reflection** screen key.
 - b Connect the open end of Calibration Standard to the available end of the **PORT 2** SMA cable.
 - c Select the **open** screen key under the **Reverse** group.
 - d Wait until the VNA beeps indicating that it has completed the task.
 - e Connect short end of Calibration Standard to the available end of the **PORT 2** SMA cable.
 - f Select **short** screen key the **Reverse** group.
 - g Wait until the VNA beeps indicating that it has completed the task.
 - h Connect load end of Calibration Standard to the available end of the **PORT 2** SMA cable.
 - i Select the **loads** screen key the **Reverse** group.
 - j Press **broadband** screen key selection.
 - k Wait until the VNA beeps indicating that it has completed the task.
 - l Press the **done loads** screen key.
 - m You have just calibrated the other side of the reference plane.
- 15 Press **standards done** key.
- 16 Connect **PORT 2** SMA cable to the non-pincher side of PV Fixture.

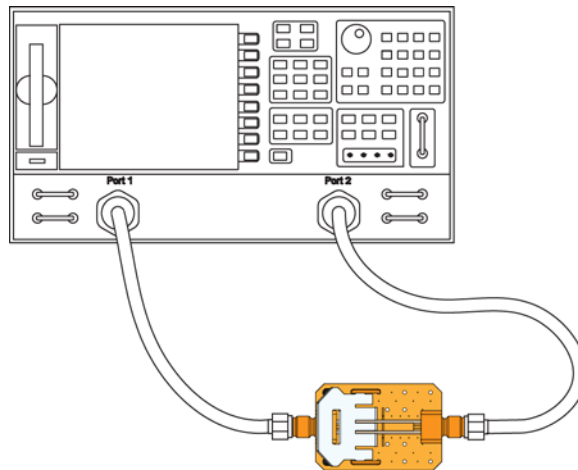


Figure 219 Forward and Reverse Setup

- 17 Press the **transmission** screen key.
- 18 Press the **do both fwd and reverse** screen key.
- 19 Wait until the VNA beeps four times indicating that it has completed the task.
- 20 Press the **isolation** screen key.
- 21 Press the **omit isolation** screen key.
- 22 Press **done 2 port cal** screen key.
- 23 Set the VNA's averaging to off.
- 24 Save the reference plane cal by pressing the **[save recall]** key then the **[save state]** key.
- 25 You may change name if you wish.
- 26 Press the **[scale reference]** key. Then set the scale to 1 dB per division and the reference position for 7 divisions.
- 27 Set reference value for 0 dB.
- 28 Press the **[measure]** key.
- 29 Press the **s21** screen key.
- 30 Ensure s21 response on screen is flat (about ± 0.1 dB) out to 10 GHz.

Measuring Vin Response

- 31 Position 1134A probe conveniently to make quality connections on the PV fixture.
- 32 Ensure resistors at the probe tip are reasonably straight and about 0.1 inches apart.

- 33 Connect probe tip under the PV fixture's pincher. Apply upward pressure to the clip to ensure a proper electrical connection. Place the probe's "+" side on center conductor and "-" side to ground as shown in the following figure.

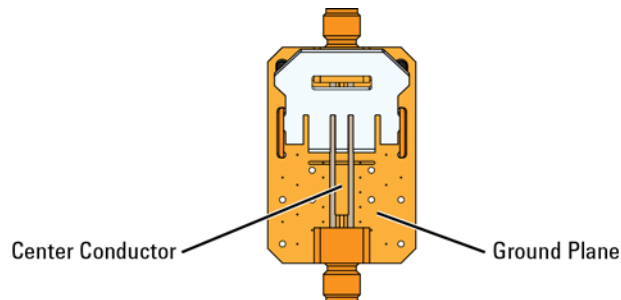


Figure 220 Probe Locations on PV Fixture

- 34 Press the **[Sweep Setup]** key on the VNA. Then press the **trigger menu** screen key. Select the **continuous** screen key.
- 35 The V_{in} waveform shown on screen should be similar to that shown in **Figure 221** on page 195.

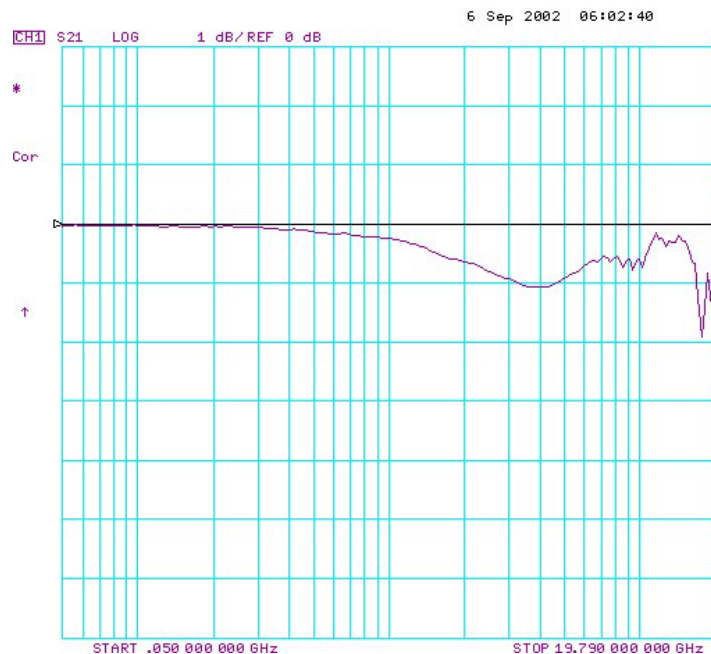


Figure 221 Typical V_{in} Waveform for an 1134A Probe

- 36 Select **[display]** key then **data->memory** screen key.
- 37 You have now saved V_{in} waveform into the VNA's memory for future use.

Measuring Vout Response

- 38 Disconnect the **PORT 2** cable from PV/DS test board and attach to probe output on the AutoProbe Adapter.
- 39 Connect the Calibration Standard load to PV/DS test board (non-pincher side).
- 40 Press **[scale reference]** key on the VNA.
- 41 Set reference value to -20 dB.
- 42 Hold probe in place as described previously.
- 43 The display on screen is V_{out} and it should be similar to that shown in **Figure 222** on page 196.

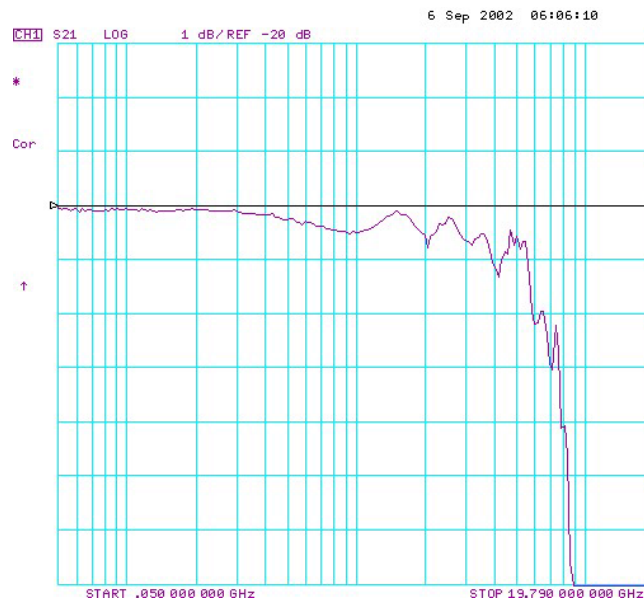


Figure 222 Typical V_{out} Waveform for an 1134A Probe

Displaying the Vout/Vin Response

- 44 Press the **[Display]** key.
- 45 Then select the **Data/Memory** screen key. You may need to adjust the **Reference Value**, located under the **Scale Ref** key, slightly to position the waveform at center screen. The waveform should be similar to that shown in **Figure 223** on page 197.

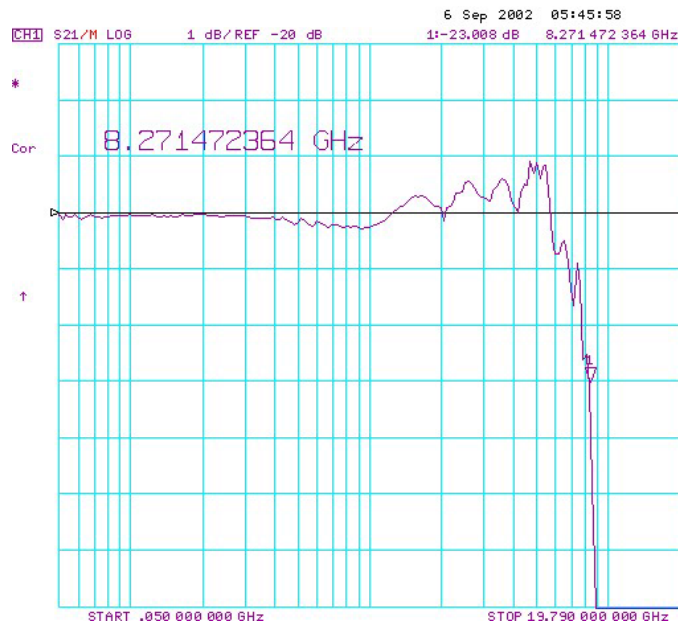


Figure 223 Typical Waveform for an 1134A Prob

- 46 Press marker key and position the marker to the first point that the signal is -3 dB below center screen.
- 47 Read marker frequency measurement and record it in the test record located later in this chapter.
- 48 The bandwidth test passes if the frequency measurement is greater than the probe's bandwidth limit.

Performance Test Record

Table 28 Performance Test Record

Model #:	Date:	Recommended next test date:	
Serial #:	Tested by:		
Probe Amplifier	Test Limits	Result	Pass/Fail
1130A	≥ 1.5 GHz		
1131A	≥ 3.5 GHz		
1132A	≥ 5 GHz		
1134A	≥ 7 GHz		

10 SPICE Models

SPICE Model for Differential Probe Heads	201
SPICE Model for Single-Ended Probe Heads	202
SPICE Deck and Measured/Modeled Data Matching	203
E2675B Differential Browser Probe Head	203
E2678A/B Differential Socket Tip Probe Head	204
E2677B Differential Solder-In Probe Head	206
E2676A Single-Ended Browser Probe Head	207
E2679A Single-Ended Solder-In Probe Head	209
N2851A QuickTip Head with N2849A QuickTip Tip	211

Input Impedance SPICE Models for InfiniiMax 1130 Series 3.5 GHz to 7 GHz Active Probes

This chapter contains SPICE models that can be used to predict the probe loading effects of the InfiniiMax active probes. Important points about these SPICE models are:

- SPICE models shown here are currently only for input impedance which allows modeling of the probe loading effects. Probe transfer function is generally flat to the specified BW. Transfer function SPICE models may be added later if demand is sufficient.
- These input impedance is a function of the probe head type only. The probe amp bandwidth (3.5 GHz 1131A, 5 GHz 1132A, or 7 GHz 1134A) does not have any effect on the input impedance of the probe heads.

The following five configurations are covered in this chapter:

- Differential Browser Probe Head (E2675B)
- Differential Socket Tip Probe Head (E2678A/B)
- Differential Solder-In Probe Head (E2677B) (Full BW 91 ohm resistors)
- Single-Ended Browser Probe Head (E2676A)
- Single-Ended Solder-In Probe Head (E2679A) (Full BW 91 ohm resistor)

If damped wire accessories or longer mid-BW resistors (for solder-in probe heads) are used, they can be modeled by adding an RLC model in front of the appropriate probe head model and zeroing out the damping resistor in the probe head model.

There is one SPICE schematic for the differential probe heads and one SPICE schematic for the single-ended probe heads. The schematics have parameterized R, L, and C values that are given in the SPICE deck for the specific probe head. Additionally, an input impedance plot is given that shows the matching of the measured data to the modeled data. Matching is generally very good up to the specified BW of the probe head with the 7 GHz probe amp.

SPICE Model for Differential Probe Heads

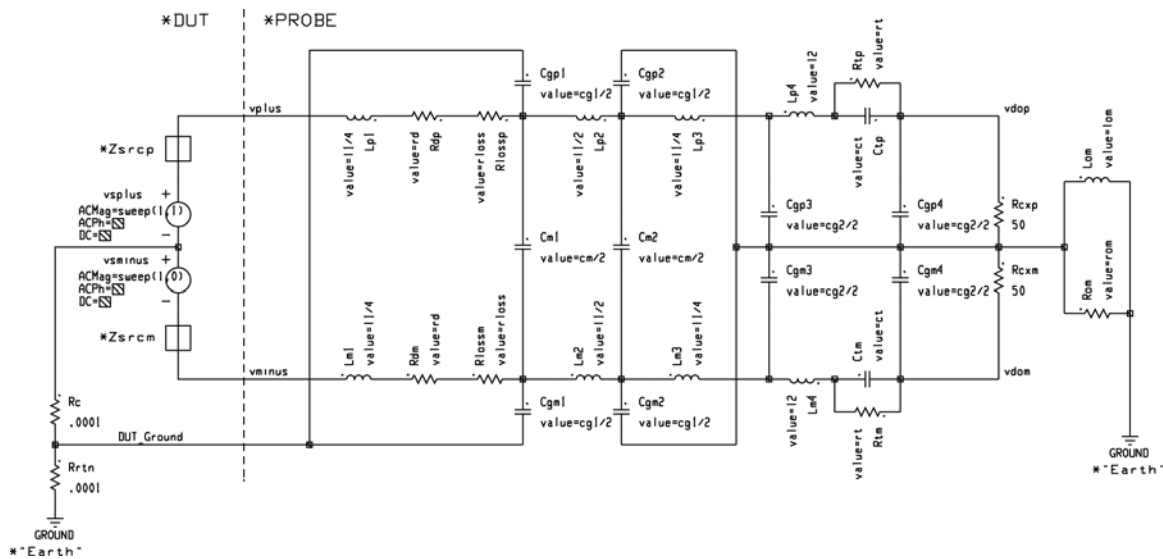


Figure 224 SPICE Model for Differential Probe Heads

Rrtn (Zrtn) is dependent on connection from DUT ground to “Earth” ground. Most likely modeled by a parallel RL similar to $R_{om} \parallel L_{om}$. Will have slight effect on single-ended input Z and no effect on differential input Z.

Cgp1 and Cgm1 represent C from probe tips to DUT ground near probe tips.

If using diff probe to probe single-ended signals:

- vplus connected to DUT signal
- vminus connected to DUT ground with means that $R_c = 0$ and $Z_{srcm} = 0$.
- Input impedance is defined to be $v_{plus}/i(v_{plus})$

If using diff probe to probe differential signals:

- R_c (or Z_c) will depend on the DUT circuit
- vplus connected to DUT plus signal
- vminus connected to DUT minus signal.
- Input impedance is defined to be $(v_{plus}/v_{minus}) / i(v_{plus})$

SPICE Model for Single-Ended Probe Heads

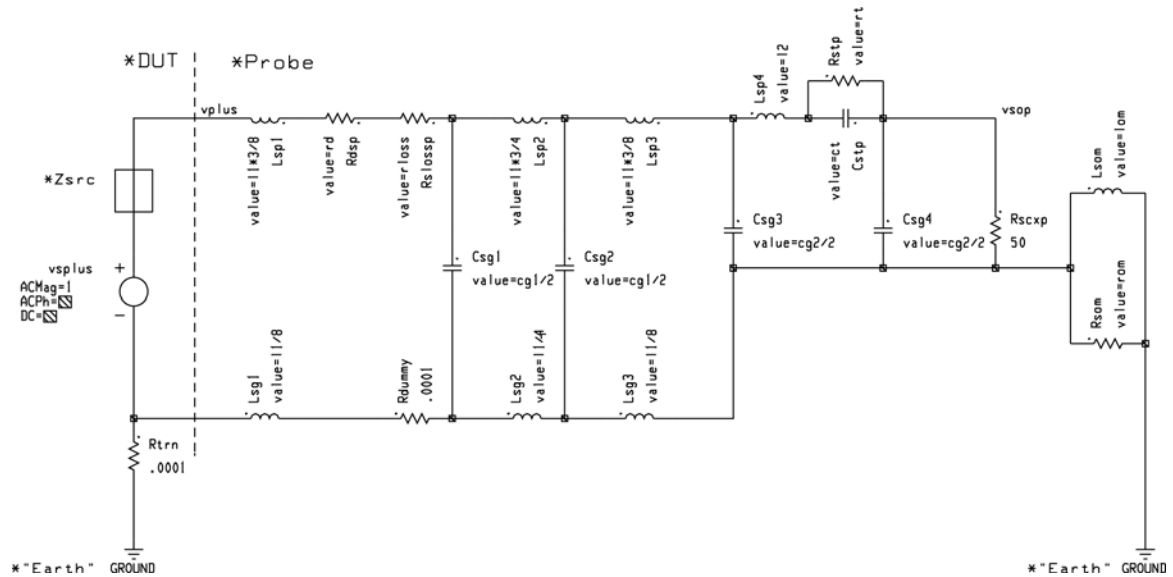


Figure 225 SPICE Model for Single-Ended Probe Heads

R_{trn} (Z_{trn}) is dependent on connection from DUT ground to “Earth” ground. Most likely modeled by a parallel RL similar to $R_{om} \parallel L_{om}$. Will have slight effect on input Z .

Probe tip C to DUT ground lumped into C_{sg1} since there is no damping R in ground path.

Input impedance is defined as $v_{plus}/i(v_{splus})$.


SPICE Deck and Measured/Modeled Data Matching

E2675B Differential Browser Probe Head



```
.param rd=91 rt=25k rloss=10 rom=100 l1=6.5n l2=2n lom=2u cm=80f cg1=120f
cg2=320f ct=200f
```

```
vsminus %164 %vminus ACMag=sweep(1,0)
vsplus %vplus %164 ACMag=sweep(1,1)
Cgp1 %DUT_Ground %99 value=cg1/2
Cgp2 %122 %85 value=cg1/2
Cgm2 %84 %122 value=cg1/2
Cgm1 %95 %DUT_Ground value=cg1/2
Cm1 %99 %95 value=cm/2
Cgp3 %86 %122 value=cg2/2
Cm2 %85 %84 value=cm/2
Cgm4 %122 %vdom value=cg2/2
Cgm3 %122 %87 value=cg2/2
Cgp4 %vdop %122 value=cg2/2
Ctp %vdop %88 value=ct
Ctm %89 %vdom value=ct
Lm3 %84 %87 value=l1/4
Lp3 %86 %85 value=l1/4
Lm4 %89 %87 value=l2
Lp4 %86 %88 value=l2
Lp1 %118 %vplus value=l1/4
Lp2 %85 %99 value=l1/2
Lm1 %vminus %117 value=l1/4
Lm2 %95 %84 value=l1/2
Lom %122 %0 value=lom
Rrtn %DUT_Ground %0 .0001
Rc %164 %DUT_Ground .0001
Rlossp %99 %159 value=rloss
Rlossm %160 %95 value=rloss
Rdp %159 %118 value=rd
Rdm %117 %160 value=rd
Rtm %vdom %89 value=rt
Rtp %88 %vdop value=rt
Rcxp %vdop %122 50
Rcxm %122 %vdom 50
Rom %122 %0 value=rom
```

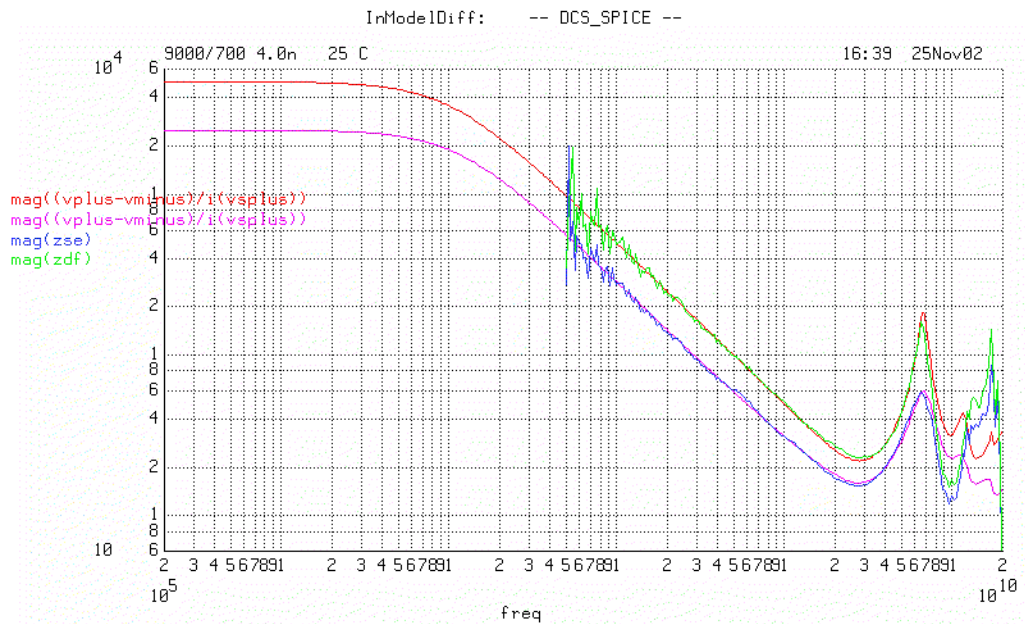

E2678A/B Differential Socket Tip Probe Head




```
.param rd=82 rt=25k rloss=25 rom=200 l1=4n l2=2n lom=2u cm=117f cg1=120f
cg2=320f ct=200f
```

```
vsminus %164 %vminus ACMag=sweep(1,0)
vsplus %vplus %164 ACMag=sweep(1,1)
Cgp1 %DUT_Ground %99 value=cg1/2
Cgp2 %122 %85 value=cg1/2
Cgm2 %84 %122 value=cg1/2
Cgm1 %95 %DUT_Ground value=cg1/2
Cm1 %99 %95 value=cm/2
Cgp3 %86 %122 value=cg2/2
Cm2 %85 %84 value=cm/2
Cgm4 %122 %vdom value=cg2/2
Cgm3 %122 %87 value=cg2/2
Cgp4 %vdop %122 value=cg2/2
Ctp %vdop %88 value=ct
Ctm %89 %vdom value=ct
```

```

Lm3 %84 %87 value=l1/4
Lp3 %86 %85 value=l1/4
Lm4 %89 %87 value=l2
Lp4 %86 %88 value=l2
Lp1 %118 %vplus value=l1/4
Lp2 %85 %99 value=l1/2
Lm1 %vminus %117 value=l1/4
Lm2 %95 %84 value=l1/2
Lom %122 %0 value=lom
Rrtn %DUT_Ground %0 .0001
Rc %164 %DUT_Ground .0001
Rlossp %99 %159 value=rloss
Rlossm %160 %95 value=rloss
Rdp %159 %118 value=rd
Rdm %117 %160 value=rd
Rtm %vdom %89 value=rt
Rtp %88 %vdop value=rt
Rcxp %vdop %122 50
Rcxm %122 %vdom 50
Rom %122 %0 value=rom

```

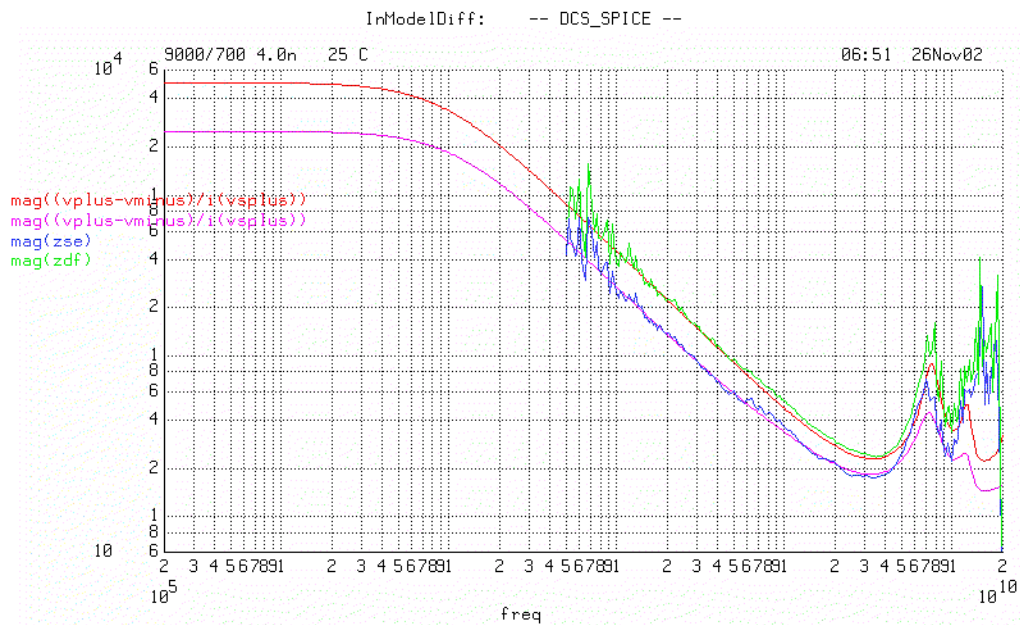


E2677B Differential Solder-In Probe Head



Data for full bandwidth with 91Ω resistor.

```
.param rd=91 rloss=18 rt=25k rom=250 l1=4n l2=2n lom=2u cm=100f cg1=80f
cg2=180f ct=200f
```

```
vsminus %164 %vminus ACMag=sweep(1,0)
vsplus %vplus %164 ACMag=sweep(1,1)
Cgp1 %DUT_Ground %99 value=cg1/2
Cgp2 %122 %85 value=cg1/2
Cgm2 %84 %122 value=cg1/2
Cgm1 %95 %DUT_Ground value=cg1/2
Cm1 %99 %95 value=cm/2
Cgp3 %86 %122 value=cg2/2
Cm2 %85 %84 value=cm/2
Cgm4 %122 %vdom value=cg2/2
Cgm3 %122 %87 value=cg2/2
Cgp4 %vdop %122 value=cg2/2
Ctp %vdop %88 value=ct
Ctm %89 %vdom value=ct
Lm3 %84 %87 value=l1/4
Lp3 %86 %85 value=l1/4
Lm4 %89 %87 value=l2
Lp4 %86 %88 value=l2
Lp1 %118 %vplus value=l1/4
Lp2 %85 %99 value=l1/2
Lm1 %vminus %117 value=l1/4
Lm2 %95 %84 value=l1/2
Lom %122 %0 value=lom
Rrtn %DUT_Ground %0 .0001
Rc %164 %DUT_Ground .0001
Rlossp %99 %159 value=rloss
Rlossm %160 %95 value=rloss
Rdp %159 %118 value=rd
Rdm %117 %160 value=rd
Rtm %vdom %89 value=rt
Rtp %88 %vdop value=rt
Rcxp %vdop %122 50
Rcxm %122 %vdom 50
Rom %122 %0 value=rom
```

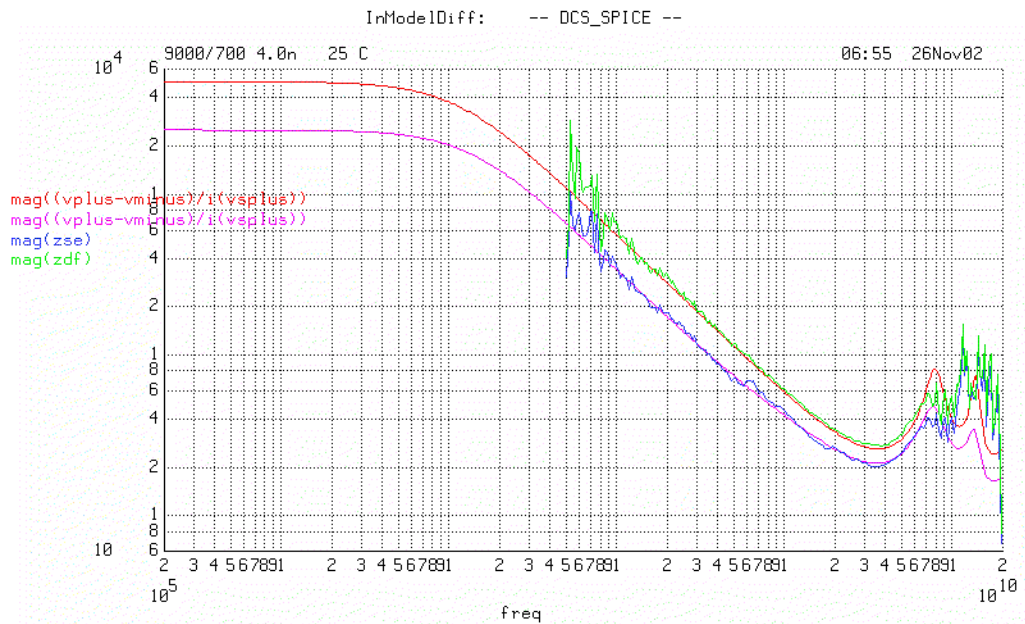

E2676A Single-Ended Browser Probe Head




```
.param rd=82 rt=25k rom=100 rloss=25 l1=3.5n l2=.5n lom=2u cg1=270f cg2=370f
ct=200f
```

```
.ac dec 77 200k 19.7g
.options map
vsplus %130 %165 ACMag=1
Csg4 %vsop %134 value=cg2/2
Cstp %vsop %131 value=ct
Csg2 %138 %139 value=cg1/2
Csg3 %132 %134 value=cg2/2
Csg1 %137 %136 value=cg1/2
Lsp1 %141 %130 value=l1*3/8
Lsp2 %138 %137 value=l1*3/4
Lsg1 %165 %164 value=l1/8
Lsg2 %136 %139 value=l1/4
Lsom %134 %0 value=lom
Lsp4 %132 %131 value=l2
```

```

Lsp3 %132 %138 value=l1*3/8
Lsg3 %139 %134 value=l1/8
Rtrn %165 %0 .0001
Rdummy %164 %136 .0001
Rslossp %137 %161 value=rloss
Rdsp %161 %141 value=rd
Rstp %131 %vsop value=rt
Rscxp %vsop %134 50
Rsom %134 %0 value=rom

```

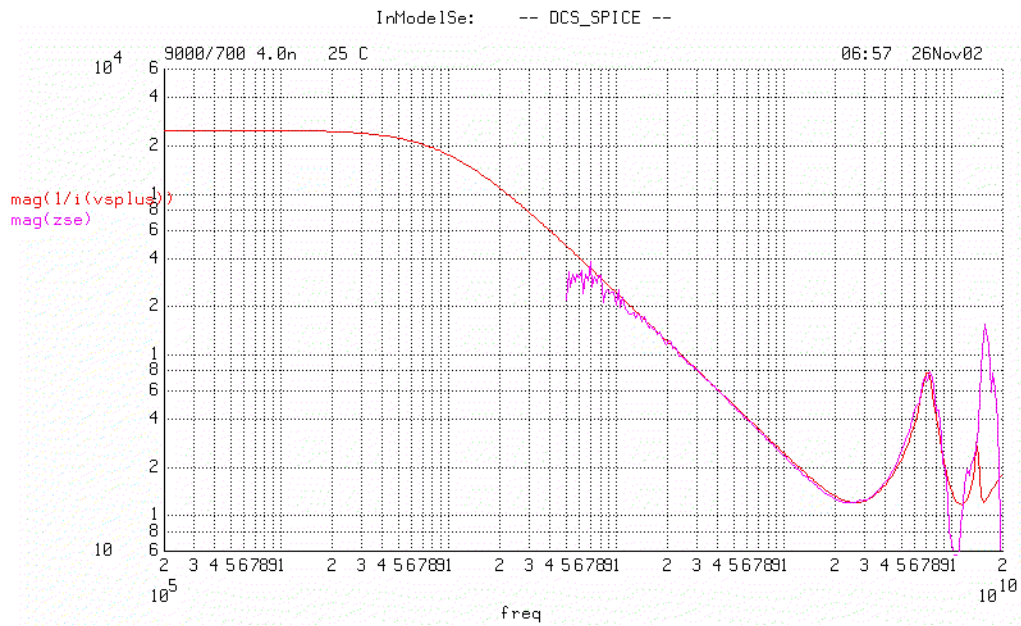


E2679A Single-Ended Solder-In Probe Head



Data for full bandwidth with 91Ω resistor.

```
.param rd=91 rt=25k rom=250 rloss=25 l1=3n l2=.5n lom=2u cg1=150f cg2=300f
ct=200f
```

```
.ac dec 77 200k 19.7g
.options map
vsplus %130 %165 ACMag=1
Csg4 %vsop %134 value=cg2/2
Cstp %vsop %131 value=ct
Csg2 %138 %139 value=cg1/2
Csg3 %132 %134 value=cg2/2
Csg1 %137 %136 value=cg1/2
Lsp1 %141 %130 value=l1*3/8
Lsp2 %138 %137 value=l1*3/4
Lsg1 %165 %164 value=l1/8
Lsg2 %136 %139 value=l1/4
Lsom %134 %0 value=lom
Lsp4 %132 %131 value=l2
Lsp3 %132 %138 value=l1*3/8
Lsg3 %139 %134 value=l1/8
Rtrn %165 %0 .0001
Rdummy %164 %136 .0001
Rslossp %137 %161 value=rloss
Rdsp %161 %141 value=rd
Rstp %131 %vsop value=rt
Rscxp %vsop %134 50
Rsom %134 %0 value=rom
```

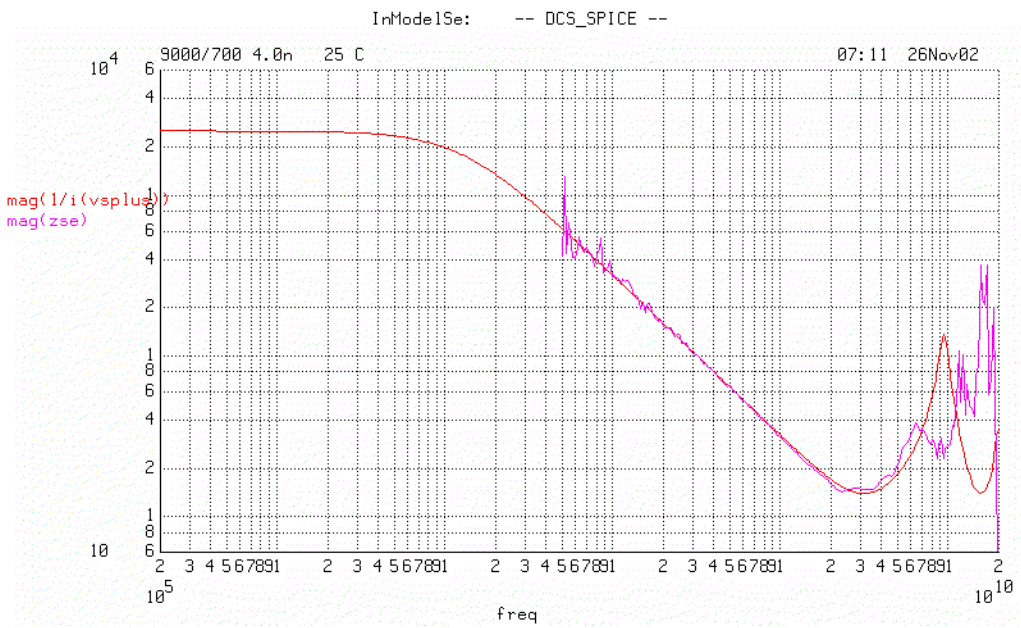

N2851A QuickTip Head with N2849A QuickTip Tip

The following input-impedance SPICE subcircuit data is for the N2851A QuickTip probe head with N2849A QuickTip tip. The data models all modes of input impedance: differential, common, and A or B. The probe is vertical orientated with both ground wires connected to the DUT ground.

SPICE subcircuit data

```
* Input impedance SPICE subckt for N2849A_N2851A QuickTip and QuickTip probe
head.
* Vertical orientation with both ground wires connected to DUT ground
* Models all modes of input impedance: Diff, Common, and A or B
.subckt N2849A_N2851A 1 2
r1 1 3 1e8
r2 2 3 1e8
r9 3 0 .5e8
r_srlc2 5 7 201.895
l_srlc2 7 8 4.24047n
c_srlc2 8 6 101.955f
r_srlc3 4 9 190.712
l_srlc3 9 10 8.8192n
c_srlc3 10 6 7.86088f
r_srlc1 4 11 325.561
l_srlc1 11 12 2.89997n
c_srlc1 12 6 315.986f
r3 4 13 260
c1 13 6 200f
r5 13 6 50k
r8 6 0 1e-6
r4 14 16 130
r_srlc4 14 18 175.375
l_srlc4 18 19 13.431n
c_srlc4 19 17 485.278f
r_srlc5 14 20 13.8395
l_srlc5 20 21 3.28155n
c_srlc5 21 17 15.7972f
r_srlc6 15 22 302.872
l_srlc6 22 23 3.28881n
c_srlc6 23 17 79.906f
r6 16 17 25k
c2 16 17 200f
r7 17 0 1e-6
e1 5 0 4 0 -1
e2 4 0 1 2 1
e3 14 0 3 0 2
e4 15 0 14 0 -1
g1 1 2 6 0 1e6
g2 1 0 17 0 1e6
g3 2 0 17 0 1e6
.ends
```


11 Replacement Parts

E2675B Differential Browser Probe Head	214
E2677B Differential Solder-In Probe Head	214
E2678A/B Differential Socketed Probe Head	215
E2679A Single-Ended Solder-in Probe Head	215
Other Accessories	216

E2675B Differential Browser Probe Head

Table 29 E2658B Kit

Description	Qty Supplied
Resistive tip (blue), 91 Ω	20
Ergonomic handle	1

E2677B Differential Solder-In Probe Head

Table 30 E2670B Kit

Description	Qty Supplied
91 Ω resistor for full bandwidth	20
150 Ω resistor for medium bandwidth	10
91 Ω resistor template	1
150 Ω resistor template	1

Table 31 Resistors

Description	Qty	Order From Vendor	Orderable Part Number
91 Ω resistor	1	BREL International	RMB16-910-JB
150 Ω resistor	1	BREL International	RMB16A-151-JB

E2678A/B Differential Socketed Probe Head

Table 32 E2671B Kit

Description	Qty Supplied
160 Ω damped wire accessory	6
82 Ω resistor for full bandwidth	48
Socket for 25 mil (25/1000 inch) square pins, female on both ends	4
25 mil female socket w/20 mil round male pin on other end	4
Heatshrink socket accessory	4
Header adapter, 91 Ω	2
82 Ω resistor template	1

Table 33 Resistors

Description	Qty	Order From Vendor	Orderable Part Number
82 Ω resistor	1	Vishay	MBA0204AC8209GC100

E2679A Single-Ended Solder-in Probe Head

Table 34 Resistors

Description	Qty	Order From Vendor	Orderable Part Number
0 Ω resistor	1	BREL International	RMB16-000-JB
91 Ω resistor	1	BREL International	RMB16-910-JB

Other Accessories

Table 35 Accessories

Description	Vendor	Part Number	Qty
Probe deskew and performance verification kit	Keysight	E2655C	1
160Ω damped wire accessory (01130-21302 34 each)	Keysight	E5381-82103	1
Header adapter kit for socketed differential probe head (01130-63201 10 each)	Keysight	01131-68703	1
Coupling tag for N5450B extreme temperature cable extension	Keysight	N5450-21201	1
SMA coaxial dc block	Inmet	#8037	1
SMA 6 dB coaxial attenuator	Inmet	#18AH-6	1
SMA 12 dB coaxial attenuator	Inmet	#18AH-12	1
SMA adjustable delay	ATM Microwave	#P1907	1
GPO-F to GPO-F adaptor for N5380B	Corning Gilbert Rosenberger	#A1A1-0001-03 #19K 109-K00 E4	2

Index

A

accessories, 11
 damped wire, 60
 supplied, 10
 altitude, 80
 available probe heads, 9

B

browser, differential, 43
 browser, single-ended, 54

C

calibration
 failure, 32
 probe, 67
 calibration, probe with
 oscilloscope, 67
 CAT definitions, 81
 channel identification rings, 10
 characteristics, 80

D

damped wire accessory, 60
 definitions, CAT, 81
 differential probe head, 62
 dimensions, 80
 probe amp, 82

E

E2668A Single-Ended
 Connectivity Kit, 20
 E2669A Differential
 Connectivity Kit, 21
 E2675B Differential Browser
 Probe Head, 43
 E2676A Single-Ended Browser
 Probe Head, 54
 E2677B Differential Solder-In
 Probe Head, 38, 56
 E2678B Differential Socketed
 Probe Head, 40, 60, 62
 E2679A Single-Ended
 Solder-In Probe Head, 53,
 58
 environmental conditions, 80

ESD tolerance, 79
 extreme temp, 23

F

full bandwidth probe, 38, 40,
 53

G

general characteristics, 80

H

header adapter, 62
 humidity, 80

I

Infiniium oscilloscope, 10
 InfiniiVision oscilloscope, 10
 inspecting, 10

K

Keysight Technologies,
 contacting, 33

M

medium bandwidth, 56, 58

N

N2849A QuickTip, 50
 N2851A QuickTip, 49
 N2880A InfiniiMax In-Line
 Attenuator, 24
 N2881A InfiniiMax DC Blocking
 Caps, 28
 N5380B, 46
 N5450B cable, 23

O

offset, 16
 operating environment, 80
 oscilloscope
 compatible, 10
 Infiniium, 10
 InfiniiVision, 10

P

performance verification, 189
 pollution degree, 80
 power requirements, 80
 probe
 dimensions, 82
 handling, 12
 inspecting, 10
 offset, 16
 service, 33
 probe amplifier, 14
 probe cable, 13
 probe calibration, 67
 probe handling, 12
 probe heads
 disconnecting, 12

Q

QuickTip, 49

R

returning for service, 33

S

safety, 29
 Safety Considerations, 29
 safety warnings, 29
 slew rate requirements, 18
 slew rates, 18
 socketed differential probe, 40,
 60
 solder-in differential, 38
 solder-in differential probe, 56
 solder-in single-ended
 probe, 53, 58
 specifications, 77, 199

T

temperature, 80
 temperature chamber, 23
 temperature ranges, 23

V

velcro dots, 15

Index

W

WEEE compliance, [81](#)
weight, [80](#)